



XRS-5 Transducer

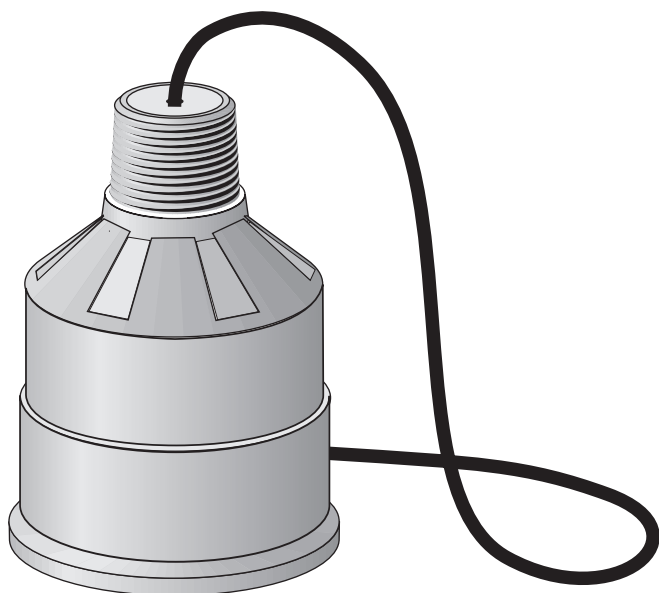


Instruction Manual

PL-590


September 1999

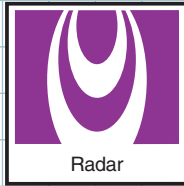




At Milltronics, we endeavour to design equipment that is simple to use and reliable in its operation, with the aim of satisfying our customers' needs.

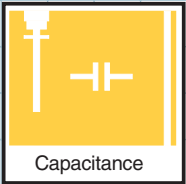

Milltronics has been designing and manufacturing electronics based process measurement equipment since 1954. Our fields of expertise include continuous and point level measurement, weighing and feeding systems and motion sensing. Technologies include ultrasonic, capacitance and microwave radar.

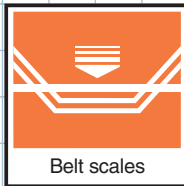

Milltronics sells and markets world wide through subsidiaries, distributors and representatives. Through continuous improvement, we are striving to provide our customers with first rate sales information, engineering assistance and after sales support.

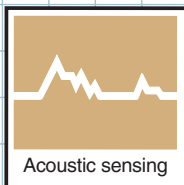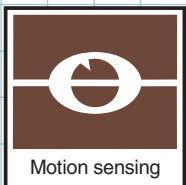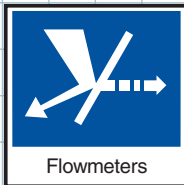

For more details on our products and services, please contact us and we will provide you with a listing of the offices or representatives nearest you.

Table of Contents

Specifications	5
About the Transducer	7
General Guidelines	8
Installation.....	9
Outline and Dimensions	9
Mounting	11
Recommendations	11
Applications	13
Open Channel Meter	13
Standpipes and Stilling Wells	14
Water / Wastewater.....	15
Transducer Placement	16
Locations.....	16
Interconnection	19
Direct Connection.....	19
Coaxial Connection	20
2-Wire Extension (for EnviroRanger ERS 500 only)	20
Maintenance	20
Installation Diagram	21

Specifications

Process Application:

- liquids and slurries
- Measurement Range ○ 0.3 to 5m (1 to 15 ft) typical
(may depend on application variables)
- Vessel Pressure ○ vented to atmosphere

Operation:

- Beam Angle ○ 10°
- Frequency ○ 43 KHz
- Temperature Sensor ○ internal
- Supply Source ○ transducer shall only be supplied by Milltronics certified controller

Environmental:

- Location ○ indoor / outdoor
- Ambient temperatures ○ -20 to 65 °C (-4 to 149 °F)
- Altitude ○ 2000 m maximum
- Pollution degree ○ 4

Construction:

- Housing ○ Kynar Flex^{®1} body and Hypalon^{®2} face
- Mounting ○ 1" NPT conduit connection

Cable:

- 2 wire shielded / twisted, 0.5 mm² (18 AWG) PVC jacket

Ingress protection:

- IP-68

Weight³:

- 1.2 Kg (2.6 lb)

Options:

- factory flanged to suit ANSI , DIN or JIS standard
- split flange (field mount) to suit ANSI, DIN or JIS standard
- submergence shield (flooding applications)

Cabling (maximum run):

- 365 m (1200 ft) using RG-62 A/U coaxial cable
- 365 m (1200 ft) using 2-wire twisted pair / braided and foil shielded 20 AWG (0.5 mm²), PVC jacket (EnviroRanger ERS 500 only)

Approvals:

- CE⁴, CSA, FM, CENELEC, ATEX, see device nameplate

¹ Kynar Flex[®] is registered trade mark of ELF Atochem.

² Hypalon[®] is a registered trademark of Du Pont

³ approximate weight of transducer with standard cable length


⁴ EMC performance available upon request

About the Transducer

The Echomax XRS-5 transducer works with Milltronics transceivers and provides the ultrasonic pulse and echo reception that these devices require.

The transducer converts electrical pulses provided by the transceiver to ultrasonic pulses used for measurement and then converts the ultrasonic echoes back to an electrical signal. This signal is interpreted by the Milltronics transceiver using the patented Sonic Intelligence™ algorithms. The ultrasonic pulse reduces in power by 3dB in a 10° cone from the transducer face. It is important to keep objects out of this cone to reduce the chance of false echos being recorded.

The XRS-5 transducer incorporates an integral temperature sensor that reports the ambient temperature to the transceiver. The connection is transparent in that both the ultrasonic and temperature components of the transducer use the same leads. This ensures that the Milltronics transceiver can automatically compensate the speed of sound constant for varying temperatures.

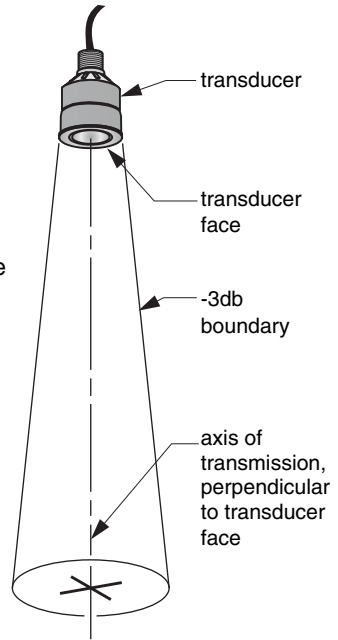

General Guidelines

The equipment may be used in all hazardous zones with all gases with temperature classes T1, T2, T3, T4, T5 and T6. The equipment is only certified for use in ambient temperatures in the range of -20°C to +65°C and should not be used outside this range.

- Installation shall be carried out in accordance with the applicable code of practice by suitably trained personnel.
- The apparatus shall only be supplied from a circuit containing a suitably-rated fuse having a breaking capacity of 4000A. This fuse is included in Milltronics' transceivers.
- Repair of this equipment shall be carried out in accordance with the applicable code of practice.
- The certification of this equipment relies on the following materials used in its construction:





Enclosure: Kynar Flex 2800-02 (former designation 2820) /
Chlorosulfonated polyethylene / Nitrile / Ethylene propylene
/ Chloroprene

Encapsulant: LA-9823-76

- Manual override can be accomplished by using the disconnect switch provided in the building installation of the associated controller.

Installation

Outline and Dimensions

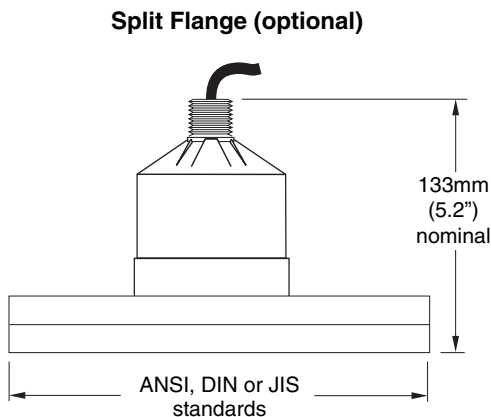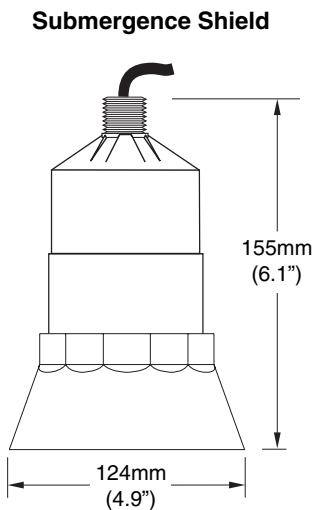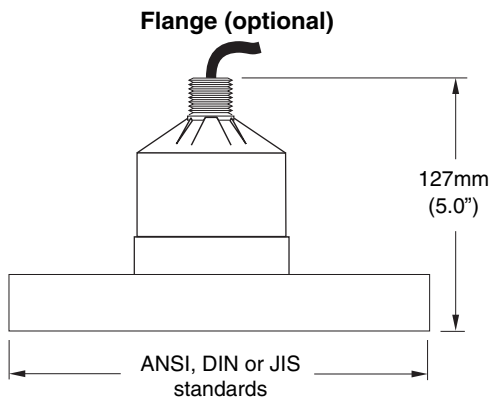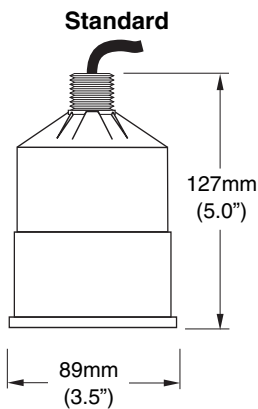


Refer to Milltronics
instruction manual PL-530.

Mounting


Recommendations

- Mount the transducer so that it is *above the maximum material level by more than the blanking value* to ensure that accurate results are achieved. Refer to the associated transceiver manual for information on setting the blanking value.
- The transducer must be mounted so that the axis of transmission is *perpendicular to the liquid's surface*.
- *Do not over tighten mounting.* Hand tightening of the mounting hardware is sufficient.
- Consider the optional *temperature sensor* when mounting the transducer.

Suspended Conduit

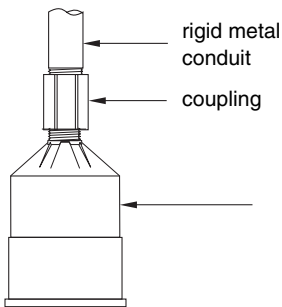


Bracket

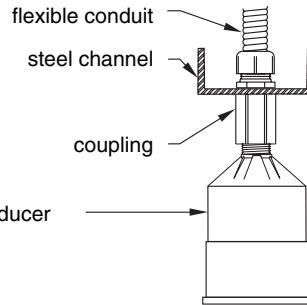


Flexible conduit transducer should not be subjected to wind, vibration or jarring.

Submersible

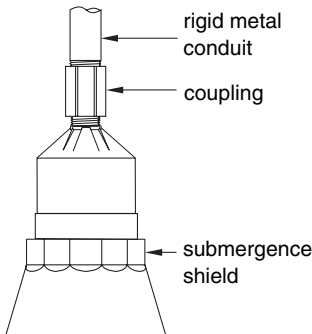


Submersible transducer, used in applications where flooding is possible.

Plywood

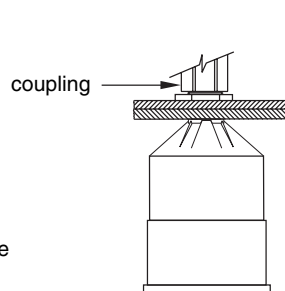


Plywood mounting provides excellent isolation, but must be rigid enough to avoid flexing if subjected to loading.

Blind Flange

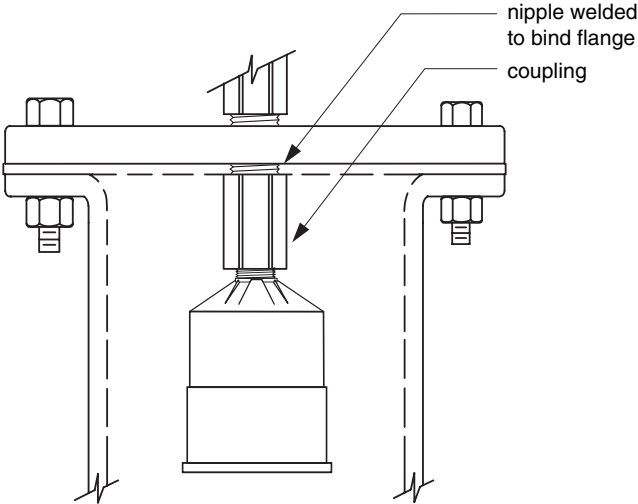

Face Flange

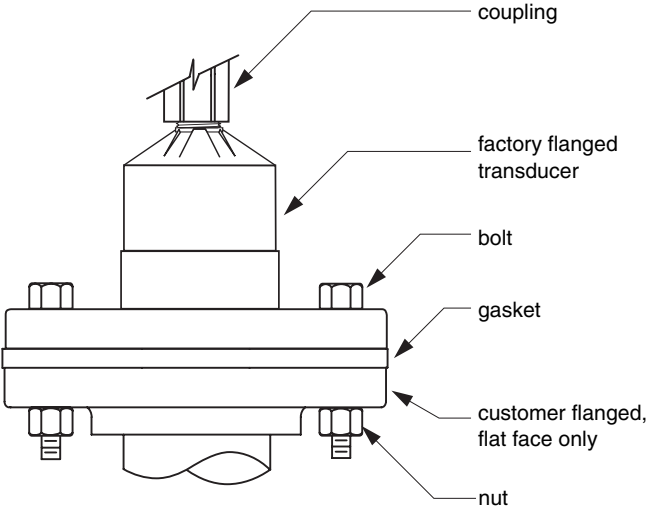


Applications

Notes:

- The transducer is to be used only in the manner outlined in this instruction manual.
- This transducer requires no maintenance, and is recommended for use with liquids only.

Open Channel Meter

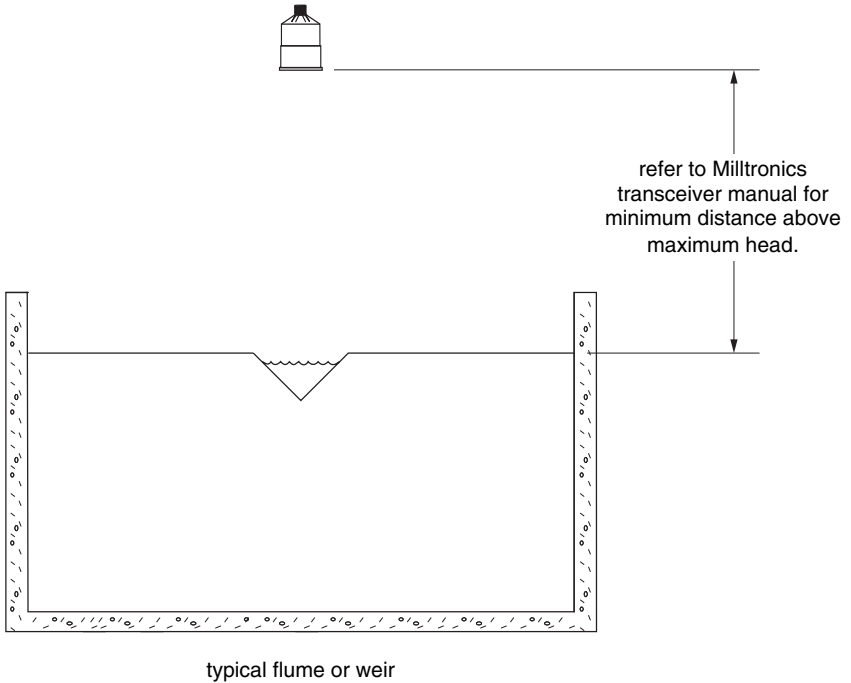


Refer to OCM manufacturer specification for proper point of head measurement.

The use of an external temperature sensor provides better temperature tracking in applications where the temperature can change quickly.


Standpipes and Stilling Wells

In many applications, access must be made via a standpipe. In such cases, Milltronics can provide factory flanged transducers or split flange kit that will readily mate to the flanged standpipe. Another option is to hang the transducer from a blind flange.


The standpipe length should be as short and the diameter as large as possible. As a rule of thumb, the -3 dB cone of the sound beam should not intersect the standpipe wall in applications opening into a vessel or larger area. Otherwise, additional blanking will be required to compensate for the interference zone created by the opening.

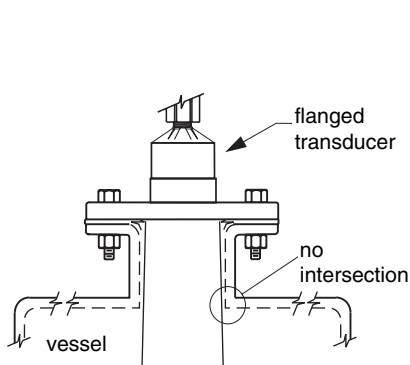


no additional blanking required

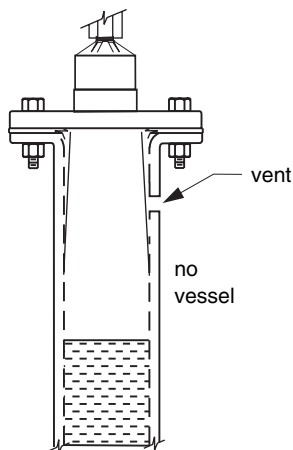

no additional blanking required

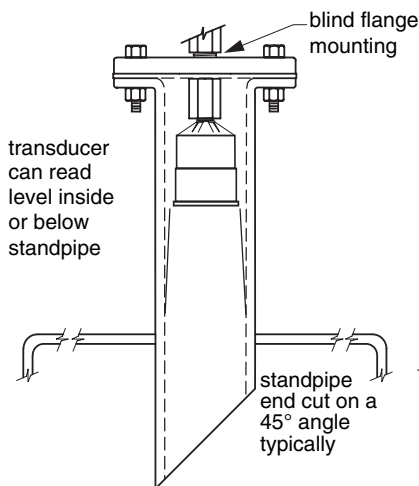


no additional blanking required

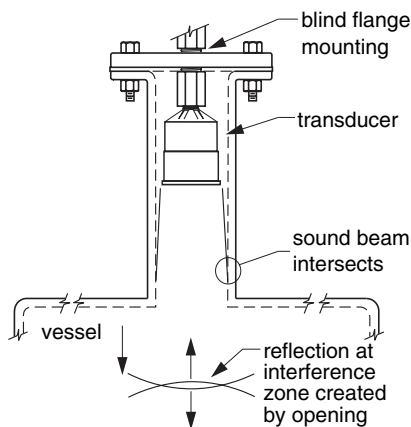


near blanking extension of 150 mm (6") past end of standpipe may be required.

Water / Wastewater


Differential Level

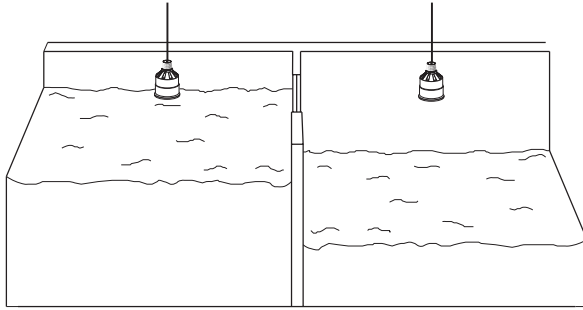

Pump Control

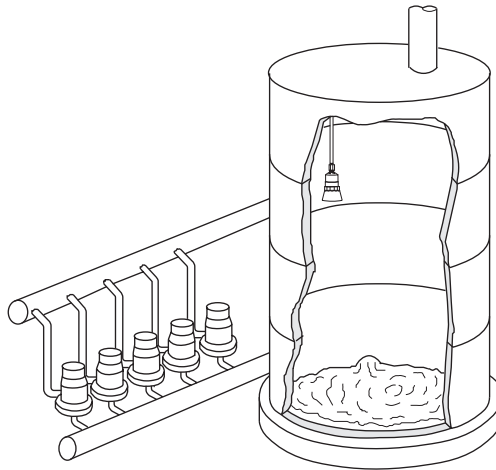


Sewage Lift

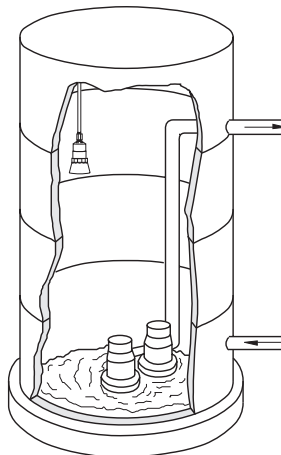

Transducer Placement

The following graphic shows the best placement of the XRS-5 transducer.

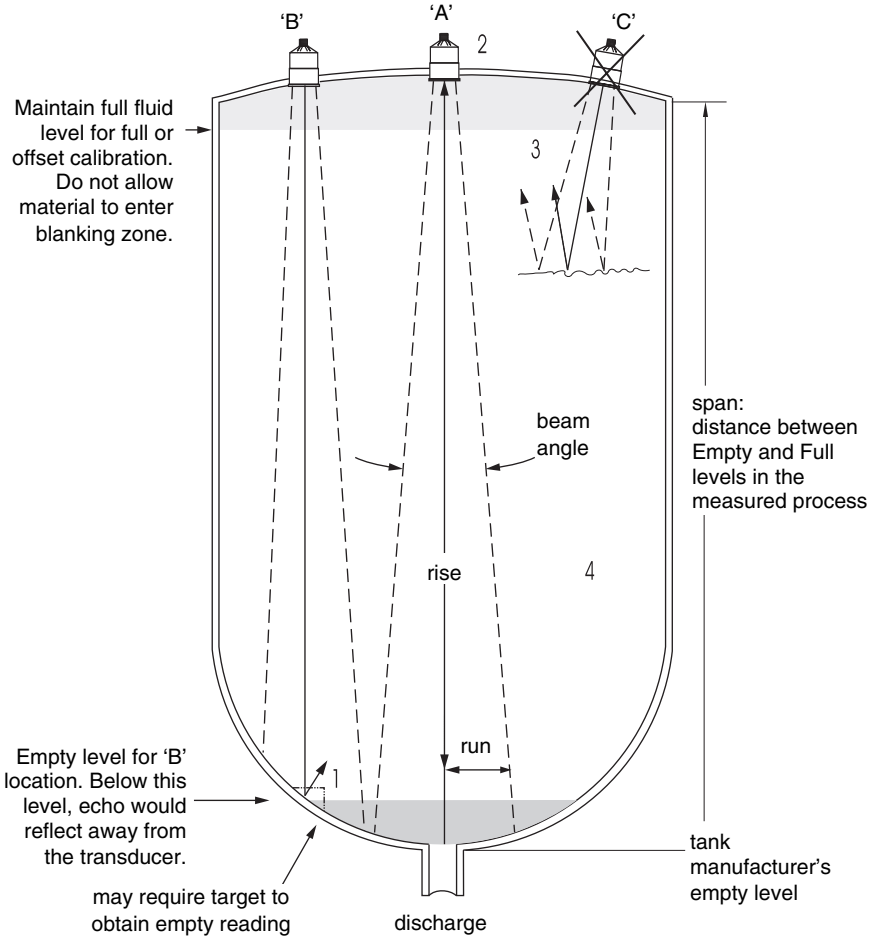


Locations

- A. **Primary location.** This is the preferred location and should be used whenever possible. The centre of the tank generally gives the most reliable readings because there are fewer obstructions to provide false echos.
- B. **Alternate location.** This location is used if the centre of the tank is already in use or if the tank roof is too weak to hold the transducer safely.
- C. **Poor location.** This is a poor installation location. The echos are shown reflecting away from the transducer face.

Notes

1. **Beam should not detect bin bottom.**

If this occurs, use range extension parameters (on transceivers where available) to omit false echoes. The XRS-5 transducer operates with a beam angle of 10° and has a rise:run ratio of approximately 12:1. This means that for every 1m (3.3') of tank height, the transducer projects a circular area over the material surface with a radius of 83mm (32.7"). In most tanks the transducer should be centred as much as possible (without interference from inlet) for optimum reading range.

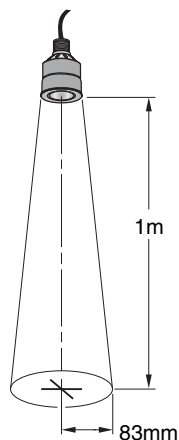

2. **Sound beam must be perpendicular to liquid surface.**

When mounting the standpipe and flange you must ensure that the transducer face will be parallel with the liquid's surface.

3. **Echo has missed an improperly levelled transducer.**

As 2, ensure that the standpipe and flange are mounted to set the transducer face level with the measured liquid.

4. **Calibrate under normal conditions.**

When performing an empty or full calibration, the tank must contain its normal vapour and be at its normal temperature.

Note:

Installation shall only be performed by qualified personnel and in accordance with local governing regulations.

Dos and Don'ts


For best results follow these installation rules:

- Do not route cable openly, instead run cable separately in a grounded metal conduit to protect it from ambient electrical noise.
- Seal all thread connections to prevent the ingress of moisture.
- Do not run cable near high voltage or current runs, contactors or SCR control drives.

In all of the following examples the terminal blocks on the transceiver are described in the transceiver manual.

Direct Connection


Connect the transducer directly to the Milltronics transceiver via the 2 conductor shielded cable.

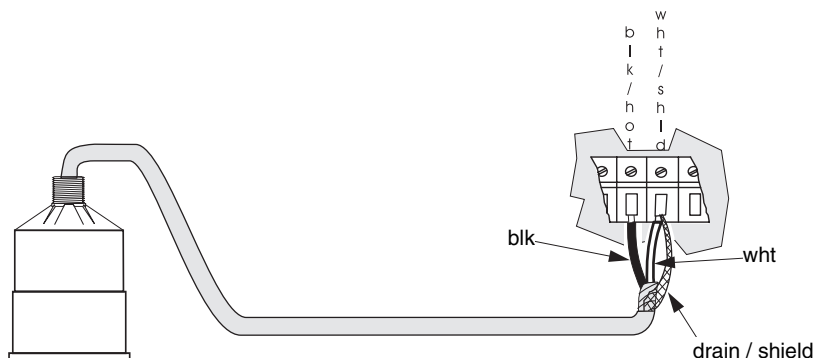**Note:**

When connecting to an EnviroRanger ERS 500, the white, black, and shield wires are all connected separately. Do not tie the white and shield wires together

Coaxial Connection


Connect the transducer to the Milltronics transceiver via a junction box and RG-62 A/U coaxial cable. This setup is effective for combined runs up to 365m (1200').

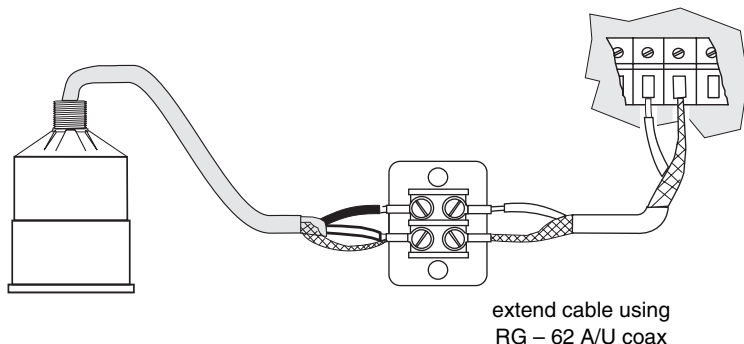

Note:

When connecting to an EnviroRanger ERS 500, do NOT use coaxial cable, see diagram below for proper procedure.


2-Wire Extension (for EnviroRanger ERS 500 only)

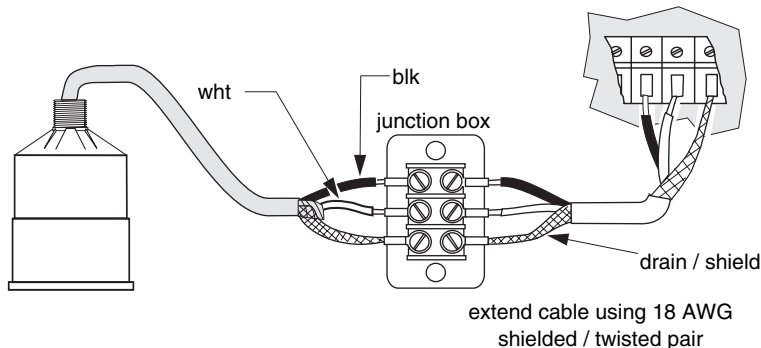

Maintenance

The XRS-5 requires no special maintenance.

Installation Diagram

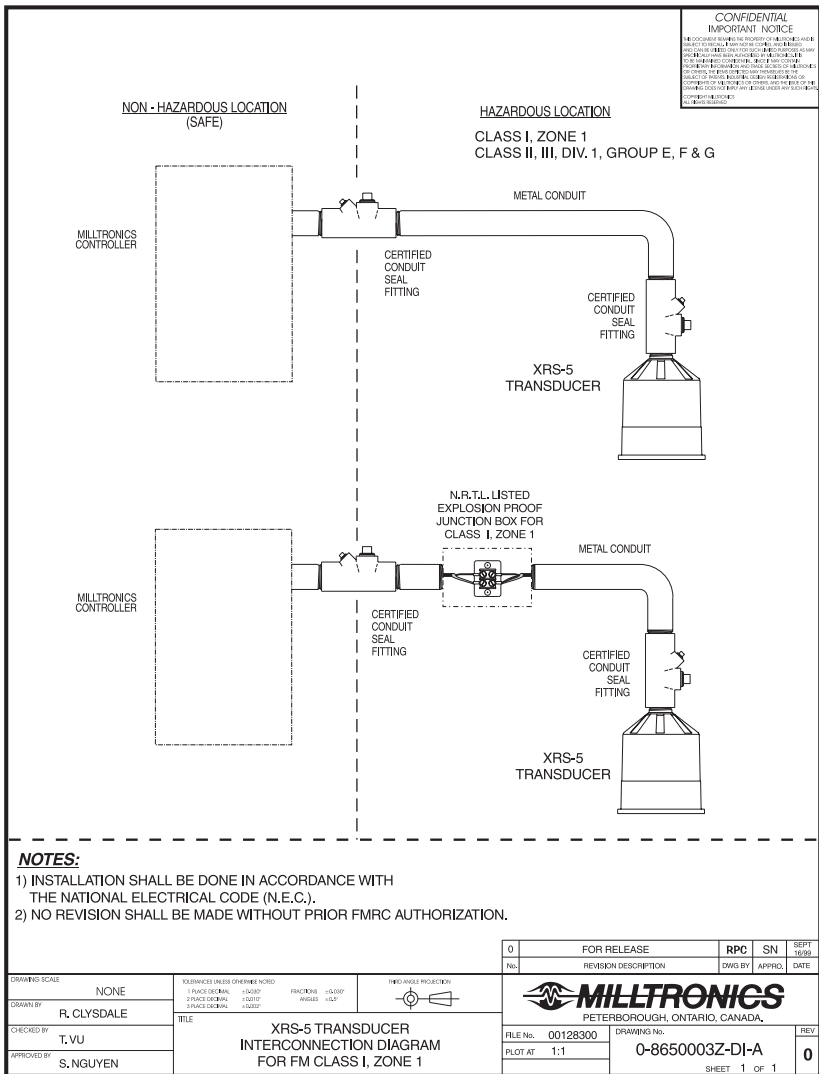

Installation Diagram



Technology based. Customer driven.

CANADA

1954 Technology Dr., P.O. Box 4225,
Peterborough, Ontario, Canada K9J 7B1
Tel.: (705) 745-2431 Fax: (705) 741-0466

AUSTRALIA

182 Normanby Rd., Box 339, South Melbourne, Australia
Tel.: +011-613-9695-2400 Fax: +011-613-9695-2450

BELGIUM

August van de Wielelei 97, 2100 Deurne, Antwerp, Belgium
Tel.: +32(0)3326 45 54 Fax: +32(0)3326 05 25

ENGLAND

Century House, Bridgwater Road, Worcester, England WR4 9ZQ
Tel: +44 1905 450500 Fax: +44 1905 450501

FRANCE

Parc de la Sainte Victoire, Bât. 5, 13590, Meyreuil, France
Tel.: +33 4 42 65 69 00 Fax: +33 4 42 58 63 95

GERMANY

Friedrichstrasse 69, D-76703, Kraichtal, Germany
Tel: +49 (0) 7251/9642-0 Fax: +49 (0) 7251/9642-15

HONG KONG

1 Hoi Wan Street, Suite 602, Quarry Bay, Hong Kong
Tel.: +011 852-2856-3166 Fax: +011 852-2856-2962

MEXICO

Amores No. 1155, Col. Del Valle, 03100, Mexico D.F., Mexico
Tel.: +52 5 575-27-28 Fax: +52 5 575-26-86

THE NETHERLANDS

Nikkelstraat 10, NL-4823 AB Breda, The Netherlands
Tel.: +31(0)76 542 7 542 Fax: +31(0)76 542 8 542

SWITZERLAND

CP 168, Crêt de Plan 23, CH-1095 LUTRY
Tel. +41 21 791 58 28 Fax. +41 21 791 58 40

THE UNITED STATES

709 Stadium Drive, Arlington, Texas U.S.A. 76011
Tel.: (817) 277-3543 Fax: (817) 277-3894

A joint venture in **Singapore**, a sales office in **Brazil** and
distributors in 56 countries.



Visit our web site at:
www.milltronics.com

Printed in Canada