A Badger Meter® Brand

Water Quality Monitor

Q46F/82 Auto-Chem Fluoride Monitor



Badger Meter

ATI-UM-04588-EN-02 (July 2025)

User Manual

CONTENTS

Introduction 5
General 5
Q46F/82 System Specifications 6
Q46F/82 Performance Specifications 7
Mounting 8
General 8
Wall or Pipe Mount 9
Panel Mount for AC Powered Monitor 11
Auto-Chem Mounting 11
Reagent Bottle Bracket and Pickup Assembly 13
Inlet and Drain Connections 14
Electrical Connection 15
General 15
AC Powered Instrument Wiring 16
Q46F Sensor Wiring 17
Relay Wiring 18
Auto-Chem Power Panel 19
Auto-Chem to Q46 Power Interconnect 21
Auto-Chem Startup 22
General 22
Fluoride Buffer Solution 22
Reagent Pump Priming 22
Operation 23
Sensor Air Purging 23
Fluoride Calibration Standards 24
Mixing Standards 24
Configuration 25
User Interface 25
Keys 25
Display 26

Software 27

Software Navigation 27

Measure Menu [MEASURE] 29

Calibration Menu [CAL] 29

Configuration Menu [CONFIG] 30

Control Menu [CONTROL] 32

Diagnostics Menu [DIAG] 35

Calibration 37

Calibration 37

Automatic Calibration 37

Manual Calibration 38

1-Point Manual Calibration 39

Temperature Calibration 39

PID CONTROLLER DETAILS 40

PID Description 40

PID Algorithm 40

PID Equation 40

Classical PID Tuning 41

Manual PID Override Control 42

Common PID Pitfalls 42

System Maintenance 43

General 43

Analyzer Maintenance 43

Sensor Maintenance 43

Sample Pump Tube Replacement 43

Reagent Pump Tube Replacement 44

Troubleshooting 45

General 45

External Sources of Problems 45

Analyzer Tests 45

Display Messages 46

Spare Parts 47

INTRODUCTION

General

The Q46F/82 is an on-line monitoring system designed for the continuous measurement of fluoride ion in solution. You may select the full scale operating range of the system for 0…20.00 ppm, 0…200.0 ppm or 0…2000 ppm. The analog output signal may be spanned for smaller ranges within the overall operating ranges, if desired. Q46F/82 chemistry modules are designed to operate on sample temperatures from 0…50° C. Because water is flowing through the chemistry module at a low rate, this unit cannot be exposed to temperatures below 0° C.

The basic sensing element used in the monitor is a fluoride ion selective electrode (ISE). This sensor contains a lanthanum fluoride crystal that generates a voltage proportional to the activity of fluoride ion in solution. A silver/silver chloride reference electrode contained in the same sensor body provides the second half of the measurement cell. Because ISE electrodes respond to activity rather than concentration, a small amount of buffer is metered into the sample to provide a constant background condition. With other parameters held constant, fluoride activity and fluoride concentration are closely related. A temperature element in the measuring chamber provides automatic temperature compensation for the system.

Q46F/82 monitors incorporate an automatic calibration feature that maintains high measurement accuracy over long operating periods. The automatic calibration system feeds known fluoride standards into the system at an operator programmable frequency such as every 24 hours, every 3 days or some other convenient interval. Automatic calibration can be done at any interval between 24…999 hours. During calibration, analog output and relays are held at the values measured just before initiation of the calibration sequence. An alarm relay can be used to indicate a calibration failure.

This fluoride monitoring system includes two parts: an electronic display unit (panel or wall mount) and a chemistry module. A typical fluoride system installation is shown in *Figure 1 on page 5*. The measured fluoride concentration is displayed on a backlit LCD on the front of the instrument. Two 4…20 mA outputs are provided for recording or data logging of fluoride concentration and temperature. Alarm contacts are also standard in the electronic package and may be used either for simple control schemes or for signaling operators of abnormal operating conditions.

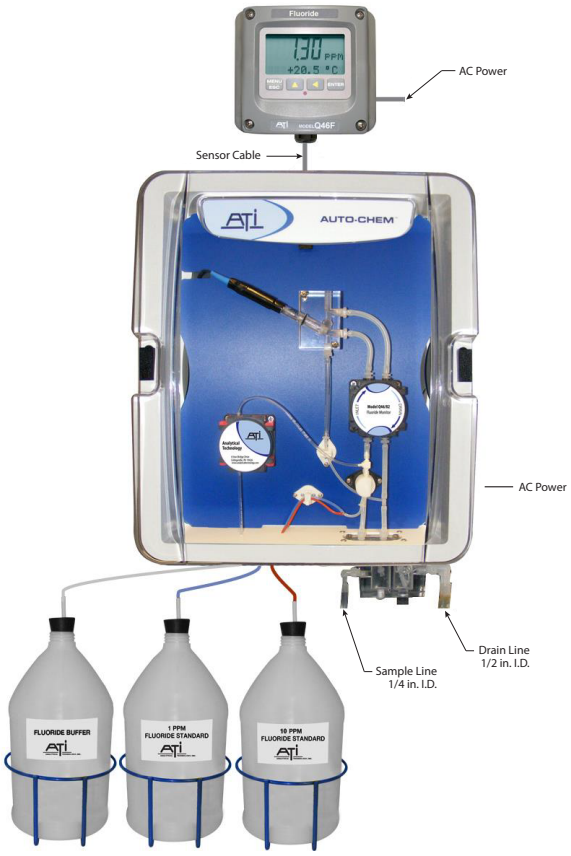


Figure 1: Typical fluoride monitoring system

Q46F/82 System Specifications

Displayed Parameters	Main input: 0.01…2000 ppm dissolved fluoride Sensor mV Sensor temperature: Loop current: 4…20 mA Sensor slope/offset Model number and software version PID controller status
Main Parameter Ranges	Manual selection of one of the following display ranges: 0.00…20.00 ppm, 0.0…200.0 ppm or 0…2000 ppm
Display	0.75 in. (19.05 mm) high 4-digit main display with sign 12-digit secondary display, 0.30 in. (7.62 mm) 5 × 7 dot matrix Integral LED backlight for visibility in the dark
Ambient Temperature	Analyzer service: 41…104° F (5…40° C) Storage: –22…158° F (–5…70° C)
Ambient Humidity	0…95%, non-condensing
EMI/RFI Influence	Designed to EN 61326-1
Output Isolation	600V galvanic isolation
Filter	Adjustable 0…9.9 minutes additional damping to 90% step input
Sensor	Combination F^- / Reference Ion Selective Electrode
Sensor Materials	Glass, Lanthanum fluoride
Interconnect Cable	10 ft (6.15 m) standard
Q46F Power	100…240V AC ±10%, 50/60 Hz
Auto-Chem Power	115 or 230V AC, 50/60 Hz
Q46F Enclosure	NEMA 4X, IP66, polycarbonate, stainless steel hardware HWD: 4.9 in × 4.9 in. × 5.5 in. (124 × 124 × 139 mm) Flammability rating: UL 94 V-0
Auto-Chem Enclosure	NEMA 1, IP11, Kydex with polycarbonate clear lid HWD: 4.9 in × 4.9 in. × 5.5 in. (124 × 124 × 139 mm) Flammability rating: UL 94 V-0
Mounting Options	Wall mount bracket standard Panel mount adapter optional for Q46F only
Relays, Electromechanical	Three SPDT, 6 A @ 250V AC, 5A @ 24V DC contacts Software selection for setpoint, phase, delay, deadband, hi-lo alarm and failsafe A-B indicators on main LCD
Analog Outputs	Two 4…20 mA outputs Output #1 programmable for ppm F^- or PID Output #2 programmable for ppm or temperature Max. load: 500 Ω for each output Outputs ground isolated and isolated from each other
Digital Communications (Optional)	Profibus-DP, Modbus-RTU, Modbus TCP/IP, Ethernet/IP, Datalogger See Q46 Digital Communications Manual for specifications.
Sample Flow Rate	5 gph (315 cc/min) min. 25 gph (1.5 lpm) max.
Weight	20 lb (9 kg)

Q46F/82 Performance Specifications

Accuracy	±0.1 ppm or 0.2% of selected range
Repeatability	±0.05 ppm or 0.1% of selected range
Sensitivity	0.01 ppm
Non-Linearity	0.2% of selected range
Warm-Up Time	3 seconds to rated performance (electronics only) Sensor requires 1 hour stabilization at startup
Supply Voltage Effects	±0.05% span
Instrument Response Time	60 seconds to 90% of step input at lowest damping



Equipment bearing this marking may not be discarded by traditional methods in the European community after August 12, 2005, per EU Directive 2002/96/EC. End users must return old equipment to the manufacturer for proper disposal.

MOUNTING

General

Mechanical installation of a Q46F/82 fluoride system involves mounting the Q46F electronic assembly, mounting the Auto-Chem chemistry module and mounting the reagent bottle brackets.

Proper planning before installation benefits operation and maintenance of the system. Consider the following:

- Mount the Q46F electronics where personnel can easily access the front panel control keys. Calibrating the system requires access to these controls.
- Mount the chemistry module high enough above the floor so that servicing the pumps is not difficult. Access to the chemistry system is required to replace pump tubing every 6 months.
- Do not mount the reagent bottle closer than approximately 18 inches from the bottom of the chemistry module. Mounting too close makes removing the bottle difficult.
- Water sample and drain lines connect to an inlet overflow assembly at the bottom of the chemistry module. Mount the chemistry module so that the drain line is short and can flow freely.

The Q46F monitor is wall mounted using a PVC plate supplied with the unit. The bracket kit contains 4 screws for attaching the plate to the back of the enclosure. A paper template is supplied for ease of locating anchors in the wall.

The Auto-Chem chemistry module is supplied with 4 stainless steel mounting feet and 8 attachment screws (10-32 × 1/4 in. long). Inserts in the back of the enclosure are provided for attaching the mounting feet.

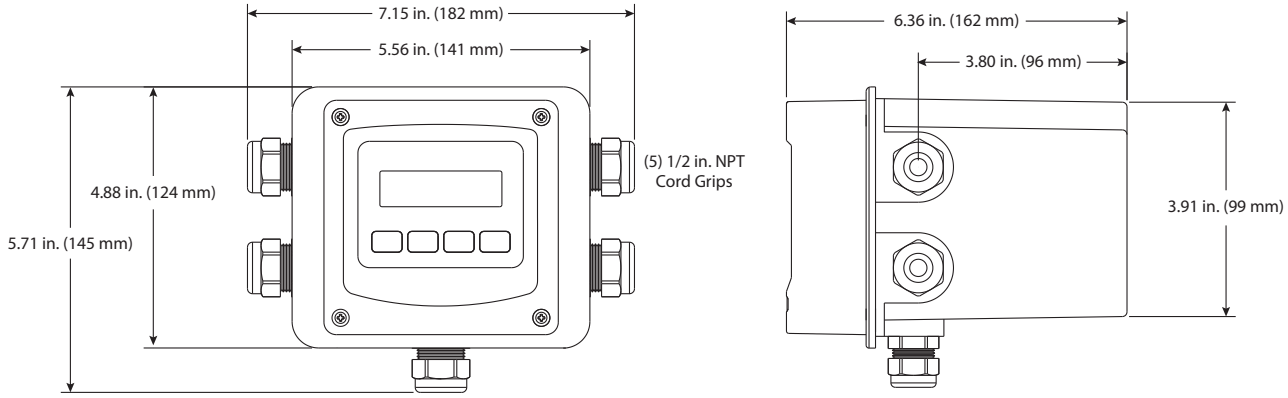


Figure 2: Q46F enclosure dimensions

Wall or Pipe Mount

A PVC mounting bracket with attachment screws is supplied with each transmitter (see *Figure 3* below for dimensions). The multipurpose bracket attaches to the rear of the enclosure using the four flat head screws. The instrument then attaches to the wall using the four outer mounting holes in the bracket. These holes are slotted to accommodate two sizes of U-bolt that may be used to pipe mount the unit. Slots accommodate U-bolts designed for 1-1/2 inch or 2 inch pipe. The actual center-to-center dimensions for the U-bolts are shown in the drawing. Note that these slots are for U-bolts with 1/4-20 inch threads. The 1-1/2 inch pipe U-bolt (2 inch I.D. clearance) is available from Badger Meter in type 304 stainless steel, part number 47-0005.

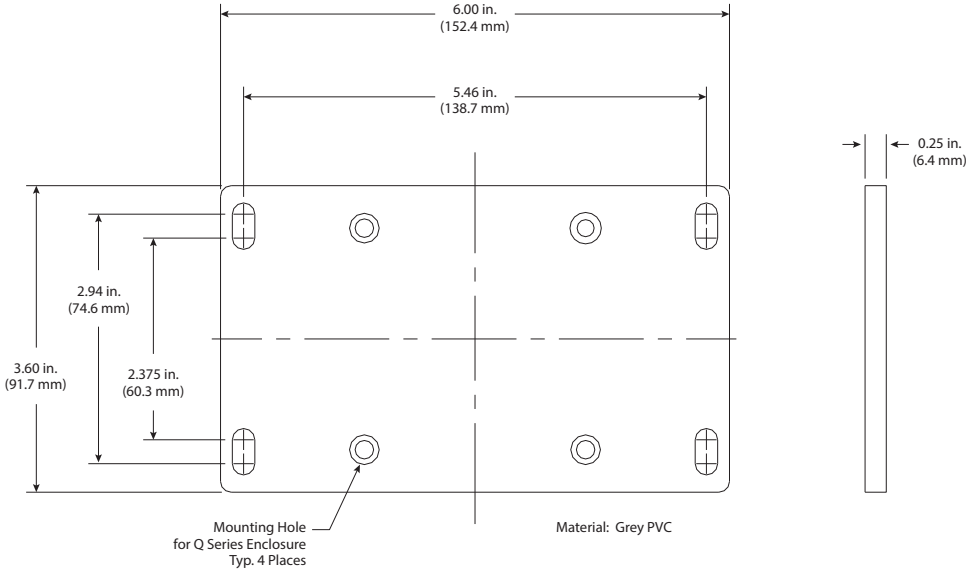


Figure 3: Wall or pipe mounting bracket


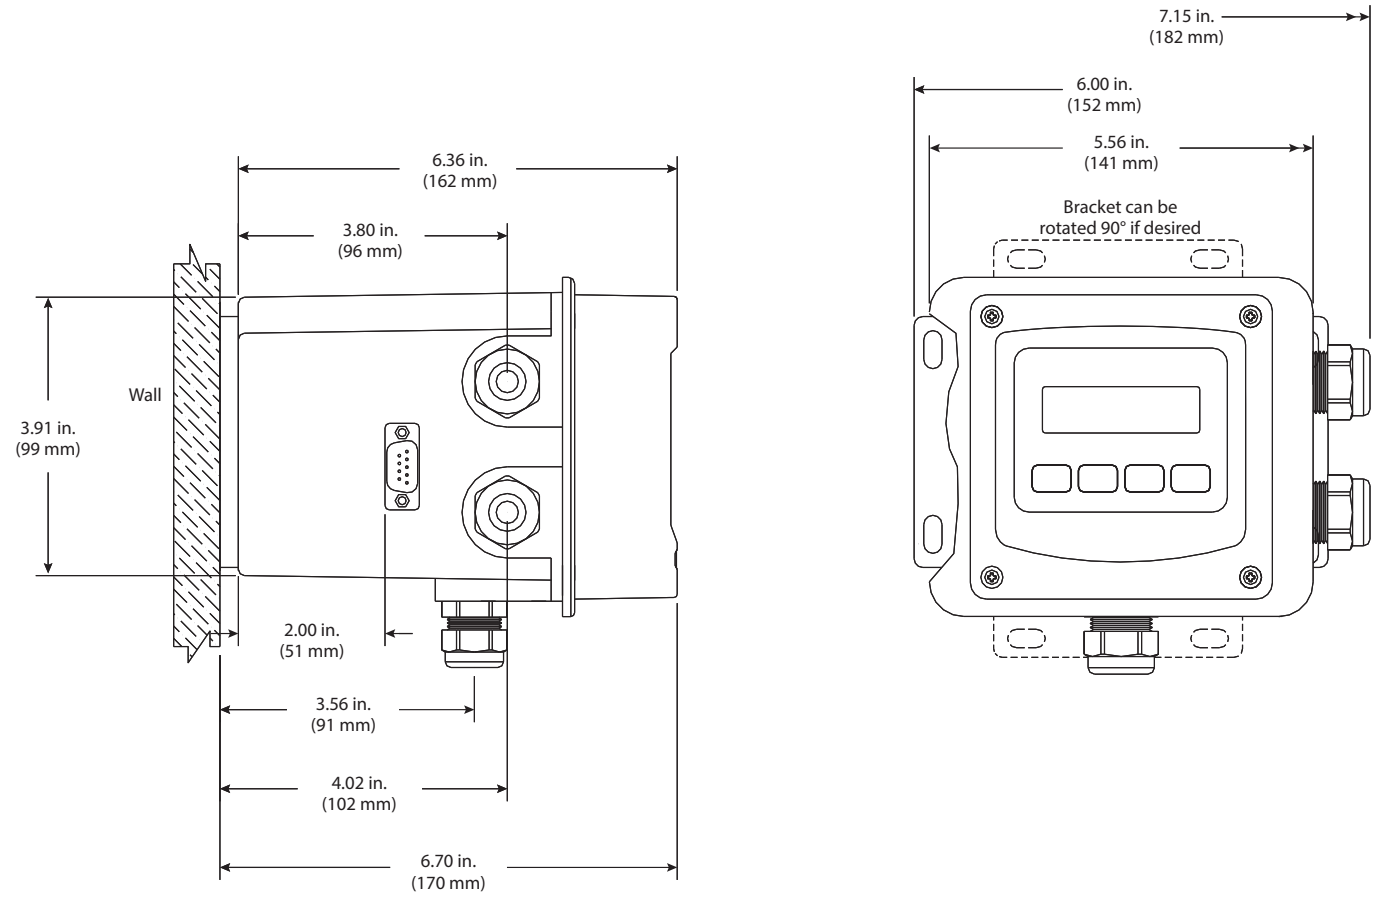


Figure 4: Wall mounting diagram

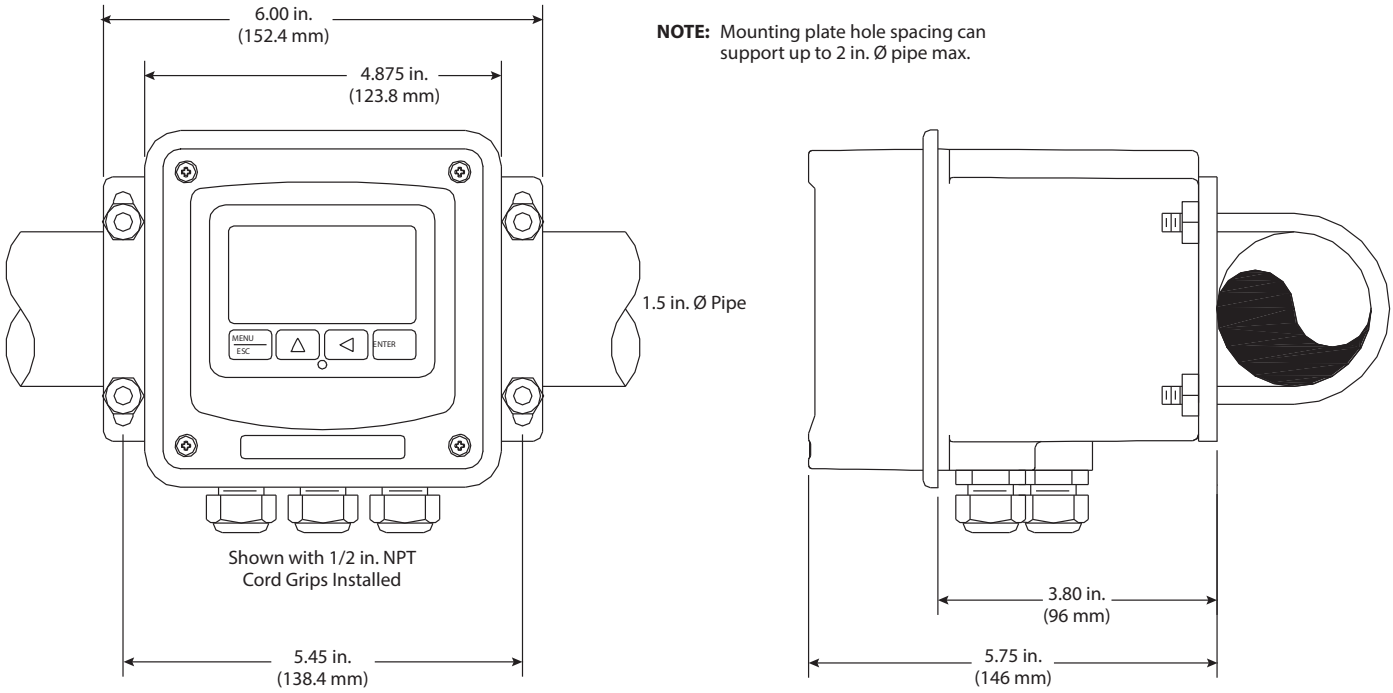

NOTE: Mounting plate hole spacing can support up to 2 in. Ø pipe max.

Figure 5: Pipe mounting diagram

Panel Mount for AC Powered Monitor

Panel mounting for the Q46F monitor uses the panel mounting flange molded into the rear section of the enclosure. *Figure 6* provides dimensions for the panel cutout required for mounting.

The panel mounting bracket kit must be ordered separately (part number 05-0094). This kit contains a metal retainer bracket that attaches to the rear of the enclosure, 4 screws for attachment of this bracket, and a sealing gasket to ensure that the panel mounted monitor provides a watertight seal when mounted to a panel.

The sealing gasket must first be attached to the enclosure. The gasket contains an adhesive on one side so that it remains in place on the enclosure. Remove the protective paper from the adhesive side of the gasket and slide the gasket over the back of the enclosure so that the adhesive side lines up with the back of the enclosure flange. Once in place, you can proceed to mount the monitor in the panel.

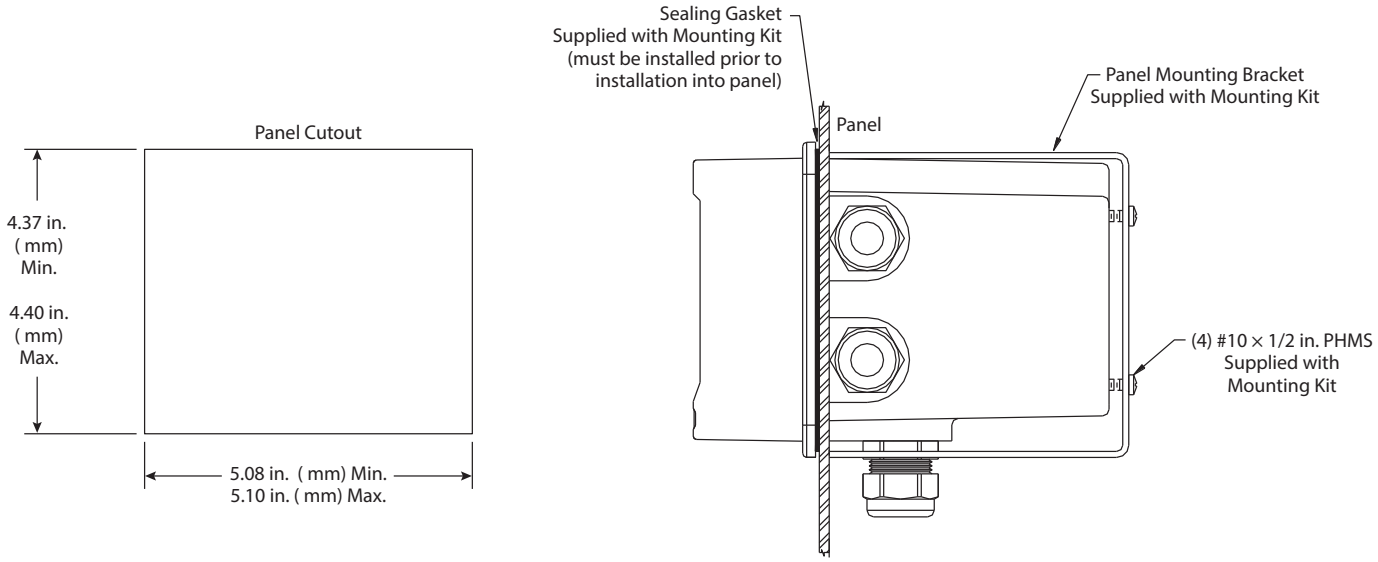


Figure 6: Panel mount installation

Auto-Chem Mounting

Mount the chemistry module should be mounted on a wall or flat plate. A template is provided for marking the location of mounting screws. The stainless steel mounting feet must first be screwed to the back of the enclosure using the screws supplied.

Tape the mounting template to the wall and mark the 4 screw locations. Mount any wall anchors first and then screw in the two bottom mounting screws about half way. Place the two bottom mounting feet of the enclosure onto the screws and tilt the enclosure into place. Install the two top screws to secure the enclosure and then tighten the bottom screws.



Figure 7: Auto-chem enclosure mounting feet

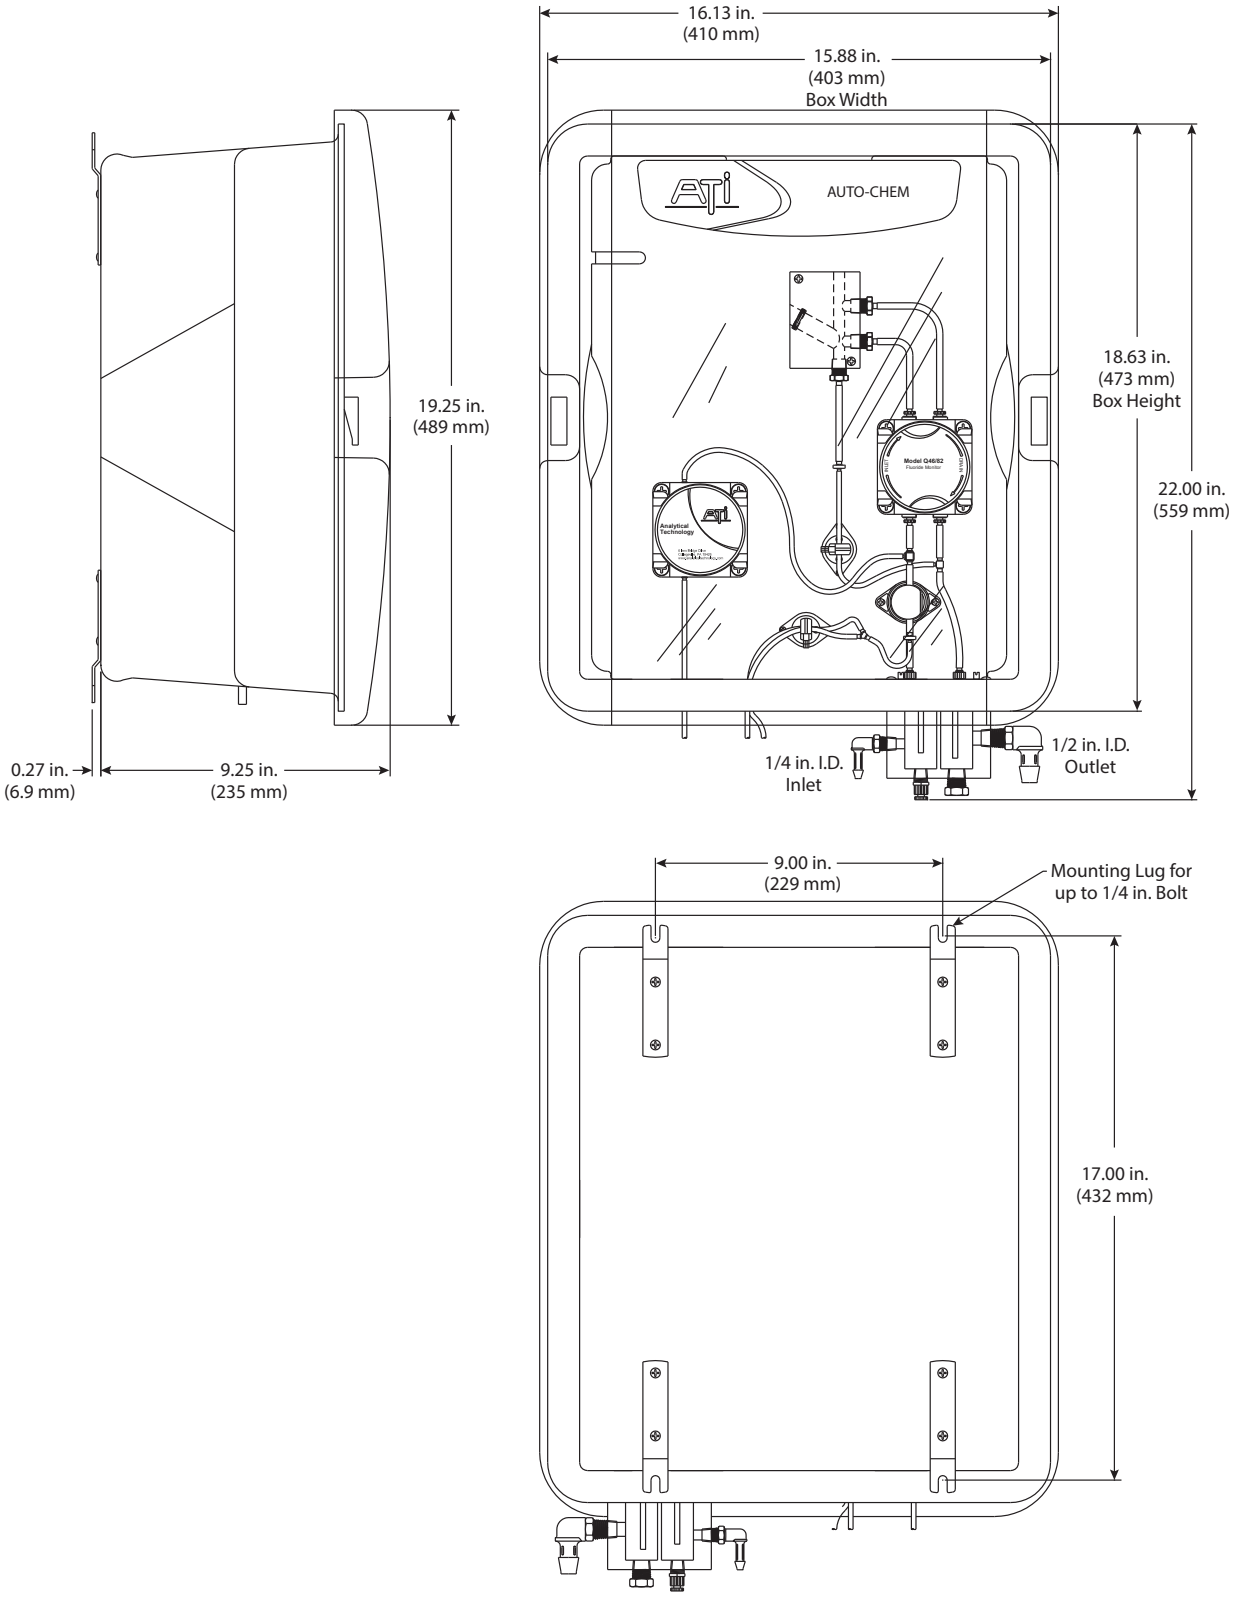


Figure 8: Auto-chem dimensional drawing

Reagent Bottle Bracket and Pickup Assembly

The Auto-Chem system requires approximately 1 gallon of reagent every 25 days. A one gallon bottle holder is supplied and mounts to the wall. It is sufficient to mount the bracket using only the upper two mounting holes. A standard pick-up assembly (03-0450) is supplied and fits into the mouth of the bottle. Attach the tubing connector to the tubing after you have slid the tubing from the chemistry system through the ceramic tube coming through bottle stopper. This keeps the tubing from floating to the top of the liquid.

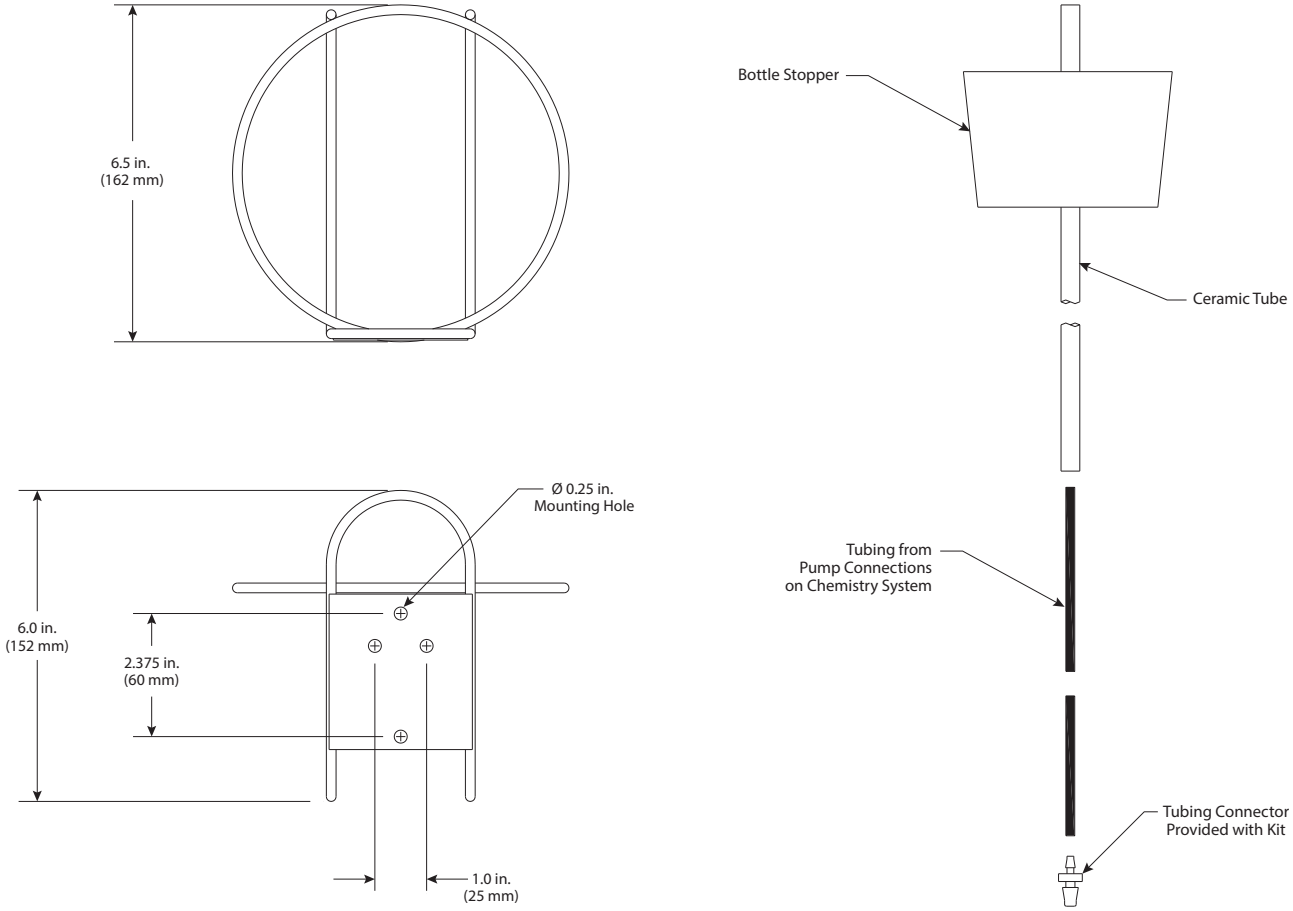


Figure 9: Bottle bracket & reagent feed assembly

Inlet and Drain Connections

NOTE: To avoid shipping damage, the inlet assembly is shipped separately and must be installed on the bottom of the chemistry module after the enclosure has been mounted to the well. The inlet assembly is supplied with four mounting screws for attachment to the enclosure. See *Figure 10* below.

The water sample containing dissolved fluoride must be connected to the inlet overflow assembly mounted on the bottom of the chemistry module. For convenience, a 10 ft piece of 1/4 inch I.D. PVC tubing is supplied. This tubing mates with the inlet hose barb located on the left side of the inlet assembly.

The drain connection is a 1/2 inch I.D. hose barb on the right side of the overflow assembly. A 5 ft length of PVC drain tubing is also supplied. The drain should be a free-flowing gravity drain. No backpressure is allowed on the drain line.

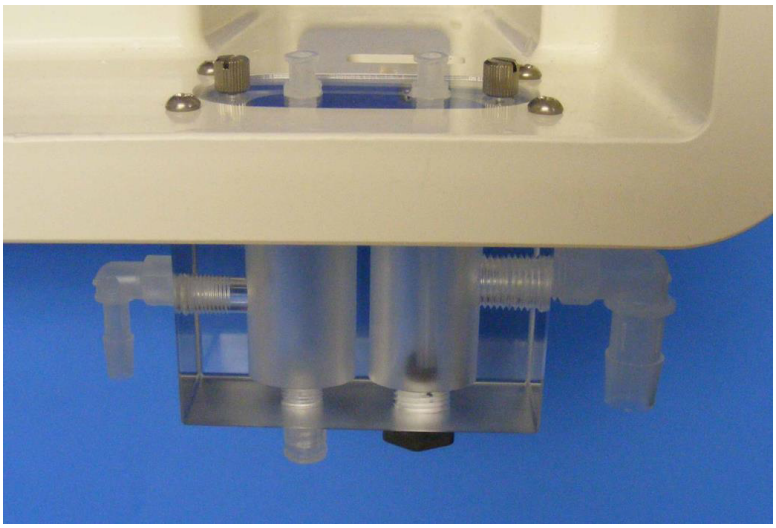


Figure 10: Inlet assembly attached to enclosure

ELECTRICAL CONNECTION

General

The Q46 electronics contains a universal power supply operating on voltages between 90…265V AC, 50/60 cycle. Auto-Chem chemistry modules are not universal and must be ordered for operation from either 115V AC or 230V AC. Verify the type of unit before connecting any power.

The Auto-Chem assembly contains two DIN rail mounted power supplies, one of which is AC power dependent. The 24V AC supply located next to the AC power input terminals is the power supply that must be compatible with the installation site. If there is any question, remove the power supply from the DIN rail and check the label on the bottom of the supply. Connection of 230V AC power to a 115V AC unit will result in damage to the power supply assembly.

IMPORTANT NOTES:

1. Use wiring practices that conform to all national, state and local electrical codes. For proper safety as well as stable measuring performance, it is important that the earth ground connection be made to a solid ground point from terminal 12. See *Figure 11 on page 16*.
2. Do NOT run sensor cables or instrument 4…20 mA output wiring in the same conduit that contains AC power wiring. AC power wiring should be run in a dedicated conduit to prevent electrical noise from coupling with the instrumentation signals.

AC Powered Instrument Wiring

Q46 electronic units are supplied with five 1/2 inch NPT ports, two on each side and one on the bottom. Red plugs are provided for each port. Five cord grips are supplied separately for use during installation. A cord grip should be installed in the bottom port for sealing the sensor cable connection to the Auto-Chem unit. AC power should enter through the lower right hand port as the AC terminals are closest to this entry. Connect HOT, NEUTRAL, and GROUND to the matching designations on terminal strip TB7.

⚠ WARNING

DISCONNECT LINE POWER VOLTAGE BEFORE CONNECTING LINE POWER WIRES TO TERMINAL TB7 OF THE POWER SUPPLY. THE POWER SUPPLY ACCEPTS ONLY STANDARD 3-WIRE SINGLE PHASE POWER. THE POWER SUPPLY IS CONFIGURED FOR 100…240V AC ±10% OPERATION. DO NOT CONNECT VOLTAGES OTHER THAN THE LABELED REQUIREMENT TO THE INPUT.

The analog outputs from the system are present at terminal TB1. The loop-load limitation in this configuration is 500 Ohms maximum for each output. Also note that these two outputs are completely isolated from each other to ensure that ground loops do not result from the connection of both outputs to the same device such as a PLC or DCS.

A ribbon cable connects the power supply assembly with the microprocessor assembly located in the front section of the enclosure. This cable can be disconnected from the front section during installation to facilitate wiring. The ribbon cable has a marking stripe on one edge that is used to indicate proper orientation.

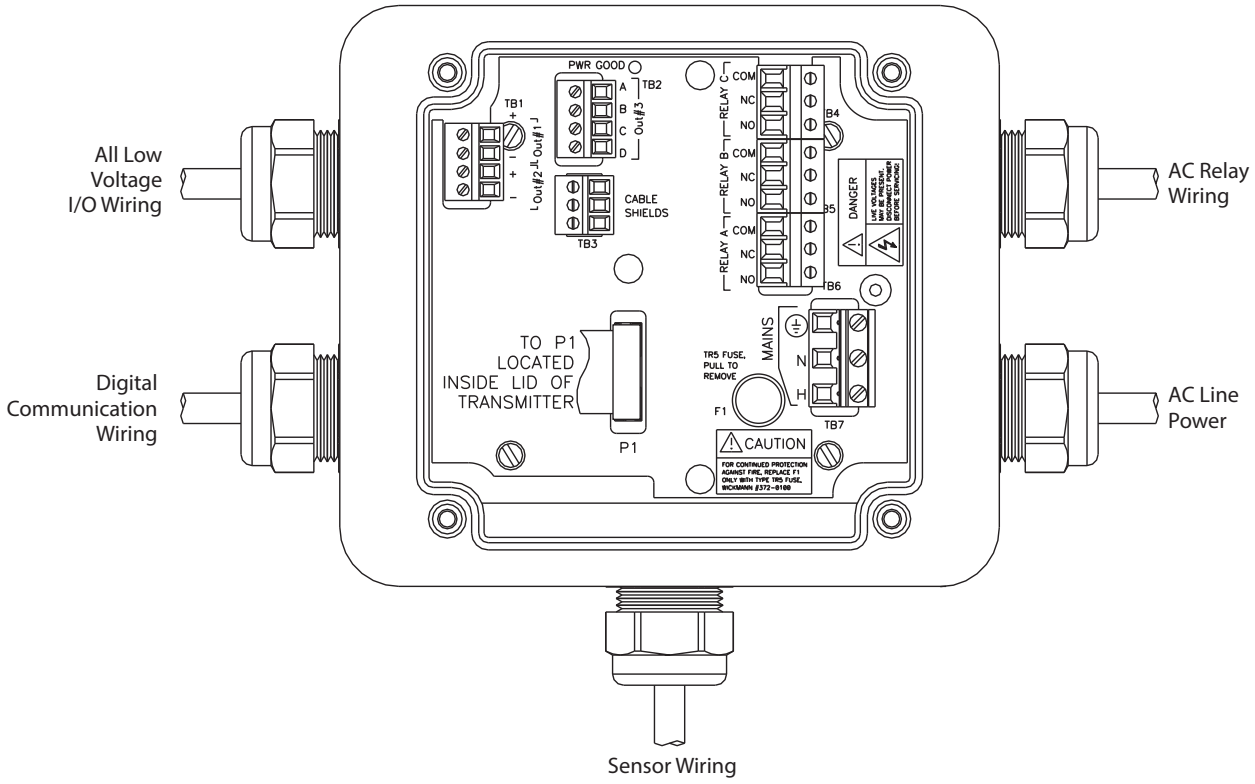


Figure 11: Line power connections

The power strip TB7 allows up to 12 AWG wire. A wire gauge of 16 AWG is recommended to allow for an easy pass-through into the 1/2 inch NPT gland seals when wiring.

Q46F Sensor Wiring

The interconnection between the Auto-Chem module and the Q46F electronics is a 9-conductor shielded cable. The chemistry module contains an amplifier module that converts the sensor signal to a low impedance signal that is less susceptible to noise or signal loss problems. Five of the nine conductors are used for the amplifier output and the other four are used to control the automatic calibration system. A 10 ft length of 9-conductor cable is supplied but may be shortened if desired. Removing excess cable makes for a cleaner installation and reduces the potential for RFI pickup in the interconnecting cable.

NOTE: If present, remove the jumper wire between positions 4 and 8.

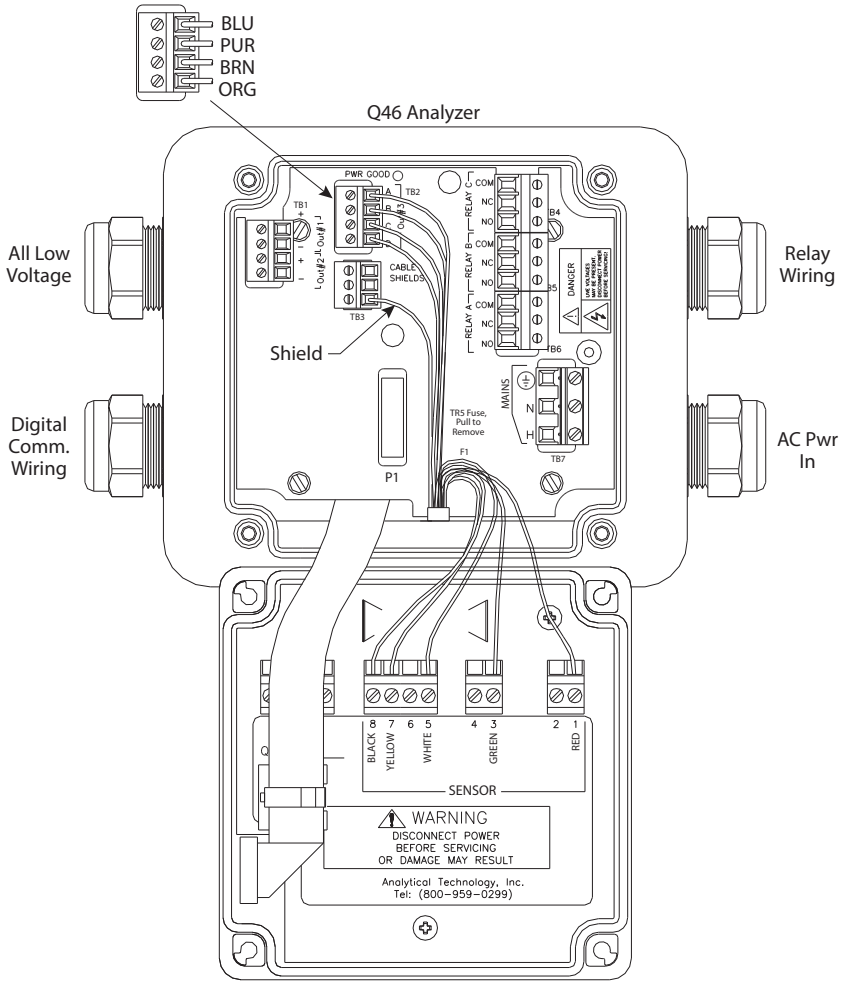


Figure 12: Sensor and control connection

The standard 10 ft cable supplied with the system is already terminated inside the Auto-Chem unit. The end that connects to the Q46F is already is stripped and ready for wiring. After the electrical connection are made, snugly tighten the cord grips used for sealing the cable. This helps prevent moisture incursion. When cutting multi conductor cable used for this system, be sure to strip back the cable jacket by 4 inches to ensure individual conductors can be routed properly inside the Q46F enclosure.

Relay Wiring

Three SPDT relays are provided on the power supply board. None of the relay contacts are powered. You must supply the proper power to the contacts. For applications that require the same switched operating voltage as the Q46 (115 or 230 V), power may be jumped from the power input terminals at TB7. Relay wiring is connected at TB4, TB5 and TB6 as shown below. Note that the relay contact markings are shown in the NORMAL mode. Programming a relay for Failsafe operation reverses the NO and NC positions in *Figure 13*.

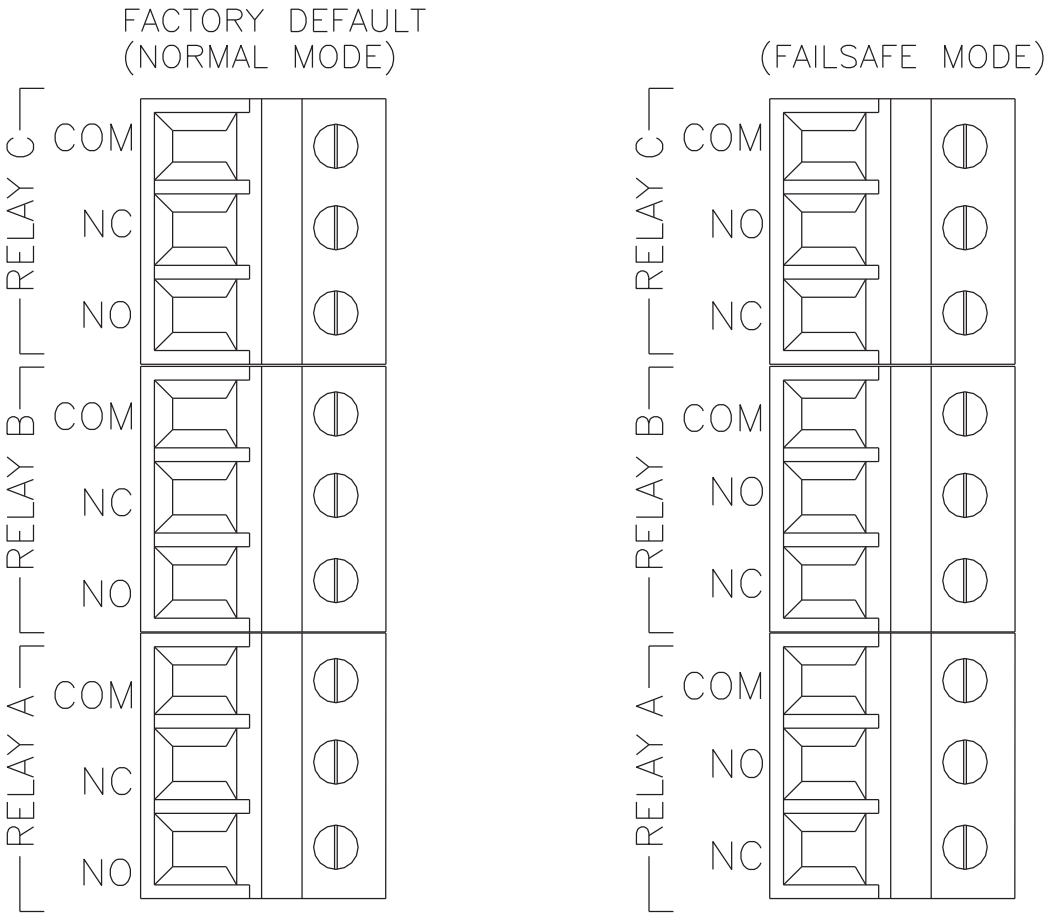


Figure 13: Relay contacts

Auto-Chem Power Panel

The chemistry module contains terminals and power supplies on a DIN rail located behind the front panel. During installation, it is often convenient to completely remove the front panel, allowing access to terminals inside.

To remove the front panel:

1. Disconnect the inlet and outlet luer fittings from the inlet overflow chamber.
2. Locate the blue and red tubes for auto-calibration and slide them out of the solenoid pinch valve.
3. Disconnect the common outlet tube where the red and blue tubes come together so that these tubes are no longer connected to the front panel.
4. Open the latch at the top of the panel and allow the panel to hinge forward. A retaining strap stops the panel from moving too far.

The two pumps are plugged into the 24V AC power supply on the right. The three solenoid valves are wired to two locations, a terminal strip for one lead and the 12V DC power supply for the second lead. Pump motors and all 3 solenoid valves are disconnected by unplugging the molex connectors. The RTD temperature element wires have a molex connector as well so that it can be disconnected when removing the front panel.

After everything is disconnected, open the hook and loop on the retaining strap and slide the strap through the slots on the front panel. At this point, the entire front panel can be removed from the enclosure. *Figure 14* shows the power supplies and terminals.

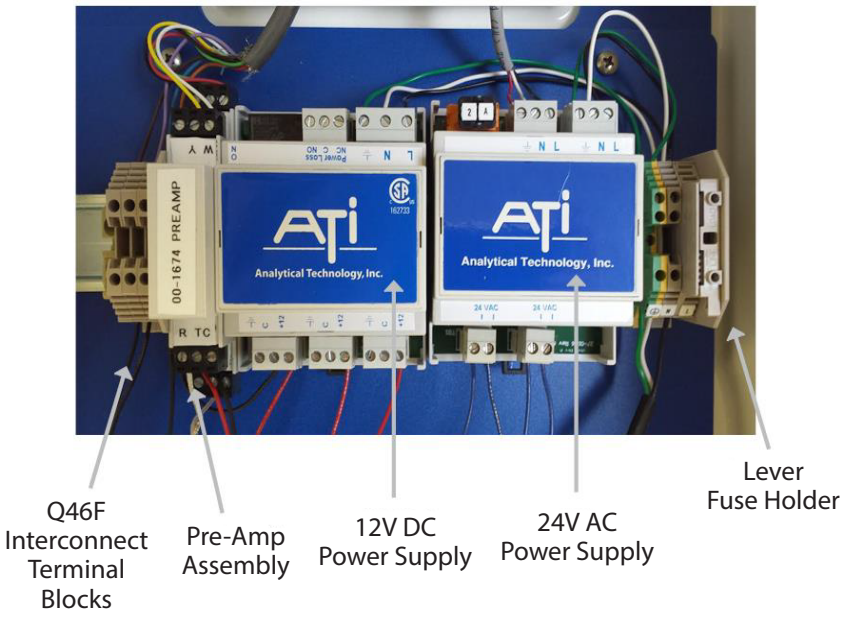


Figure 14: Auto-Chem connection panel

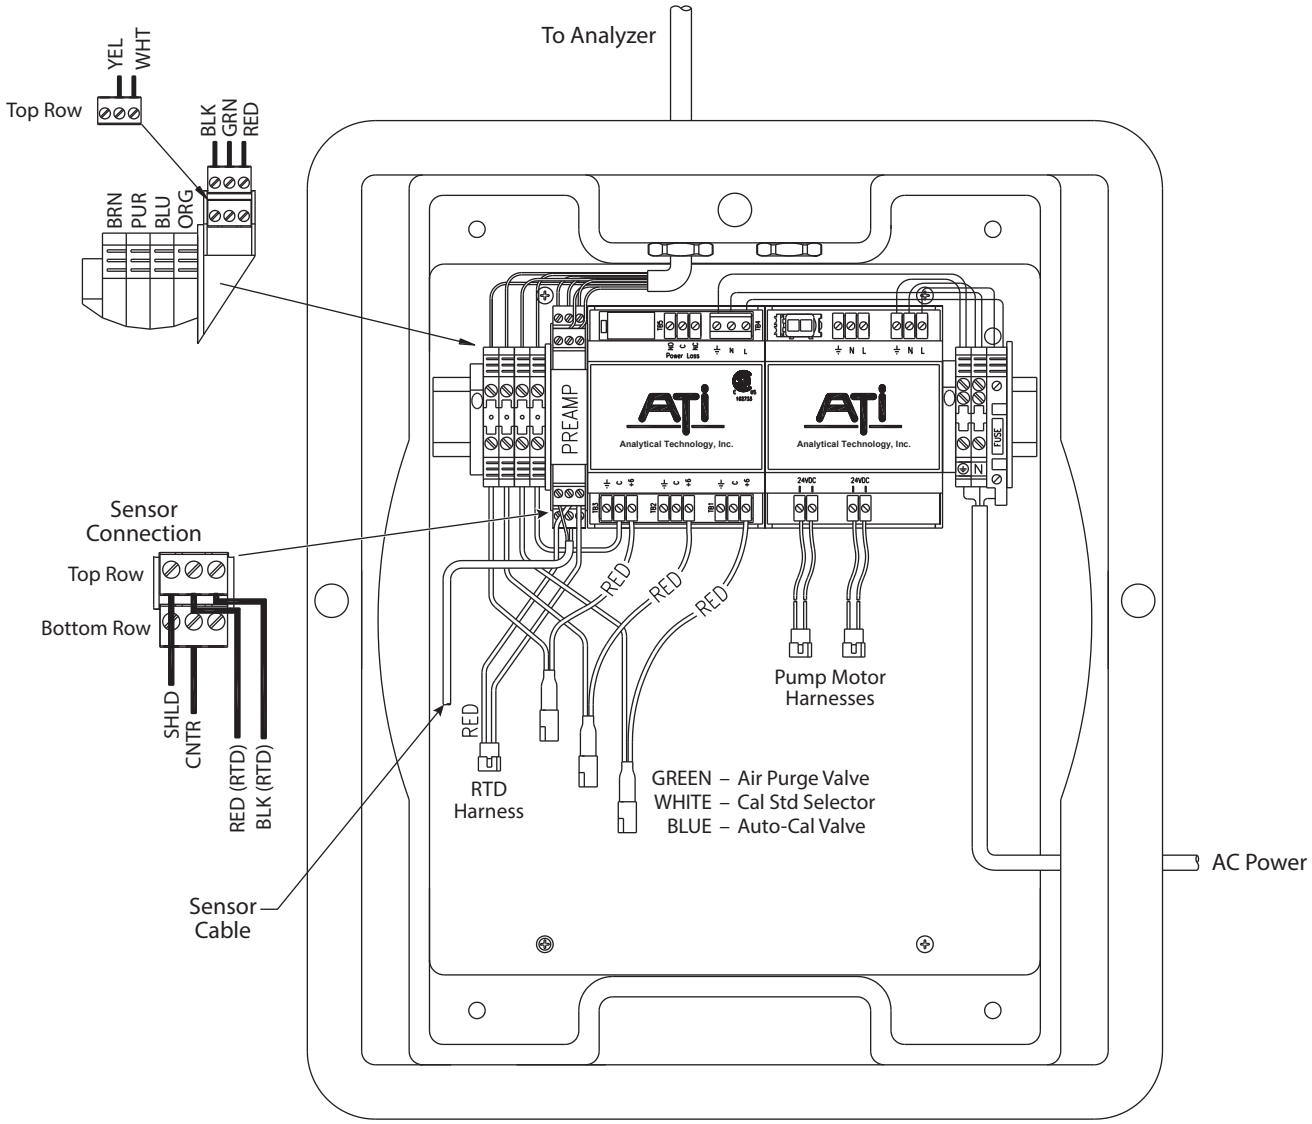


Figure 15: Auto-Chem customer wiring

Auto-Chem to Q46 Power Interconnect

In some installations, it may be convenient to provide power to the Q46F monitor through terminals provided on the 24V AC power supply. The advantage of this arrangement is that the lever fuse in the Auto-Chem module can be used to turn power on and off in both the chemistry unit and the monitor.

Refer to *Figure 16*. On the top side of the 24V AC power supply you will see a 3-point terminal block that is unused. It is just left of the AC power connections that are factory wired. Connection of a 3-conductor AC power cord from these terminals up to TB7 of the Q46F electronics powers the Q46F through the chemistry module.

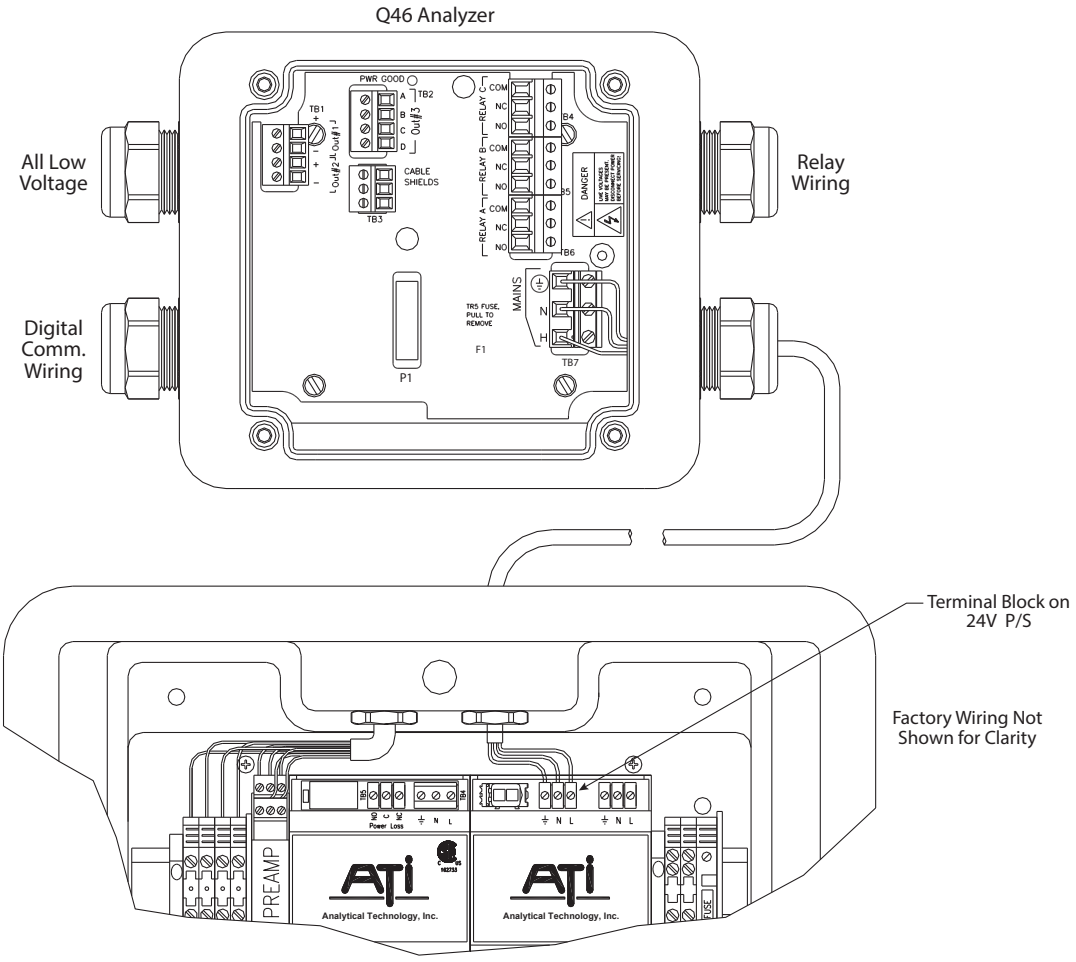


Figure 16: Analyzer connection from Auto-Chem

AUTO-CHEM STARTUP

General

Prior to operating the chemistry module, connect inlet sample and drain tubing to the hose barbs provided on the inlet overflow assembly. Remove the clear cover from the chemistry module and check the inlet and outlet tube connections on the inside cover of the overflow assembly. Also, verify the reagent pickup tube is connected to the inlet fitting of the regent pump.

Before applying power to the chemistry module, the combination fluoride/reference electrode must be installed. The electrode is shipped dry in the electrode box and should be stored in this condition until it is time to commission the monitor. The reference filling solution is supplied in a separate bottle along with a plastic dropper used to fill the electrode. Near the top of the electrode is a black plastic sleeve that covers the fill port. Pull the sleeve down so the fill hole is accessible and fill the reference chamber with the solution using the plastic dropper. Push the sleeve back up over the fill hole. The sensor is now ready for use.

The fluoride electrode slides into the flow block on the front of the Auto-Chem module. The electrode cable, which is pre-installed, connects the sensor directly to the monitor. This cable screws onto the back of the electrode. The fluoride electrode outputs a high impedance signal so the cable should not be spliced.

Fluoride Buffer Solution

The buffer solution used in the Q46F/82 fluoride monitor adjusts the sample pH to about 5.3 and increases the ionic strength of the sample to provide a stable fluoride measurement. The dry buffer can be purchased from Badger Meter or it can be purchased in bulk from a chemical supply house by the end user.

The buffer solution consists of sodium acetate and white vinegar. If you purchased the dry buffer from Badger Meter, simply fill the gallon container with white vinegar, cap the bottle and invert several times to mix. If you are providing both chemicals, place 1000 grams of sodium acetate (Fisher Scientific #S207-10) in the gallon buffer container. Fill the container with white vinegar, cap the bottle and invert several times to mix. Let the buffer sit for approximately 1 hour prior to use to allow all of the sodium acetate to dissolve.

Reagent Pump Priming

Buffer is pulled from the gallon container by a peristaltic pump in the Auto-Chem. The pump rate for chemical feed is about 0.1 cc/min. It can take up to 20 minutes for buffer to reach the sample injection point when power is first applied.

If desired, the reagent feed tube can be manually filled to reduce the waiting time. A 5 cc syringe with plastic tip is supplied for this purpose. To fill the feed tube, release the pressure on the reagent pump tube by loosening the clamp plate on the left side of the pump. Then disconnect the 1/16 inch I.D. tube from the injection tee below the sample pump. Insert the tip of the syringe into the tube, and use the syringe to draw reagent from the bottle into the syringe. When reagent has reached the syringe, replace the pressure plate on the reagent pump. After the pressure plate is properly seated, disconnect the syringe and connect the tubing to the injection tee. Discard any buffer in the syringe and rinse.

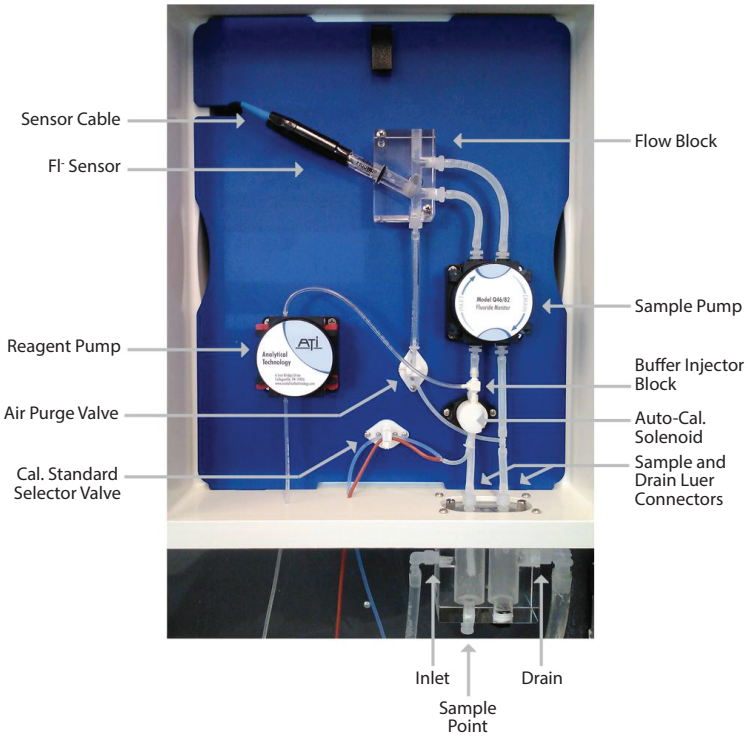


Figure 17: Auto-Chem panel components

Operation

As noted in the "Electrical Installation" section, the chemistry module contains a lever fuse holder that can be used to turn the chemistry system on and off. Once the steps outlined earlier in this section are complete and power has been connected to the proper terminals, simply close the lever fuse to activate the chemistry module.

Once power is applied, the two peristaltic pumps will start to turn. If the power to the Q46F comes on at the same time, you might hear the large solenoid valve under the sample pump cycle once.

Assuming that sample is flowing to the overflow assembly, sample will reach the fluoride sensor block in just a few seconds. If the reagent feed has been manually primed, the system will begin to function almost immediately. It is best to allow the system to run undisturbed for 1 hour after initial startup. Do not be concerned if you see either high or low fluoride values at this point. Remember that the system has not yet been calibration and calculated concentrations will be based on default settings from the factory that may, or may not, be close to this particular sensor.

Sensor Air Purging

During analyzer operation, air bubbles can slowly accumulate on the face of the fluoride sensor. This is usually caused by "degassing" of the sample as it warms up running through the analyzer flow system. These bubbles can result in small measurement errors of a few tenths of a PPM. To eliminate the air buildup, the Q46F provides a simple automatic system to remove air accumulation. This system is activated by a timer (T2) that opens a solenoid valve once an hour. When the solenoid opens, the sample will drain below the sensor and remove any bubble accumulation.

The timer function T2 can be changed by the operator if desired. If the sample coming into the monitor is very cold, air removal more frequently might be necessary. In some cases, less frequent air removal may be fine. During the air removal process, the analog output and alarm relays are held at the values just prior to operation. To change frequency, go the Control Menu and adjust "T2 Tmr Cycle" to the frequency desired.

Fluoride Calibration Standards

The automatic calibration routine normally uses two fluoride standards that should be prepared in the 1 gallon containers provided for that purpose. The two fluoride standards used for most drinking water applications are 1 ppm and 10 ppm, but other values can be used as long as there is at least 1 decade of concentration difference (10×) between the two. Also, standards below 1 ppm should be avoided and no standard below 0.5 ppm should be used.

Fluoride standards used for calibration should be mixed using the supplied concentrated standards and unfluoridated raw water for dilution. Do not use distilled or deionized water to mix standards. For highest accuracy, always use the same type of water that the analyzer sees while in continuous operation.

Many water plant facilities are equipped with the materials and equipment to mix their own fluoride standards. As an option, Badger Meter can supply a standards mixing kit containing measuring cylinders and fluoride standards to facilitate mixing. This kit contains 2 standards: 100 ppm and 1000 ppm. The 100 ppm standard should be used for mixing the 1 ppm calibration solution and the 1000 ppm standard should be used to mix the 10 ppm standard. Included in the kit is a 10 mL graduated cylinder and a 1000 mL graduated cylinder. The standards mixing kit is part number 05-0108.

Mixing Standards

The fluoride calibration kit provides everything needed to mix 1 and 10 ppm standards for use in calibration of the Q46F. The following procedures are used to mix 1 liter volumes of 1 and 10 ppm standards, which should then be transferred to the 1 gallon containers provided. You will normally need to mix 2 or 3 liters of each standard to fill the gallon containers to a reasonable level.

To mix a 1 ppm standard, fill the 10 mL graduated cylinder to the 10 mL mark with the 100 ppm standard. Pour this solution into the 1000 mL graduated cylinder and fill to the 1000 mL mark with fluoride free raw water. Pour this solution into the gallon container labeled 1 ppm. Repeat this 2 more times to provide 3 liters of 1 ppm standard.

To mix a 10 ppm standard, fill the 10 mL graduated cylinder to the 10 mL mark with the 1000 ppm standard. Pour this solution into the 1000 mL graduated cylinder and fill to the 1000 mL mark with fluoride free raw water. Pour this solution into the gallon container labeled 10 ppm. Repeat this 2 more times to provide 3 liters of 10 ppm standard.

CONFIGURATION

User Interface

The user interface for the Q46 Series instrument consists of a custom display and a membrane keypad. All functions are accessed from this user interface (no internal jumpers or pots, for example).

When power is first applied, you may notice that the display does not come on immediately. This is normal. There is a five second start routine that runs before the display illuminates. In addition, you may notice an occasional "flicker" of the display, occurring about twice an hour. This is the result of a display processor refresh program that ensures long-term display integrity and always occurs during normal operation of the instrument.

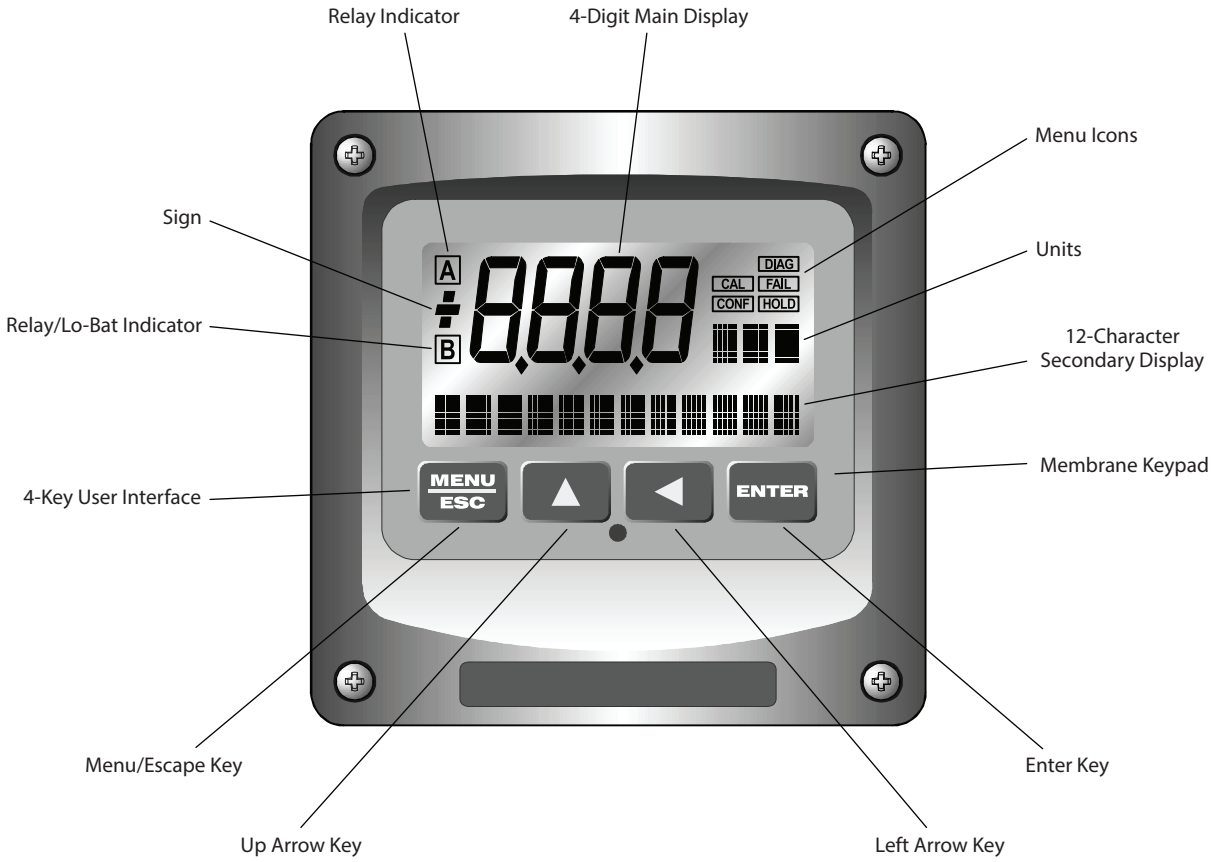


Figure 18: User interface

Keys

All user configurations occur through the use of four membrane keys. These keys are used as follows:

MENU/ESC	To scroll through the menu section headers or to escape from anywhere in software. The escape sequence allows you to back out of any changes in a logical manner. Using the escape key aborts all changes to the current screen and backs you out one level in the software tree. The manual refers to this key as either **MENU** or **ESC**, depending upon its particular function. In the battery-powered version of the Q46, this is also the ON button.
UP (arrow)	To scroll through individual list or display items and to change number values.
LEFT (arrow)	To move the cursor from right to left during changes to a number value.
ENTER	To select a menu section or list item for change and to store any change.


Display

The large custom display provides clear information for general measurement use and user configuration. There are three main areas of the display: the main parameter display, the secondary message line and the icon area.


Main Parameter During normal operation, the main parameter display indicates the present process input with sign and units. This main display may be configured to display any of the main measurements that the system provides. During configuration, this area displays other useful setup information.



Lower Line During normal operation, the lower line of the display indicates user-selected secondary measurements that the system is making. This also includes calibration data from the last calibration sequence and the transmitter model number and software version. During configuration, the lower line displays menu items and set-up prompts. Finally, the lower line displays error messages when necessary. For a description of all display messages, see *"Display Messages" on page 46*.

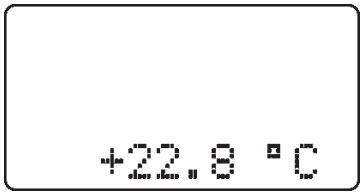

Icon Area The icon area contains display icons that assist you in setup and indicate important states of system functions. The *CAL*, *CONFI* and *DIAG* icons are used to tell you what branch of the software tree you are in while scrolling through the menu items. This improves software map navigation dramatically. Upon entry into a menu, the title is displayed (such as *CAL*), and then the title disappears to make way for the actual menu item. However, the icon stays on.

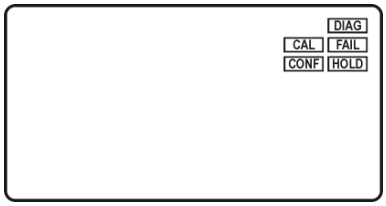

HOLD The *HOLD* icon indicates that the current output of the transmitter has been put into output hold. In this case, the output is locked to the last input value measured when the *HOLD* function was entered. *HOLD* values are retained even if the unit power is cycled.

FAIL The *FAIL* icon indicates that the system diagnostic function has detected a problem that requires immediate attention. This icon is automatically cleared once the problem has been resolved.

Relay Area A/B The relay area contains two icons that indicate the state of the system relays. Relay C is normally configured for *FAIL* indication, so it only displays on the lower *MEASURE* display line.



Software

The software of the Q46F is organized in an easy to follow menu-based system. All user settings are organized under five menu sections: *MEASURE, Calibration [CAL], Configuration [CONFIG], Control [CONTROL]* and *Diagnostics [DIAG]*.

NOTE: The default *MEASURE* menu is display-only and has no menu icon.

Software Navigation

Within the *CAL, CONFIG, CONTROL* and *DIAG* menu sections is a list of selectable items. After a menu section (such as *CONFIG*) has been selected using the **MENU** key, you can access the item list in this section by pressing either the **ENTER** key or the **UP** arrow key. The list items can then be scrolled through using the **UP** arrow key. When the last item is reached, the list wraps around and the first list item is shown again. The items in the menu sections are organized such that more frequently used functions are first, while more permanent function settings are later in the list. See *Figure 19 on page 28* for a visual description of the software.

Each list item allows a change to a stored system variable. List items are designed in one of two forms: simple single variable or multiple variable sequence. In the single variable format, you can quickly modify one parameter. For example, changing the display range from 2.000 to 20.00. In the multiple variable sequence, variables are changed as the result of some process. For example, the calibration of flu generally requires more than one piece of information to be entered. The majority of the menu items in the software consist of the single variable format type.

Any data that may be changed flashes. This flashing indicates *User Entry* mode and is initiated by pressing the **ENTER** key. The **UP** arrow key increases a flashing digit from 0…9. The **LEFT** arrow key moves the flashing digit from right to left. Once the change has been completed, pressing **ENTER** again stores the variable and stops the flashing. Pressing **ESC** aborts the change and also exits *User Entry* mode.

The starting (default) screen is always the *MEASURE* menu. The **UP** arrow key is used to select the desired display. From anywhere in this section you can press the **MENU** key to select one of the four menu sections.

The *UP* arrow icon next to all list items on the display is a reminder to scroll through the list using the **UP** arrow key.

To select a list item for modification, first select the proper menu with the **MENU** key. Scroll to the list item with the **UP** arrow key and then press the **ENTER** key. This tells the system that you want to perform a change on that item. For single item type screens, once you press the **ENTER** key, part or all of the variable begins to flash, indicating that you may modify that variable using the arrow keys. However, if the instrument is locked, the transmitter displays the message "Locked!" and does not enter *User Entry* mode. The instrument must be unlocked by entering the proper code value to allow authorized changes to user entered values. Once the variable has been reset, pressing the **ENTER** key again causes the change to be stored and the flashing to stop. The message "Accepted!" displays if the change is within pre-defined variable limits. If you decide not to modify the value after it has already been partially changed, pressing the **ESC** key aborts the modification and returns the entry to its original stored value.

In a menu item that is a multiple variable sequence type, once the **ENTER** key is pressed there may be several prompts and sequences that are run to complete the modification. The **ESC** key can always be used to abort the sequence without changing any stored variables.

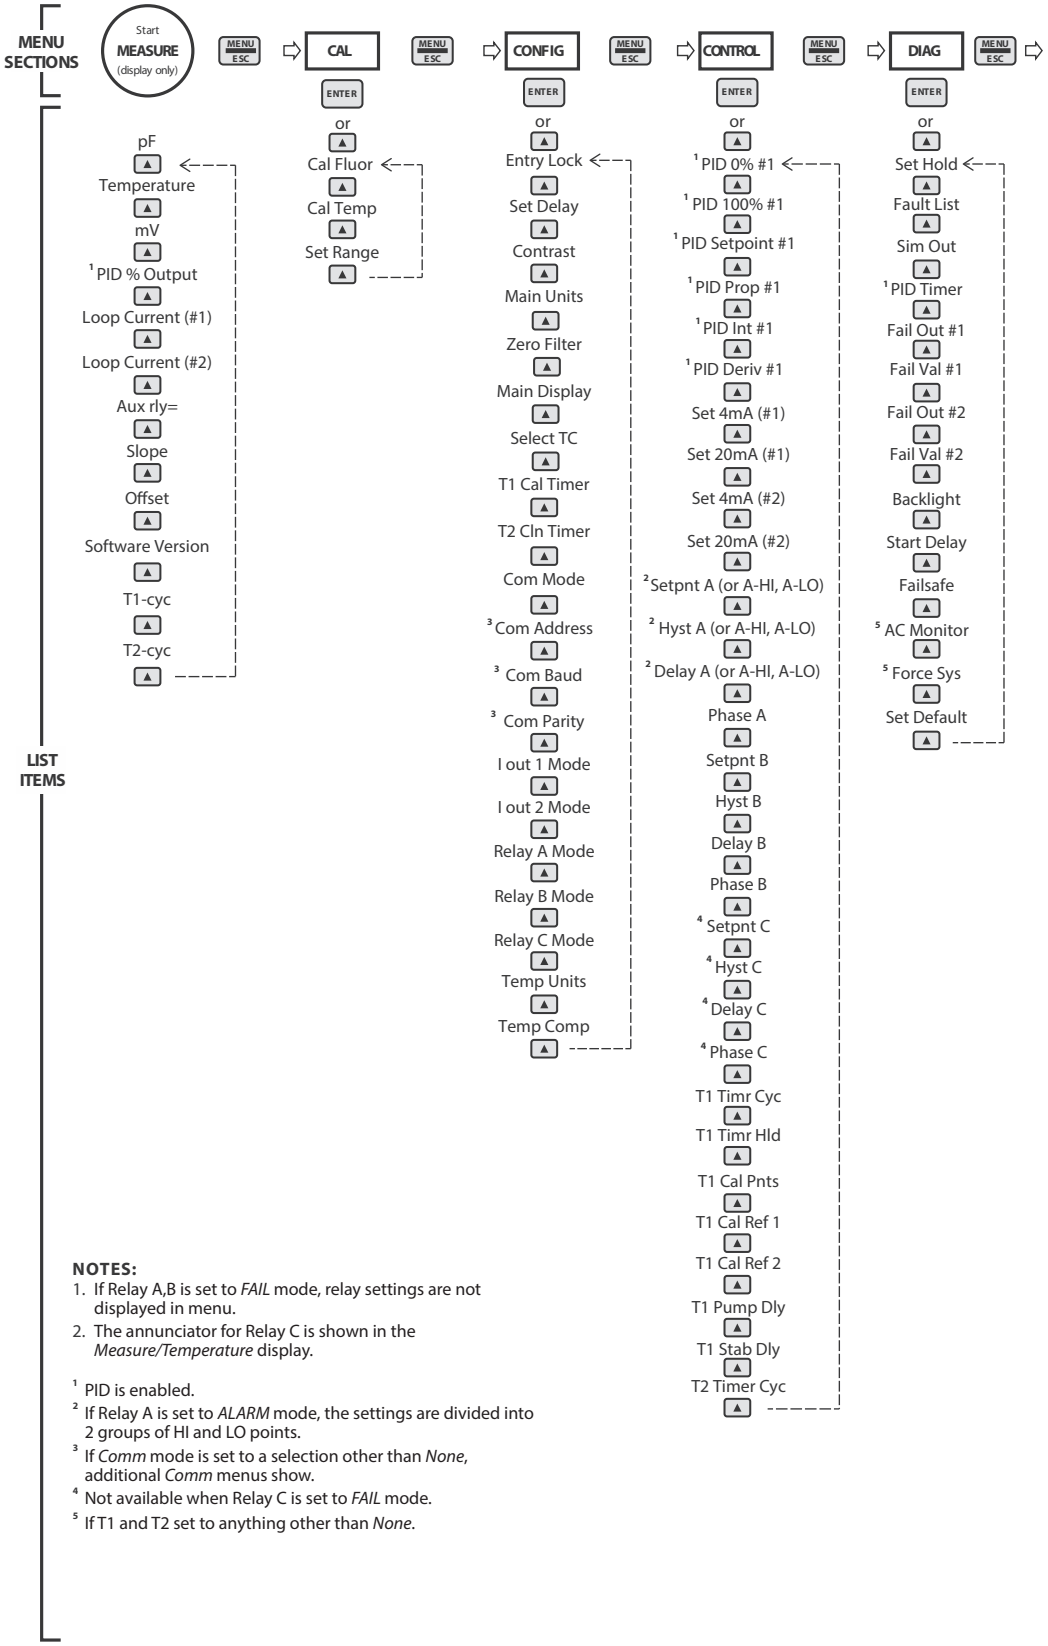


Figure 19: Software map

Measure Menu [MEASURE]

The default menu for the system is the display-only menu *MEASURE*. This menu is a display-only measurement menu and has no changeable list items. When left alone, the instrument automatically returns to this menu after approximately 30 minutes. While in the default menu, the UP arrow key allows you to scroll through the secondary variables on the lower line of the display. A brief description of the fields in the basic transmitter version is as follows:

Transmitter Measure Screens

pF	Similar to pH but using F^- concentration. Calculated by –log [F-].
25.7° C	Temperature display. Can be displayed in °C or °F, depending on user selection. A small "m" on the left side of the screen indicates the transmitter has automatically jumped to a manual 25° C setting due to a failure with the temperature signal input.
–32.3 mV	Raw sensor potential. Useful for diagnosing problems.
100% 20.00 mA	PID status screen (if enabled). Shows the present controller output level on left, and actual transmitter current on the right. The controller can be placed in manual while viewing this screen by pressing and holding the **ENTER** key for 5 seconds until a small flashing "m" appears on the screen. At this point, the controller output can be adjusted up or down using the **UP** and **LEFT** arrow keys. To return to automatic operation, press and hold the **ENTER** key for 5 seconds and the "m" will disappear.
4.00 mA	Analyzer output current #1.
20.00 mA	Analyzer output current #2.
Slope = 100%	Sensor output response vs. ideal calibration. This value updates after each calibration. As the sensor ages, the slope reading decays indicating sensor aging. Useful for resolving sensor problems.
Offset = 0.0 mV	Calculated value that indicates the theoretical mV value that would be generated at 0 ppm fluoride. Since selective ion sensors do not actually respond down to dead zero, this value displays simply to track sensor stability.
Q46F vX.XX	Transmitter software version number.
T1-cyc	Time remaining until next flow cell auto-calibration cycle.
T2-cyc	Time remaining until next flow cell auto-clear cycle. This removes air bubbles from the face of the fluoride electrode.

NOTE: To actuate a display test (all segments ON), press and hold the **ENTER** key while viewing the model/version number on the lower line of the display.
To manually activate an auto-calibration or auto-clear cycle, hold the ENTER key while viewing either of the T-cyc values.

The *MEASURE* screens are intended to be used as a quick means of looking up critical values during operation or troubleshooting.

Calibration Menu [CAL]

The *Calibration* menu contains items for frequent calibration of user parameters. There are three items in this list: *Cal Fluoride, Cal Temp and Set Range*.

Cal	The fluoride calibration function allows you to adjust the transmitter zero/span reading to match a reference solution or to set the sensor zero point. See *"Calibration" on page 37* for more details.
Cal Temp	The temperature calibration function allows you to adjust the offset of the temperature response by a small factor of ±5° C. The temperature input is factory calibrated to very high accuracy; however, long cable lengths and junction boxes may degrade the accuracy of the temperature measurement in some extreme situations. Hence, this feature is provided as an adjustment. See *"Calibration" on page 37* for more details.
Set Range	This function allows you to set the transmitter display range to a specific application. When set, all ouput functions use this display range to establish configuration settings. Press **ENTER** to initiate *User Entry* mode and the value flashes. Use the arrow keys to modify the value; available ranges include 20.00 ppm, 200.0 ppm and 2000 ppm. Press **ENTER** to store the new value.

Configuration Menu [CONFIG]

The *Configuration* menu contains all of the general user settings:

Entry Lock This function allows you to lock out unauthorized tampering with instrument settings. All settings may be viewed while the instrument is locked, but they cannot be modified. The *Entry Lock* feature is a toggle-type setting; that is, entering the correct code locks the transmitter and entering the correct code again unlocks it. The code is preset at a fixed value at 1469.

Press **ENTER** to initiate *User Entry* mode and the first digit flashes. Use the arrow keys to modify value. Press **ENTER** to toggle lock setting once code is correct. Incorrect codes do not change state of lock condition.

Set Delay The delay function sets the amount of damping on the instrument. This function allows you to apply a first order time delay function to the fluoride measurements being made. Both the display and the output value are affected by the degree of damping. Functions such as calibration are not affected by this parameter. The calibration routines contain their own filtering and stability monitoring functions to minimize the calibration timing.

Press **ENTER** to initiate *User Entry* mode, and the value flashes. Use the arrow keys to modify value; range is 0.1…9.9 minutes. Press **ENTER** to store the new value.

Contrast This function sets the contrast level for the display. The custom display is designed with a wide temperature range, Super-Twist Nematic (STN) fluid.

The STN display provides the highest possible contrast and widest viewing angle under all conditions. Contrast control of this type of display is generally not necessary, so contrast control is provided as a means for possible adjustment due to aging at extreme ranges. In addition, the display has an automatic temperature compensation network.

Press **ENTER** to initiate *User Entry* mode, and the value flashes. Use the arrow keys to modify the value; range is 0…8 (0 being lightest). Press **ENTER** to update and store the new value.

Main Units This function allows you to select either ppm or mg/L.

Zero Filter This function forces the reading to zero when reading is below the entered value. For example, if the entered value were 0.002 the display at 0…0019 would indicate 0.000. This feature is useful in blanking out zero noise.

Main Display This function allows you to change the measurement in the primary display area. You may select between fluoride or output current. Using this function, you may choose to put output current in the main display area and fluoride on the secondary, lower line of the display. Press ENTER to initiate user entry mode, and the entire value will flash. Use the UP arrow key to modify the desired display value. Press ENTER to store the new value.

Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the arrow keys to modify the desired display valuePress **ENTER** to store the new value.

Select TC This function allows you to select either 100 or 1000 Ohm RTD for temperature compensation.

T1 Cal Tmr This function allows you to turn on/off the auto-calibration routine.

T2 Cln Tmr This function allows you to turn on/off the flow cell auto-purge routine. The purge system drops the sample level just below the level of the sensor tip to eliminate bubbles that can accumulate there.

Com Mode Sets digital communication mode of analyzer. Optional digital communication card must be plugged into the power supply slot for this function to work. Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired value; selections include *1* – None, *2* – P-DP for Profibus DP, *3* – Modbus or *4* – Ethernet IP. Press **ENTER** to store the new value.

Com Address Sets bus address for digital communication mode of analyzer. Optional digital communication card must be plugged into the power supply slot for this function to work. Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired value. Range is 1…125. Press **ENTER** to store the value.

Com Baud Sets communications baud rate.

Com Parity Sets the partity for the digital communications.

Iout#1 Mode This function sets analog output #1 to either track fluoride (default) or enables the PID controller to operate on the fluoride input. Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired value; selections include *1-ppm* for fluoride tracking or *2-PID* for fluoride PID control. Press **ENTER** to store the new value.

*** Iout#2 Mode** This function sets analog output #2 for either temperature or fluoride. Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired value; selections include *1-ppm* for temperature or *2-ppm* for fluoride. Press **ENTER** to store the new value.

*** Relay A Mode** *Relay A* can be used in three different ways: as a setpoint control, as a fail alarm or as a HI-LO alarm band. The three settings for *Relay A* mode are *CON*, *FAIL* and *AL*.

The *CON* setting enables normal control operation for *Relay A*, with settings for setpoint, hysteresis, delay and phasing appearing in the *CONFIG* menu automatically. See *Figure 20 on page 33* for further details.

The *FAIL* setting enables the fail alarm mode for *Relay A*. *Relay A* then trips on any condition that causes the *FAIL* icon to be displayed on the LCD. Using this mode allows you to send alarm indications to other remote devices.

The *AL* setting allows two setpoints to be selected for the same relay, producing a HI-LO alarm band. In this mode, *Relay A* trips inside or outside of the band, depending upon the phase selected. See *Figure 21 on page 34* for further details.

Relay B Mode
Relay C Mode *Relay B* and *Relay C (Relay B/C)* can be used in two ways: as a setpoint control or as an alarm. The two settings for *Relay B/C* modes are *CON* and *FAIL*.

The *CON* setting enables normal setpoint operation for *Relay B/C*. *Relay B/C* then operates identically to *Relay A*, with settings for setpoint, hysteresis, delay and phasing appearing in the *CONFIG* menu automatically.

The *FAIL* setting enables the fail alarm mode for *Relay B/C*. *Relay B/C* then trips on any condition that causes the *FAIL* icon to be displayed on the LCD.

NOTE: The *Relay C* indicator shows up only on the lower screen of the display next to the temperature reading. This is because the default setting for *Relay C* is the *FAIL* setting. Using this mode allows you to send alarm indications to other remote devices.

Temp Comp This function allows you to turn on/off the temperature compensation feature.

Control Menu [CONTROL]

The *Control* menu contains all of the output control user settings.

Set 4 mA
Set 20 mA
[Iout1=PPM]

These functions set the main 4 mA and 20 mA current loop #1 output points for the transmitter. The units that display depend on the selection made in the *CONFIG* menu for *Iout #1* mode. When the relay option board is installed, the units also display *#1* or *#2* since there are two analog outputs present.

The value stored for the 4 mA point may be higher or lower than the value stored for the 20 mA point. The entry values are limited to values within the range specified in "Set Range," and the 4 mA and the 20 mA point must be separated by at least 1% of this range. Use the **LEFT** arrow key to select the first digit to be modified. Then use the **UP** and **LEFT** arrow keys to select the desired numerical value. Press **ENTER** to store the new value.

Set PID 0%
Set PID 100%
[Iout1=PID]

If the PID is enabled, this function sets the minimum and maximum controller end points. Unlike the standard 4…20 mA output, the controller does not "scale" output values across the endpoints. Rather, the endpoints determine where the controller would normally force minimum or maximum output in an attempt to recover the setpoint (even though the controller can achieve 0% or 100% anywhere within the range).

If the 0% point is lower than the 100% point, then the controller action "reverse" acts. That is, the output of the controller increases if the measured value is less than the setpoint, and the output decreases if the measured value is larger than the setpoint. Flipping the stored values in these points reverses the action of the controller to "direct" mode.

The entry value is limited to a value within the range specified in "Set Range," and the 0% and the 100% point must be separated by at least 1% of this range. Use the **LEFT** arrow key to select the first digit to be modified. Then use the **UP** and **LEFT** arrow keys to select the desired numerical value. Press **ENTER** to store the new value.

PID Setpnt
[Iout1=PID]

The measured value that the controller is attempting to maintain by adjusting output value. It is the nature of the PID controller that it never actually gets to the exact value and stops. The controller is continually making smaller and smaller adjustments as the measured value gets near the setpoint.

PID Prop
[Iout1=PID]

Proportional gain factor. The proportional gain value is a multiplier on the controller error (difference between measured value and setpoint value). Increasing this value makes the controller more responsive.

PID Int
[Iout1=PID]

Integral is the number of "repeats-per-minute" of the action of the controller. It is the number of times per minute that the controller acts on the input error. At a setting of 2.0 rpm, there are two repeats every minute. If the integral is set to zero, a fixed offset value is added to the controller (manual reset). Increasing this value makes the controller more responsive.

PID Deriv
[Iout1=PID]

Derivative is a second order implementation of Integral, used to suppress "second-order" effects from process variables. These variables may include items like pumps or mixers that may have minor impacts on the measured value. The derivative factor is rarely used and therefore, it is best in most cases to leave it at the default value. Increasing this value makes the controller more responsive.

*** Set 4 mA (#2)**
*** Set 20 mA (#2)**
[Temp/PPM]

These functions set the second 4 mA and 20 mA current loop output points for the transmitter. The output may be set to track temperature (default) but may be set to ppm if preferred. The values stored for the 4 mA point may be higher or lower than the value stored for the 20 mA point.

The entry value is limited to a value between 0…55° C if it is set for temperature. The 4 mA and the 20 mA point must be at least 20 units away from each other. Press **ENTER** to initiate *User Entry* mode, and the value flashes. Use the arrow keys to modify value. Press **ENTER** to store the new value.

NOTE: If the temperature units change between °C and °F (see *"Temp Comp" on page 31*), the default settings for this output change between 100° C and 212° F accordingly.

*** A Setpoint**

This function establishes the trip point for *Relay A*. The entry value is limited to a value within the range specified in "Set Range." Use the **LEFT** arrow key to select the first digit to be modified. Then use the **UP** and **LEFT** arrow keys to select the desired numerical value. Press **ENTER** to store the new value.

*** A Hysteresis** This function establishes the hysteresis, or "deadband," for *Relay A*. Hysteresis is most often used to control relay chattering; however, it may also be used in control schemes to separate the ON/OFF trip points of the relay. Press **ENTER** to initiate *User Entry* mode, and the value flashes. Use the arrow keys to modify value. Press **ENTER** to store the new value.

*** A Delay** This function places an additional amount of time delay on the trip point for *Relay A*. This delay is in addition to the main delay setting for the controller. The entry value is limited to a value between 0…999 seconds. Press **ENTER** to initiate *User Entry* mode, and the value flashes. Use the arrow keys to modify value; range is 0…999 seconds. Press **ENTER** to store the new value.

*** A Phasing** This function establishes the direction of the relay trip. When phase is HI, the relay operates in a direct mode. Therefore, the relay energizes and the LCD indicator illuminates when the value **exceeds** the setpoint. When the phase is LO, the relay energizes and the LCD indicator illuminates when the fluoride level drops **below** the setpoint. The failsafe setting does have an impact on this logic. The description here assumes the failsafe setting is OFF. Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired value; selections include *HI* for direct operation or *LO* for reverse operation. Press **ENTER** to store the new value. *Figure 20* is a visual description of a typical control relay application.


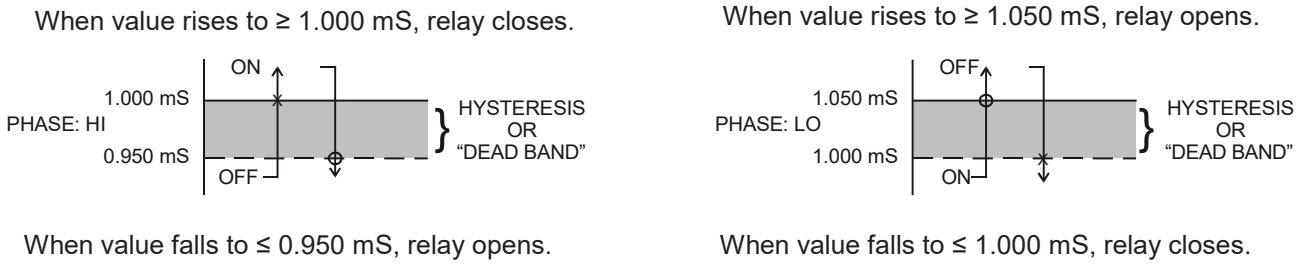


Figure 20: Control relay example

*** Setpnt A-HI**
*** Hyst A-HI**
*** Delay A-HI**
*** Setpnt A-LO**
*** Hyst A-LO**
*** Delay A-LO**


If *Relay A* mode is set to *Alarm* mode, *AL*, then the following settings automatically appear in the *CONFIG* menu list. In this mode, two setpoints can be selected on the same relay to create an alarm band. *Phase HI* selection causes the relay to energize outside of the band, and *Phase LO* causes the relay to energize inside of the band. This feature enables one relay to be used as a control relay while the other is used as a HI-LO Alarm relay at the same time. *Setpoint A-LO* must be set lower than *Setpoint A-HI*. When *AL* mode is first selected, *Setpoint A-LO* defaults to 0. *Figure 21* is a visual description of a typical alarm relay application.

When value rises to ≥ 1.000 mS, relay closes until value falls back to ≤ 0.950 mS.

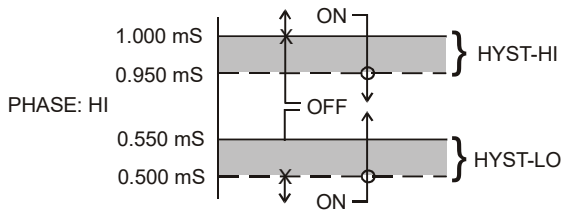

When value falls to ≤ 0.500 mS, relay closes until value rises back to ≥ 0.550 mS.

When value falls to ≤ 1.000 mS, relay closes until value rises back to ≥ 1.050 mS.

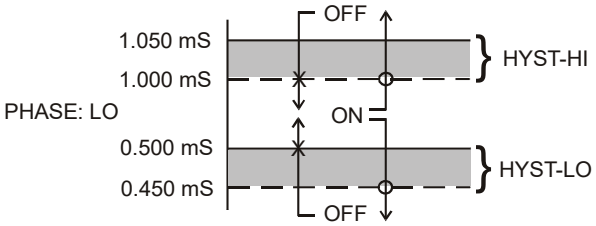

When value rises to ≥ 0.500 mS, relay closes until value falls back to ≤ 0.450 mS.

Settings:						
	Setpoint	A-HI:	1.000 mS	Setpoint	A-LO:	0.500 mS
	Hyst	A-HI:	0.050	Hyst	A-LO:	0.050
	Delay	A-HI:	000	Delay	A-LO:	000

Figure 21: Alarm relay example

*** B Setpoint**
*** B Hysteresis**
*** B Delay**
*** B Phasing**

If *Relay B* mode is set to *CON* (see **Relay B Mode** on page 31), then *Relay B* functions identically to *Relay A*. *Relay B* settings appear in the *CONFIG* menu list automatically.

*** C Setpoint**
*** C Hysteresis**
*** C Delay**
*** C Phasing**

If *Relay C* mode is set to *CON* (see **Relay C Mode** on page 31), then *Relay C* functions identically to *Relay A*. *Relay C* settings appear in the *CONFIG* menu list automatically.

T1 Timr Cyc — This is the cyclic time for the auto-calibration to occur. Values range from 1…999 hours. The default is 24 hours.

T1 Timr Hld — This is the time delay to keep outputs held after the entire auto-calibration cycle is complete. The default is 1 minute.

T1 Cal Pnts — The number of calibration points to be used in auto-calibration. 1 or 2 points selectable. The default is 2 points.

T1 Cal Ref1 — Value of the first calibration standard. Values range from 1.00…20.00 ppm. The default is 1.00 ppm.

T1 Cal Ref2 — Value of the second calibration standard. Values range from 1.00…20.00 ppm. The default is 10.00 ppm.

T1 Pump Dly — This is the amount of time that a standard is pumped prior to checking for stability of the reading on that standard. The default is 1 minute.

T1 Stab Dly — This is the time period over which a standard must be stable in order for the reading to be accepted. The default is 0.3 minutes.

T2 Timr Cyc — This is the cyclic time for automatic clearing of air bubbles that may collect on the face of the fluoride electrode. The default is 1 hour.

Diagnostics Menu [DIAG]

The *Diagnostics* menu contains all of the user settings that are specific to the system diagnostic functions, as well as functions that aid in troubleshooting application problems.

Set Hold

The *Set Hold* function locks the voltage output values on the present process value. This function can be used prior to calibration or when removing the sensor from the process to hold the output in a known state. Once *HOLD* is released, the outputs return to their normal state of following the process input. The transfer out of *HOLD* is bumpless on both analog outputs - that is, the transfer occurs in a smooth manner rather than as an abrupt change. An icon on the display indicates the *HOLD* state, and the *HOLD* state is retained even if power is cycled.

Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired value, selections are **ON** for engaging the *HOLD* function and **OFF** to disengage the function. Press **ENTER** to store the new value.

NOTE: The *Set Hold* function can also hold at an output value that you specify. To customize the *HOLD* value, turn the *HOLD* function **ON**. Press the **ESC** key to go to the *DIAG* menu, and then scroll to *Sim Output* using the **UP** arrow key. Press **ENTER**. Follow the **Sim Out** instructions below.

Fault List

The *Fault List* screen is a read-only screen that allows you to display the cause of the highest priority failure. The screen indicates the number of faults present in the system and displays a message detailing the highest priority fault present.

NOTE: Some faults can result in multiple displayed failures due to the high number of internal tests occurring. As faults are corrected, they are immediately cleared.

Faults are not stored; therefore, they are immediately removed if power is cycled. If the problem causing the faults still exists, however, faults display again after power is re-applied and a period of time elapses during which the diagnostic system re-detects them. The exception to this rule is the calibration failure. When a calibration fails, no corrupt data is stored. Therefore, the system continues to function normally on the data that was present before the calibration was attempted.

After 30 minutes or if power to the transmitter is cycled, the failure for calibration clears until calibration is attempted again. If the problem still exists, the calibration failure reoccurs.

Press **ENTER** to initiate view of the highest priority failure. The display automatically returns to normal after a few seconds.

Sim Out

The *Sim Out* function allows you to simulate the fluoride level of the instrument in the user-selected display range. You enter a ppm value directly onto the screen, and the output responds as if it were actually receiving the signal from the sensor. This allows you to check the function of attached monitoring equipment during setup or troubleshooting. Escaping this screen returns the unit to normal operation.

Press **ENTER** to initiate the *User Entry* mode, and the rightmost digit of the value flashes. Use the arrow keys to modify desired value. The starting display value is the last read value of the input. The output is under control of the *SIM* screen until the **ESC** key is pressed.

NOTE: If the *HOLD* function is engaged before the *Sim Output* function is engaged, the simulated output remains the same even when the **ESC** key is pressed. Disengage the *HOLD* function to return to normal output.

PID Timer

This functions sets a timer to monitor the amount of time the PID controller remains at 0% or 100%. This function only appears if the PID controller is enabled. If the timer value is set to any number other than zero, a *FAIL* condition occurs if the PID controller remains at 0% or 100% for the timer value. If one of the relays is set to *FAIL* mode, this failure condition can be signaled by a changing relay contact.

Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify desired value; range of value is 0…9999 seconds. Press **ENTER** to store the new value.

Fail Out #1 This function enables you to define a specified value that the main current output goes to under fault conditions. When the relay option board is installed, the display reads *Fail Out #1*. When enabled to **ON**, the output may be forced to the current value set in *Fail Val* (next item). With the *Fail Out* setting of **ON**, and a *Fail Val* setting of 6.5 mA, any alarm condition causes the current loop output to drop outside the normal operating range to exactly 6.5 mA, indicating a system failure that requires attention.

Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired value—selections are *ON* or *OFF*. Press **ENTER** to store the new value.

Fail Val #1 Sets the output failure value for Iout#1. When *Fail Out #1* is set to **ON**, this function sets value of the current loop under a *FAIL* condition. The output may be forced to any current value between 4…20 mA.

Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify desired value; selections are between 4 mA and 20 mA. Press **ENTER** to store the new value.

Fail Out #2 This function sets the *FAIL* mode of current loop output #2 under a *FAIL* condition. The settings and operation are identical to *Fail Out* for output #1.

Fail Val #2 This function sets the value of current loop output #2 under a *FAIL* condition. The settings and operation are identical to *Fail Val* for output #1.

Backlight This function has three options: *ON* – On all the time, *OFF* – Off all the time, *AL* – Alarm (default). This function flashes the backlight on and off whenever the *FAIL* icon displays.

Failsafe This function allows you to set the optional system relays to a failsafe condition. In a failsafe condition, the relay logic is reversed so that the relay is electrically energized in a normal operating state. By doing this, the relay does not only change state when, for example, a fluoride limit is exceeded, but also when power is lost to the controller.

When failsafe is selected to be **ON**, the normally-open contacts of the relay close during normal operation. In an attempt to make this configuration less confusing, the LCD icon logic is reversed with this setting, and the icon is **OFF** under this normal condition. Therefore, when the trip condition occurs, the closed NO contacts open (relay de-energized), and the LCD icon illuminates. In addition, a power fail would also cause the contacts to open.

Start Delay This function is designed to minimize control or alarm issues arising from temporary power loss. When power goes down, the monitor records the analog output values, the status of relays and PID functions. When power is restored, the analog values and relays are held at the pre-power loss values for a defined period of time. This "start delay" may be programmed for periods from 0…9.9 minutes. This function is set to 0.0 minutes by default, and if desired, you must activate it by setting a positive time value.

AC Monitor **NOTE:** AC Monitor stands for Auto-Cal Monitor. Under normal conditions, the analog outputs are held constant during an automatic calibration. If AC Monitor is turned to ON, output #1 is not inhibited. The output tracks the fluoride value as it changes during the calibration cycle. This allows a user to record the calibration as it occurs.

Force Sys This function allows for manual operation of the 3 solenoid valves that control the automatic calibration system. When **ENTER** is pressed, the NO flashes. Press the **UP** arrow key to select either *S1*, *S2* or *CLn*. Select *S1* and press **ENTER** to activate the main selector valve, allowing the 1 ppm standard to flow into the system. The measured fluoride value is displayed on the lower line so you can use this function to manually feed the standard and observe whether the value is correct. Select *S2* to activate both the main valve and the standards selector valve, causing the 10 ppm standard to flow into the system. Select *CLn* to activate the valve below the flow cell to test the air purge function.

Set Default The *Set Default* function allows you to return the instrument back to factory default data for all user settings. It is intended to be used as a last resort troubleshooting procedure. All user settings are returned to the original factory values. Hidden factory calibration data remains unchanged.

Press **ENTER** to initiate *User Entry* mode; the value *NO* flashes. Use the **UP** arrow key to modify value to *YES*, then press **ENTER** to reload defaults.

CALIBRATION

Calibration

Calibration of a fluoride analyzer requires the use of two standards with about 1 decade (10X) concentration difference. For many applications, values of 1 and 10 ppm are used. However, high range applications may require the use of 10 and 100 ppm or other values depending on the application. Prior to attempting calibration of a Q46F system, be sure that the sensor has been filled with electrolyte, that the buffer is being pumped into the sample and that the analyzer has been running for 60 minutes.

Q46F analyzers are designed to do an automatic 2-point calibration. Gallon bottles containing 1 and 10 ppm fluoride should be connected to the instrument using the red and blue tubing supplied for that purpose. These tubes must be positioned properly in the pinch valve used to select each standard during the calibration cycle. The pinch valve has the red tube in the normally closed (front) position and the blue tube in the normally open (rear) position.

Automatic Calibration

Prior to calibration, check the following settings:

1. In the *Configuration* menu, be sure that *T1 Cal Tmr* is turned ON.
2. In the *Control* menu, verify the following settings are set.

T1 Timr Cyc	Set to 24 hours (or other desired calibration frequency).
T1 Timr Hld	Set to 1 minute.
T1 Cal Pnts	Normally set for 2-point calibration. Can be set for 1-point if desired.
T1 Cal Ref1	Set to 1.00 ppm. Set to different value if desired.
T1 Cal Ref2	Set to 10.00 ppm. Set to 10x Ref1 if using other than 1 and 10 ppm.
T1 Pump Dly	Normally set to 1 minute. Set to longer period if desired.
T1 Stab Dly	Normally set to 0.3 minutes. Set to longer period for additional stability check.

To activate the calibration cycle from the *Measure* menu, press the **UP** arrow until the display indicates "T1 cyc – XX.Xh" where XX.X is the number of hours until the next automatic calibration. With the T1 display showing, press and hold **ENTER** for about 3 seconds. This starts the cycle.

When the cycle starts, the pinch valve directly below the sensor flow cell opens for approximately 3 seconds to remove any bubbles that might have accumulated on the face of the sensor. Shortly after that, the larger pinch valve directly below the sample pump cycles, closing off the normal sample and allowing 1 ppm standard to flow. The display counts down the time until the analyzer begins monitoring the sensor stability at 1 ppm. If the sensor output is stable for the time period programmed for stability testing, then the standards selector valve switches to the 10 ppm standard. Once the 10 ppm standard is stable, the analyzer calculates an offset and slope value that indicates the performance of the sensor.

Manual Calibration

If you prefer to do a manual calibration instead of using the automatic system, disconnect the pump inlet tube from the inlet chamber. The connection is a luer fitting on the cover of the inlet overflow as shown in *Figure 17 on page 23*. An extension tube that mates with the luer fitting is provided so that standards can be fed through the normal pump inlet.

After the extension tube has been connected, remove the rubber stoppers from the top of the 1 and 10 ppm standards bottles so that your extension tube can be inserted into these bottles. Start by putting the extension tube into the 1 ppm standard, and then proceed as follows:

1. Press the **Menu** key once to access the *Calibration* menu. Press the **UP** arrow to display "Cal Fluor".
2. Press **ENTER** and the display indicates "2-point" calibration.
3. Press **ENTER** a second time. The display then asks for standard number 1. Since 1 ppm is already running through the system, press **ENTER**. The system begins checking for the stability of the 1 ppm sensor signal.
4. When the monitor determines that the signal is stable, the display switches to a concentration number and the first digit flashes. Assuming you have a 1 ppm standard running, use the **UP** arrow to set the first digit to 1. Then use the **LEFT** arrow to move to the second digit and set it to 0. Move left again and set the value to 0. The display now reads 1.00. Press **ENTER** to store that value.
5. Next, the display prompts for the second standard. Move the inlet tube from the 1 ppm to the 10 ppm standard, allow it to run for at least 1 minute before doing anything and then press **ENTER**.
6. The monitor checks for stability. After sensing a stable signal, you are prompted to enter the second reference value. For a 10 ppm standard, enter 10.00 using the same procedure as the previous step.
7. After 10.00 is set, press **ENTER** to complete the manual calibration.
8. Disconnect the extension tube and attach the pump inlet fitting to the overflow to return to normal operation.

1-Point Manual Calibration

A separate test kit can be used to calibrate the monitor to a value determined. This can be done easily after completing a 2-point calibration in order to establish the slope of the sensor. If you prefer to calibrate to a lab value and simply use the mixed 1 ppm and 10 ppm standards to establish the slope, first start the automatic calibration cycle and allow it to go through a complete calibration cycle. Then proceed as follows:

1. Collect a 300…500 mL container of sample. Take a portion of that sample and test it using the colorimetric fluoride test kit or lab fluoride electrode.
2. Disconnect the sample inlet line and connect the extension tube. Place the end of the extension tube into the sample container.
3. Press the **Menu** key to go to the "Cal Fluor" display and then press **ENTER**.
4. When the "2-point" prompt appears, press the **UP** arrow key to change to *1-point* and then press **ENTER**. The monitor displays a prompt for the reference solution. Press **ENTER**.
5. When the concentration is displayed after stability testing, adjust the value on the display to the value determined by the lab test. Press **ENTER**.
6. The 1-point offset calibration is complete.
7. Disconnect your extension tube and reconnect the sample inlet to the overflow fitting.

Temperature Calibration

The temperature calibration sequence is essentially a 1-point offset calibration that allows adjustments of approximately ±5° C.

The temperature element is measuring the temperature of the sample inside the air stripping chamber. This temperature may or may not be close to the temperature of the water in the inlet overflow. Heat generated inside the chemistry module can sometimes cause the displayed temperature to be above the actual sample temperature. While temperature calibration is possible, it is not recommended. To calibrate the temperature system, follow the steps below.

1. Scroll to the *CAL* menu section using the **MENU** key and press **ENTER** or the **UP** arrow key.
2. Press the **UP** arrow key until "Cal Temp" displays.
3. Press **ENTER**. The message "Place sensor in solution then press ENTER" displays. Press **ENTER** to begin the calibration sequence.
4. The calibration data gathering process begins. The message "Wait" flashes as data is accumulated and analyzed. The "°C" or "°F" symbol may flash periodically if the reading is too unstable.
5. The message "Adjust value - press ENTER" displays, and the rightmost digit begins to flash, indicating that the value can be modified. Using the **UP** and **LEFT** arrow keys, modify the value to your measured value. Adjustments up to ±5° C from the factory calibrated temperature are allowed. Press **ENTER**.

Once completed, the display indicates "PASS" or "FAIL". If the unit fails, the temperature adjustment may be out of range, the sensor may not have achieved complete temperature equilibrium or there may be a problem with the temperature element. In the event of calibration failure, it is recommended to attempt the calibration again immediately.

PID CONTROLLER DETAILS

PID Description

PID control, like many other control schemes, is used in chemical control to improve the efficiency of chemical addition or control. By properly tuning the control loop that controls chemical addition, only the amount of chemical that is truly required is added to the system, saving money. The savings can be substantial when compared to a system that may be simply adding chemical at a constant rate to maintain some minimal addition under even the worst case conditions. The PID output controller is highly advantageous over simple control schemes that just use direct (proportional only) 4…20 mA output connections for control, since the PID controller can automatically adjust the "rate" of recovery based on the error between the setpoint and the measured value–which can be a substantial efficiency improvement.

The PID controller is basically designed to provide a "servo" action on the 4…20 mA output to control a process. If you require that a measured process stay as close as possible to a specific setpoint value, the controller output changes from 0…100% in an effort to keep the process at the setpoint. To affect this control, the controller must be used with properly selected control elements (valves or proper chemicals, for example) that enable the controller to add or subtract chemical rapidly enough. This is not only specific to pumps and valves, but also to line sizes and delays in the system, for example.

This section is included to give a brief description of tuning details for the PID controller, and is not intended to be an exhaustive analysis of the complexities of PID loop tuning. Numerous sources are available for specialized methods of tuning that are appropriate for a specific application.

PID Algorithm

As most users of PID controllers realize, the terminology for the actual algorithm terms and even the algorithms themselves can vary between different manufacturers. This is important to recognize as early as possible, since just plugging in similar values from one controller into another can result in dramatically different results. There are various basic forms of PID algorithms that are commonly seen. The implementation here is the most common version (the ISA algorithm, commonly referred to as the "ideal" algorithm).

PID Equation

$$output = P\left[e(t) + \frac{1}{I}\int e(t)d(t) + D\frac{de(t)}{dt}\right]$$

Where:

output =	controller output
P =	proportional gain
I =	integral gain
D =	derivative gain
t =	time
e(t) =	controller error (e=measured variable – setpoint)

The most notable feature of the algorithm is the fact the proportional gain term affects all components directly (unlike some other algorithms—like the "series" form). If a pre-existing controller uses the same form of the algorithm shown above, it is likely similar settings can be made if the units on the settings are exactly the same. Be careful of this, as many times the units are the reciprocals of each other (for example, reps-per-min or sec-per-rep).

PID stands for "proportional, integral, derivative." These terms describe the three elements of the complete controller action, and each contributes a specific reaction in the control process. The PID controller is designed to be primarily used in a "closed-loop" control scheme, where the output of the controller directly affects the input through some control device, such as a pump or valve, for example.

Although the three components of the PID are described in the setting area *"Control Menu" on page 34*, here are more general descriptions of what each of the PID elements contribute to the overall action of the controller.

P Proportional gain. With no *I* or *D* contribution, the controller output is simply a factor of the proportional gain multiplied by the input error (difference between the measured input and the controller setpoint). Because a typical chemical control loop cannot react instantaneously to a correction signal, proportional gain is typically not efficient by itself–it must be combined with some integral action to be useful. Set the *P* term to a number between 2…4 to start. Higher numbers cause the controller action to be quicker.

I Integral gain. Integral gain is what allows the controller to eventually drive the input error to zero, providing accuracy to the control loop. It must be used to affect the accuracy in the servo action of the controller. Like proportional gain, increasing integral gain results in the control action happening quicker. Set the *I* term to a number between 3…5 to start (1…2 more than *P*). Like proportional gain, increasing the integral term causes the controller action to be quicker.

D Derivative gain. The addition of derivative control can be problematic in many applications because it greatly contributes to oscillatory behavior. In inherently slow chemical control processes, differential control is generally added in very small amounts to suppress erratic actions in the process that are non-continuous, such as pumps and valves clicking on and off. However, as a starting point for chemical process control, its best to leave the *D* term set to 0.

Based on these descriptions, the focus on tuning for chemical applications really only involves adjustment of *P* and *I* in most cases. However, increasing both increases the response of the controller. The difference is in the time of recovery. Although combinations of high *P*s and low *I*s appear to operate the same as combinations of low *P*s and high *I*s, there is a difference in rate of recovery and stability. Because of the way the algorithm is structured, large *P*s can have a larger impact to instability, because the proportional gain term impacts all the other terms directly. Therefore, keep proportional gain lower to start and increase integral gain to achieve the effect required.

Many of the classical tuning techniques have you start with all values at 0, and then increase the *P* term until oscillations occur. The *P* value is then reduced to 1/2 of the oscillatory value, and the *I* term is increased to give the desired response. This can be done with the Q46F controller, with the exception that the *I* term should start no lower than 1.0.

If it appears that even large amounts of integral gain (>20) do not appreciably increase the desired response, drop *I* back to about 1.0, and increase *P* by 1.00 and start increasing *I* again. In most chemical control schemes, *I* is approximately 3 times the value of *P*.

Classical PID Tuning

Unlike many high speed position applications where PID loops are commonly used, the chemical feed application employed by this instrument does not require intense mathematical exercise to determine tuning parameters for the PID. In fact, the risk of instability is far greater with overly tuned PID control schemes. In addition, many of the classical mathematical exercises can be damaging or wasteful in the use of chemicals when the process is bumped with large amounts of input error to seek a response curve. Because of this, the general adjustment guidelines described in *"PID Algorithm" on page 40* are sufficient for almost all application tuning for this instrument. Beyond this, many sources are available for classical tuning methods.

Manual PID Override Control

The Q46 *PID Output* function allows you to take manual control of the PID control signal. This is often useful when starting up a control loop or in the event that you wish to bump the system manually to measure system response time.

To access the manual PID control, you must be in the *MEASURE* mode of operation and you must have the PID output displayed on the lower line. This line indicates "XX.X% XX.X mA" with the X values simply indicating the current values. With this display on the screen, press and hold the **ENTER** key for about 5 seconds. A small "m" shows up between the % value and the mA value. This indicates you are now in *Manual* mode.

Once in manual, you may increase the PID output by pressing the **UP** arrow key or you may decrease the output by pressing the **LEFT** arrow key. This allows you to drive the PID output to any desired setting.

To revert to normal PID control, press and hold the **ENTER** key again until the "m" indicator disappears.

Common PID Pitfalls

The most common problem occurring in PID control applications involves the false belief that proper settings on only the PID controller can balance any process to an efficient level.

Close-loop control can only be effective if all elements in the loop are properly selected for the application and the process behavior is properly understood. Luckily, the nature of simple chemical control processes are generally slow in nature. Therefore, even a de-tuned controller (one that responds somewhat slow) can still provide substantial improvements to setpoint control. In fact, damaging oscillatory behavior is far more likely in tightly tuned controllers where you attempted to increase response too much.

When deciding on a PID control scheme, it is important to initially review all elements of the process. Sticking valves, undersized pumps or delays in reaction times associated with chemical addition can have a dramatic effect on the stability of the control loop. When controlling a chemical mix or reaction, the sensor should be placed in a location that ensures proper mixing or reaction time has occurred.

The easiest processes to control with closed-loop schemes are generally linear, and symmetrical, in nature. For example, controlling level in tank where the opening of valve for a fixed period of time corresponds linearly to the amount that flows into a tank. Chemical control processes can be more problematic when the nature of the setpoint value is nonlinear relative to the input of chemical added. For example, pH control of a process may appear linear only in a certain range of operation and become highly exponential at the extreme ranges of the measuring scale. In addition, if a chemical process is not symmetrical, that means it responds differentially to the addition and subtraction of chemical. It is important in these applications to study steady-state impact as well as step-change impact to process changes. In other words, once the process has apparently been tuned under normal operating conditions, you should attempt to force a dramatic change to the input to study how the output reacts. If this is difficult to do with the actual process input (the recommended method), you can place the control in manual at an extreme control point such as 5% or 95%, and release it in manual. The recovery should not be overly oscillatory. If so, the loop needs to be de-tuned to deal with that condition (reduce *P* and/or *I*).

SYSTEM MAINTENANCE

General

The Q46F/82 Auto-Chem fluoride system requires regular maintenance for reliable operation. Keep in mind that preventive maintenance on a regular schedule is much less troublesome than emergency maintenance that always seems to come at the wrong time.

Analyzer Maintenance

No unusual maintenance of the electronic monitor is required if installed according to the guidelines of this user manual. During operation, it is best to use only your finger to operate front panel keys. Using tools (especially sharp objects) to press front panel keys results in damage to the panel keys.

Sensor Maintenance

The primary maintenance for a fluoride sensor is to periodically add a small amount of electrolyte to the sensor. The body of the sensor is glass and it is easy to see the level of the internal solution. When it falls to about 60% full, add additional electrolyte using the pipette supplied with the sensor.

Over time, the response of the fluoride sensor can become sluggish or show excessive measurement drift due to adsorption of impurities on the face of the sensor. To clean the sensor of fats, oils and organics, gently rub the sensor tip with a cotton swab and ethyl alcohol. To remove inorganic residues, place the sensor tip in a 0.1 M HCl solution for 12 hours. Another recommended way to clean the sensor is using the polishing strip provided. Place the rougher side of the polishing strip facing up in the palm of your hand and put a few drops of distilled water on the strip. Press the face of the fluoride sensor onto the strip, rotating it back and forth to polish the fluoride crystal on the tip. Once polishing is done, rinse the face of the sensor with distilled water and then immerse the tip in a small amount of the 100 ppm fluoride standard for about 30 minutes.

If the fluoride system is ever shut down for a length of time, remove the sensor, rinse the sensor with de-ionized water, dry the face of the sensor and replace the protective cap. It is best to remove the internal filling solution as well, rinse with distilled water and then empty out the distilled water. Long periods of time with the sensor sitting in stagnant water can result in sensor failure.

Sample Pump Tube Replacement

Peristaltic pump tubing replacement is the most common maintenance required for the Auto-Chem system. The sample pump used in this system contains two different tubes, one for the inlet (left) side of the pump and one for the outlet (right) side of the pump. These tubes MUST be installed in the proper location or the system will not work.

The inlet tube has a slightly smaller I.D. than the outlet tube. This is necessary to ensure that the air stripping chamber does not fill with sample and force sample through the rest of the system.

Both inlet and outlet tubes are black. One spare tube of each size is provided in the spare parts kit. Spare tubing is available in packages of 5, and spare tubes are cut to the proper length at the factory. Be very careful to ensure that the I.D. of the tube used on the outlet is larger than the I.D. of the inlet tube. The difference is clear when comparing the two tubes side-by-side. Reversing the tube sizes on the pump will result in sample water being pumped through the parts of the system that should only see gas. Also note that the tube fittings on the inlet side are smaller than those on the outlet side. The spare parts kit contains 2 of each size.

To replace the sample pump tubing, perform the steps on the next page.

1. Remove the reagent pickup assembly from the reagent bottle and place it in a container of tap water. Allow the monitor to run for 30 minutes to make sure all the buffer is out of the system prior to maintenance.
2. Release the front panel latch and tilt the front panel forward. Raise the lever on the fuse holder to turn off power to the chemistry system. Then, return the front panel to normal position.
3. Release the pressure plates on each side of the pump so the sample and drain tubes drain into the overflow. Then disconnect the inlet and outlet tubing connections from both sides of the pump. See *Figure 22*.
4. Slide the tube holders out of the pump body and then pull the old tubes from barb end of the luer fittings.
5. Place one inlet tube and one outlet tube onto the proper sized fittings. Place the tube holders with the inlet tube onto the left side of the pump and place the tube holders with the outlet tube on the right side.
6. After the tube holders are in place, replace the pressure plates on each side of the pump.

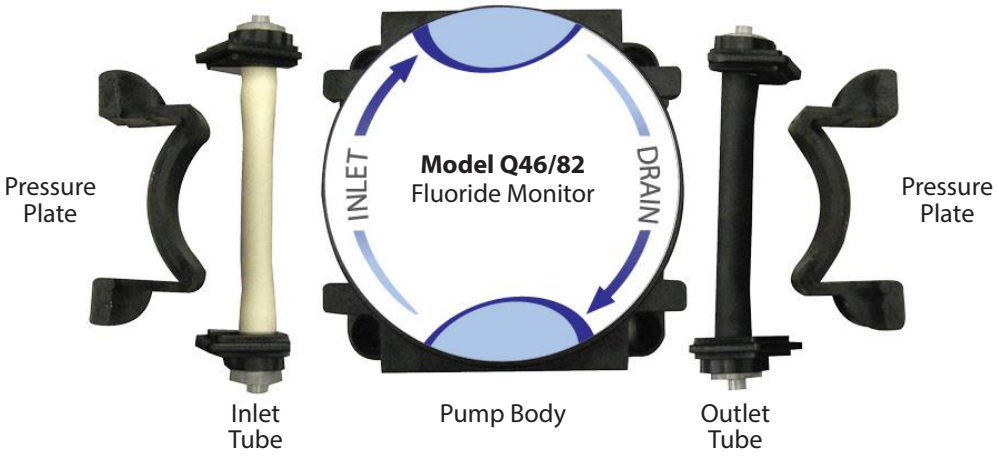


Figure 22: Sample pump exploded view

Reagent Pump Tube Replacement

Replacing the reagent pump tubes is similar to the procedure used for the sample pump. However, the replacement reagent tubes are supplied with the plastic tube fittings already attached. Do not pull the microbore tubing off the fittings as it is difficult to put back on.

The reagent tubing assemblies snap into the tube holders at the middle of the plastic tube fittings. Observe the position of these assemblies prior to removing the old ones.

TROUBLESHOOTING

General

The information included in this section is intended to be used in an attempt to quickly resolve an operational problem with the system. During any troubleshooting process, it saves the most time if the operator can first determine if the problem is related to the analyzer, sensor or some external source. Therefore, this section is organized from the approach of excluding any likely external sources, isolating the analyzer and finally isolating the sensor. If these procedures still do not resolve the operational problems, any results the operator may have noted here are very helpful when discussing the problem with the factory technical support group.

External Sources of Problems

To begin this process, review the connections of the system to all external connections.

1. Verify the analyzer is earth grounded. An earth ground connection MUST be present for the shielding systems in the electronics to be active. Grounded conduit provides no earth connection to the plastic enclosure, so an earth ground wiring connection must be made at the power input terminal strip.
2. Verify the proper power input is present (115 or 230V AC).
3. Verify the loads on any 4…20 mA outputs do not exceed the limits in the specifications. During troubleshooting, it is may be helpful to disconnect all these outputs and place wire-shorts across the terminals in the instrument to isolate the system and evaluate any problems which may be coming down the analog output connections.
4. Do not run sensor cables or analog output wiring in the same conduits as power wiring. If low voltage signal cables must come near power wiring, cross them at 90° to minimize coupling.
5. If rigid conduit has been run directly to the Q46 enclosure, check for signs that moisture has followed conduit into the enclosure.
6. Check for ground loops. Although the sensor is electrically isolated from the process water, high frequency sources of electrical noise may still cause erratic behavior in extreme conditions.
7. On relay-based systems, check the relay load that is connected to the relay contacts. Verify the load is within the contact rating of the relays. Relay contacts that have been used for higher power AC current loads may become unsuitable for very low signal DC loads later on because a small amount of pitting can form on the contacts. If the load is highly inductive (solenoids, motor starters, large aux relays), note that the contact rating derates to a lower level. Also, due to the large amount of energy present in circuits driving these types of loads when they are switched on an off, the relay wiring placement can result in electrical interference for other devices. This can be quickly resolved by moving wiring or by adding very inexpensive snubbers (such as Quencharcs) to the load.

Analyzer Tests

1. Disconnect power and completely disconnect all output wiring coming from the analyzer. Remove sensor wiring, relay wiring and analog output wiring. Re-apply power to the analyzer.
2. Use the "Simulate" feature to check operation of the analog outputs and relays contacts using a digital voltmeter (DVM).
3. Check TC drive circuit. Place a wire-short between the GREEN and RED sensor terminals. Using a DVM, measure the voltage between the BLACK and GREEN sensor terminals on the monitor to verify that the TC drive circuit is producing approximately 4.8…5.1V DC open-circuit. Remove DVM completely and connect a 100 Ohm resistor across the BLACK to GREEN terminals. The temperature reading on the front LCD should display approximately 0° C.

Display Messages

The Q46 Series instruments provide a number of diagnostic messages that indicate problems during normal operation and calibration. These messages appear as prompts on the secondary line of the display or as items on the *Fault List*.

Message	Description	Possible Correction
Max is 200	Entry failed, maximum user value allowed is 200.	Reduce value to ≤ 200.
Min is 200	Entry failed, minimum value allowed is 200.	Increase value to ≥ 200.
Cal Unstable	Calibration problem, data too unstable to calibrate. Icons do not stop flashing if data is too unstable. User can bypass by pressing **ENTER**.	Check to see that a stable standard is in use. If sample is stable, verify that sample from the drain tube is pH < 4. Replace sensor is necessary.
Out of Range	Input value is outside selected range of the specific list item being configured.	Check manual for limits of the function to be configured.
Locked!	Transmitter security setting is locked.	Enter security code to allow modifications to settings.
Unlocked!	Transmitter security has just been unlocked.	Displayed just after security code has been entered.
Offset High	The sensor zero offset point is out of the acceptable range of –40…40 mV.	Check wiring connections to sensor. Allow sensor to operate powered a minimum of 12 hours prior to first zero cal.
Sensor High	The raw signal from the sensor is too high and out of instrument range.	Check wiring connections to sensor.
Sensor Low	The raw signal from the sensor is too low.	Check wiring connections to sensor.
Fluoride High	The fluoride reading is greater than the maximum of the user-selected range.	The reading is over operating limits. Set measuring range to the next highest level.
Cal Fail	Failure of fluoride calibration. *FAIL* icon does not extinguish until successful calibration has been performed or 30 minutes passes with no keys being pressed.	Clean sensor and redo calibration. If still failure, sensor slope may be less than 60% or greater than 120%. Replace sensor if still failure.
EPROM Fail	Internal nonvolatile memory failure.	System failure, consult factory.
Chcksum Fail	Internal software storage error.	System failure, consult factory.
Display Fail	Internal display driver fail.	System failure, consult factory.
Range Cal Fail	Failure of factory temperature calibration.	Consult factory.

SPARE PARTS

Part No.	Description
Q46 Electronic Assembly	
03-0430	Q46F front lid electronics assembly
*	Monitor electronics assembly, 100…240V AC
*	Monitor electronics assembly w/ Profibus, 100…240V AC
03-0409	P/S assembly, 100…24V AC with 3-relay exp. board
01-0306	Power supply circuit board assembly
23-0029	Fuse, 630 mA, 250V, TR-5
38-0072	Terminal block plug, 3-position (relays)
38-0073	Terminal block plug, 4-position (outputs)
38-0074	Terminal block plug, 3-position (ground)
38-0081	Terminal block plug, 3-position (power)
38-0084	Terminal block plug, 3-position (power) – VDC version**
31-0173	20 pos. ribbon cable
44-0311	Conduit entry plug, red PE
44-0274	Cord grip, 1/2 in. NPT
Auto-Chem Assembly	
63-0108	Fluoride sensor
31-0187	Sensor cable with BNC connector, 18 in.
00-1654	RTD assembly, Pt100
03-0428	RTD wiring harness
03-0434	Pinch valve harness (pkg of 3)
03-0435	Drain pinch valve assembly
03-0436	Calibration pinch valve assembly
03-0437	Air purge pinch valve assembly
23-0002	Fuse, 2A
03-0421	Sample pump assembly (requires parameter label)
03-0422	Reagent pump assembly
36-0051	Sample pump motor, 24 rpm
36-0049	Reagent pump motor, 6 rpm
03-0427	Pump motor wiring harness
03-0450	Standards feed tube assembly
05-0103	Sample pump inlet tubing (pkg of 5)
05-0104	Sample pump drain tubing (pkg of 5)
05-0102	Reagent pump tubing assembly (pkg of 10)
00-1652	24V AC power supply, 115V AC input
00-1657	24V AC power supply, 230V AC input
00-0055	12V DC power supply, 100…240V AC input

Part No.	Description
45-0301	Acrylic fluoride sensor flowback
42-0024	Sensor flowback O-ring
44-0114	3/32 in. × 1/16 in. reducing barb fitting
44-0116	1/16 in. I.D. Y-barbed fitting
03-0439	4-way bonded fitting
31-0027	9-conductor shielded cable
Tubing Fittings	
44-0090	1/8 in. NPT × 1/4 in. I.D. right angle barb fitting
44-0159	Luer fitting, female, 1/8 in. barb
44-0164	Luer fitting, male, 1/8 in. barb
44-0167	1/8 in. NPT × 1/8 in. I.D. barb fitting
44-0184	Luer adapter, 1/8 in. NPT × male luer
44-0185	Luer cap, female
44-0253	Luer adapter, female, panel mount, 1/4-28 × 1/8 in. barb
44-0337	3/8 in. NPT × 1/2 in. I.D. barb fitting
44-0338	3/8 in. NPT plug
44-0348	Luer adapter, 5/32 in. tubing, sample pump inlet
44-0394	Luer adapter, 3/16 in. tubing, sample pump outlet
Tubing	
44-0007	Silicone tubing, 1/8 in. I.D. × 1/4 in. O.D.
44-0193	Silicone tubing, 1/16 in. I.D. × 1/8 in. O.D.
44-0333	PVC tubing, 1/6 in. I.D. × 1/8 in. O.D.
03-0419	Reagent feed assembly
44-0114	Buffer pickup tubing connector
47-0022	Reagent bottom wall bracket

* Please consult factory for electronic assemblies part numbers.

** Prior to December 2018, VDC (Power) Terminal Block Plug used P/N 38-0081.

Lock/Unlock Code: 1469

Trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2025 Badger Meter, Inc. All rights reserved.