Concentration Meters
MicroPolar Brix (++)
LB 565

User's Guide

Hardware Manual

39531BA2

Rev. Nr.: 07, 03/2018

The units supplied should not be repaired by anyone other than Berthold Technologies Service engineers or technicians by Berthold Technologies.

In case of operation trouble, please address to our central service department (address see below).

The complete user's guide consists of the hardware manual and the software manual.

The **hardware manual** comprises:

- mechanical components
- installation
- electrical installation
- technical data
- electrical and mechanical drawings

The **software manual** comprises:

- operation of the evaluation unit
- parameter description
- basic setup
- calibration
- error messages

The present manual is the hardware description.

Subject to change without prior notice.

BERTHOLD TECHNOLOGIES GmbH & Co. KG
Calmbacher Str. 22 · D-75323 Bad Wildbad

Switchboard:	Service:
Phone +49 7081 177 0	Phone +49 7081 177 111
Fax +49 7081 177 100	Fax +49 7081 177 339
industry@Berthold.com	Service@Berthold.com
www.Berthold.com	

Table of Contents

Page

Chapter 1. Safety Summary 7

1.1 Symbols and Warnings 7
1.2 General Information 8
1.3 General Safety Instructions 9

Chapter 2. General Information 11

2.1 Use and Function 11
2.2 Frequency license 12
2.3 Intended Use 14
2.4 Explanation of Terms 15

Chapter 3. System Description 17

3.1 Principle of Measurement 17
3.2 Calculation of Measured Values 18
3.3 Temperature Compensation 19
3.4 Mechanical Components 20
3.4.1 Evaluation Units 21
3.4.2 Flow Cell 24
3.4.3 Container Probe 27
3.4.4 High-frequency Cable 31
3.5 Measurement Assembly on a Pipeline 33
3.6 Measurement Assembly on a Container 34

Chapter 4. Getting Started 35

4.1 Transport 35
4.2 Installation 35
4.2.1 FlowCell Installation 35
4.2.2 Container Probe Installation 37
4.2.3 Setting Up the Evaluation Unit 39
4.3 Connecting the Evaluation Unit 41
4.3.1 Connecting the HF Cable 41
4.3.2 Pin Configuration of the Connector Strip 44
4.3.3 Digital Outputs, Relay 48

Chapter 5. Service instructions 49

5.1 General Information 49
5.2 Wear Parts 50
5.3 Instrument Cleaning 52
Battery 52
5.4 Fuse Replacement 53

Chapter 6. Technical Data 55

6.1 Technical Data Evaluation Unit 55
6.2 Technical Data Sensors 58
6.3 Technical Data HF Cable 63
6.4 Format of Serial Data Output RS232 and RS485 65

Chapter 7. Certificates 67

7.1 EC Declaration of Conformity 67
7.2 Frequency License 70

Chapter 8. Technical Drawings 79

8.1 Dimensional Drawings of Evaluation Unit Housing 79
8.1.1 Evaluation Unit for MicroPolar Brix 79
8.1.2 Evaluation Unit for MicroPolar Brix ++ 80
8.2 Electrical Wiring Diagram 81
8.3 Dimensional Drawings Flow Cells 82
8.3.1 Type LB 5660-102-00X FlowCell DN 50 Flange, FDA 82
8.3.2 Type LB 5660-202-00X FlowCell DN 65 Flange, FDA 83
8.3.3 Type LB 5660-302-00X FlowCell DN 80 Flange, FDA 84
8.3.4 Type LB 5660-402-00X FlowCell DN 100 Flange, FDA 85
8.3.5 Type LB 5660-502-00X FlowCell DN 125 Flange, FDA 86
8.3.6 Type LB 5660-602-00X FlowCell DN 150 Flange, FDA 87
8.3.7 Type LB 5660-112-00X FlowCell DN 50 G-BS/M 88
8.3.8 Type LB 5660-212-00X FlowCell DN 65 G-BS/M 89
8.3.9 Type LB 5660-312-00X FlowCell DN 80 G-BS/M 90
8.3.10 Type LB 5660-412-00X FlowCell DN 100 G-BS/M 91
8.3.12 Type LB 5660-512-00X FlowCell DN 125 G-BS/M 92
8.3.14 Type LB 5660-612-00X FlowCell DN 150 G-BS/M 93
8.4 Dimensional Drawings Container Probes 94
8.4.1 Type LB 5650-01 94
8.4.2 Typ LB 5650-02 95
8.4.3 Type LB 5650-03 96
8.4.4 Type LB 5650-04 97
8.4.5 Type LB 5650-05 98
8.4.6 Type LB 5650-09 99
8.4.7 Installation Situation in Pipelines 100
8.5 Dimensional Drawings Container Flush Probes 101
8.5.1 Type LB 5651-01 101
8.5.2 Type LB 5651-02 102
8.5.3 Type LB 5651-03 103
8.5.4 Type LB 5651-04 104
8.5.5 Type LB 5651-05 105
8.5.6 Installation Situation in Pipelines 106
8.6 Installation Sheets for LB 5650 (Container Probe) 107
8.7 Installation Sheets for LB 5651 (Container Flush Probe) 109

Chapter 1. **Safety Summary**

1.1 Symbols and Warnings

In this user manual, the term Berthold Technologies stands for the company Berthold Technologies GmbH & Co.KG.

To rule out bodily injury and property damage, please keep in mind the warning and safety instructions provided in this user manual. They are identified by the following sings: DANGER, WARNING, CAUTION or NOTICE.

DANGER

Indicates imminent danger. If it cannot be avoided, death or most severe personal injuries may be the consequence.

WARNING

Indicates a possibly dangerous situation. The consequences may be death or most severe personal injuries.

CAUTION

Indicates a possibly harmful situation The consequences may be minor or medium personal injuries.

NOTICE

Indicates a situation that may cause material damage if the instructions are not followed.

IMPORTANT

Paragraphs with this symbol provide important information on the product and how to handle it.

TIP

Contains user tips and other useful information.

Meaning of other symbols used in this documentation:

Warning: No intervention, do not alter anything

Requirement: Disconnect power

Requirement: Wear safety boots

1.2 General Information

The most important safety measures a summarized in this user manual. They supplement the corresponding regulations which *must* be studied by the personnel in charge.

Please pay attention to:

- the national safety and accident prevention regulations
- the national assembly and installation directions
- the generally recognized engineering rules
- the information on transport, assembly, operation, service, maintenance
- the safety instructions and information in these operating instructions
- the enclosed technical drawings and wiring diagrams
- the characteristic values, limit values and the information on operating and ambient conditions on the type labels and in the data sheets
- the signs on the devices
- the country-specific licensing schemes

1.3 General Safety Instructions

IMPORTANT
The equipment housings have IP 65 protection and are suitable for outdoor applications. The units are factory tested and are delivered in a condition that permits safe and reliable operation.

NOTICE

For outdoor applications, the measuring systems must be protected from direct sunlight and rain, for example by a suitable shelter.

IMPORTANT
Never change the installation and the parameter settings without a full knowledge of these operating instructions, as well as a full knowledge of the behavior of the connected controller and the possible impact on the operating process to be controlled.

NOTICE

The systems may only be used in perfect technical condition and only for the intended use!

⚠ CAUTION

Only let persons work with the systems who are mandated to do this and are suitably qualified and adequately trained! Attachments and changes to the systems which can affect the operational safety and reliability are prohibited!

Ambient conditions

IMPORTANT
All system components require non-corrosive ambient conditions during transport, storage and operation.

IMPORTANT
If liquid gets inside the instrument, cut off the power supply. The equipment must be inspected and cleaned by an authorized service center.

⚠ WARNING

Electrical hazards

Disconnect power to ensure that contact with live part is avoided during installation and when servicing.

Disconnect the power supply before opening the instrument. Work on open and live instruments is prohibited.

NOTICE

Caution! Potential hazards, material damage!
Device type:
LB 565-12 MicroPolar Brix ++ (ID no. 51832-02)

When connecting the 24 V DC power supply, the + and – poles must be connected correctly. There is no reverse polarity protection!

NOTICE

Spare fuses must match the rating specified by the device manufacturer. Short-circuiting or manipulation is not permitted.

IMPORTANT

The LB 565 and all additional equipment must be connected to mains via grounded connection.

IMPORTANT

The concentration meter LB 565 may be installed, serviced and repaired only by qualified specialists.

Qualified persons

Qualified specialists are persons who through professional training have acquired sufficient skills in the respective field and who are familiar with the relevant national industrial safety regulations, accident prevention directions, guidelines and accepted engineering standards. They must be able to safely assess the results of their work and they must be familiar with the contents of these user manual.

Chapter 2. **General Information**

2.1 Use and Function

The MicroPolar Brix LB 565 has been designed as a concentration measuring system and may be used only for this purpose. If the devices are used in a manner that are not described in this user manual, the protection of the devices is compromised and the warranty will be lost.

Berthold Technologies is liable and guarantees only that the devices comply with its published specifications. The LB 565 may only be installed in an undamaged, dry and clean condition. Alterations and modifications to the system components are not permitted.

The LB 565 is not qualified as a "safety-related measurement".

Conformity to standards

The standards and guidelines the LB 565 complies with are itemized in these device instructions in *chapter 2.2 Frequency License* and *chapter 7.1 EC Declaration of Conformity.*

Pressure equipment directive

The FlowCell and the container probe has been classified as pressure equipment acc. to art. 4 sect. 3 of guideline 2014/68/EU. Before use, check whether the case of use corresponds to this classification. In particular, the media compatibility of the components in contact with the fluid must be checked.

Protection type

The protection type of the LB 565 to IEC 60529 is max. IP 65.

Warning against misuse

The following use is inappropriate and has to be prevented:

- The use under conditions other than the terms and conditions stated by the manufacturer in their technical documentation, data sheets, operating and installation manuals and other specifications.
- The use after repair by persons not authorized by Berthold Technologies.
- The use in a damaged or corroded state.
- Operation with open or inadequately closed cover.
- Operating with insufficient tightened adapters and cable glands.
- Operation without the manufacturer's recommended safety precautions.
- Manipulating or bypassing existing safety facilities.

Authorized persons

Authorized persons are those who, by law, are permitted to perform the respective activity, or who have been approved by Berthold Technologies for certain activities.

2.2 Frequency license

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC[1] and IC[2] License labels

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

[1] FCC . Federal Communications Commission
[2] IC ... Industry Canada

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications made to this equipment not expressly approved by BERTHOLD TECHNOLOGIES may void the FCC au-thorization to operate this equipment.

The MicroPolar Brix and MicroPolar Brix ++ comply with the R&TTE Directive 1999/5/EC and thus meet all the requirements for this type of high-frequency devices. As a mark of conformity in accordance with the CE mark, the devices bear the no. 0682 of the certification body. The certificate can be found in *chapter 7.2 Frequency License*.

CE 0682

IMPORTANT

The approvals and compliance are only applicable in combination with the container probes and FlowCells.

IMPORTANT

The LB 565 has been manufactured in compliance with the safety requirements for microwave devices. It will be the user's responsibility to adhere to any special legal provisions regarding the use of microwaves.

IMPORTANT

Any change in the frequency or otherwise tampering with the microwave device will lead to a loss of the frequency license and may result in criminal consequences.

The microwave modules do not include any replaceable components and must not be opened.

2.3 Intended Use

The measuring system LB 565 can be used to determine the concentration of nearly all materials that are dissolved or suspended in water by means of microwave technology. The following sensors and evaluation versions are available:

1. The container probes have been designed for installation into pipelines with a nominal diameter ≥ 200 mm and in containers, for example, crystallizers. The probe is mounted so that both measuring rods (transmitter and receiver) are immersed into the product being measured.
2. The flow cell is a tubular probe that is either installed into the existing pipeline system inline or into a bypass.

The evaluation unit is available in two versions: The standard model Micro-Polar Brix and the high dynamic version Micro-Polar Brix ++. The MicroPolar Brix ++ requires a microwave signal attenuation of at least 40 dB. The MicroPolar Brix must be used for lower microwave attenuation.

During operation, the concentration meters MicroPolar Brix and MicroPolar Brix ++ emit electromagnetic radiation in the frequency range between 2.4 GHz and 2.5 GHz (range limitations depending on local regulations in your country). Microwaves are not dangerous to human beings and the environment (power radiation < 10 mW). The microwaves are emitted directed from the microwave window; the product is not altered by the microwaves.

To ensure proper function of the measuring system, please pay attention to the following:

TIP

- The material to be measured may be electrically conductive only to a limited degree.
- The product must not contain any gas bubbles or gas bubbles have to be compressed with adequate pressure when carrying out measurements in pipelines.
- The ion concentration, for example, salt content must be nearly constant.
- The total attenuation of microwave signals must be at least 40 dB for the MicroPolar ++. For more information, please see *chapter 3.4.1 The Evaluation Units.*

2.4 Explanation of Terms

Attenuation	Weakening of microwave signals, microwaves measuring effect.
Conti probe	Container probe with flushing device. Application e.g. continuous evaporative crystallization process.
Disconti probe	Container probe without flushing device. Application e.g. evaporative crystallization process.
EVU	**Ev**aluation **u**nit
Factory setting	In the factory setting all parameters have been set to default values. In most cases this considerably facilitates the calibration of the instrument. Despite factory setting, calibration **always** has to be performed.
Flow cell	Tubular probe for simple integration into the existing pipeline system.
Flush probe	Container probe with flushing device.
HF cable	**H**igh **f**requency cable
Microwaves	Designation for electromagnetic waves in a specific frequency range.
Phase	Phase or phase shift, microwave measuring effect.
Quad cable	Combination of four HF cables of equal length in a corrugated tube.
Softkeys	Software associated keys.
TC	**T**emperature **c**ompensation

Chapter 3. **System Description**

3.1 Principle of Measurement

As the microwaves pass through the product, their propagation velocity is slowed down (= phase shift) and their intensity is attenuated (= attenuation). Figure 3-1 illustrates the principle of measurement: Compared to a reference signal, the propagation velocity of microwaves passing through the product is slowed down (phase shift) and their intensity (attenuation) is reduced.

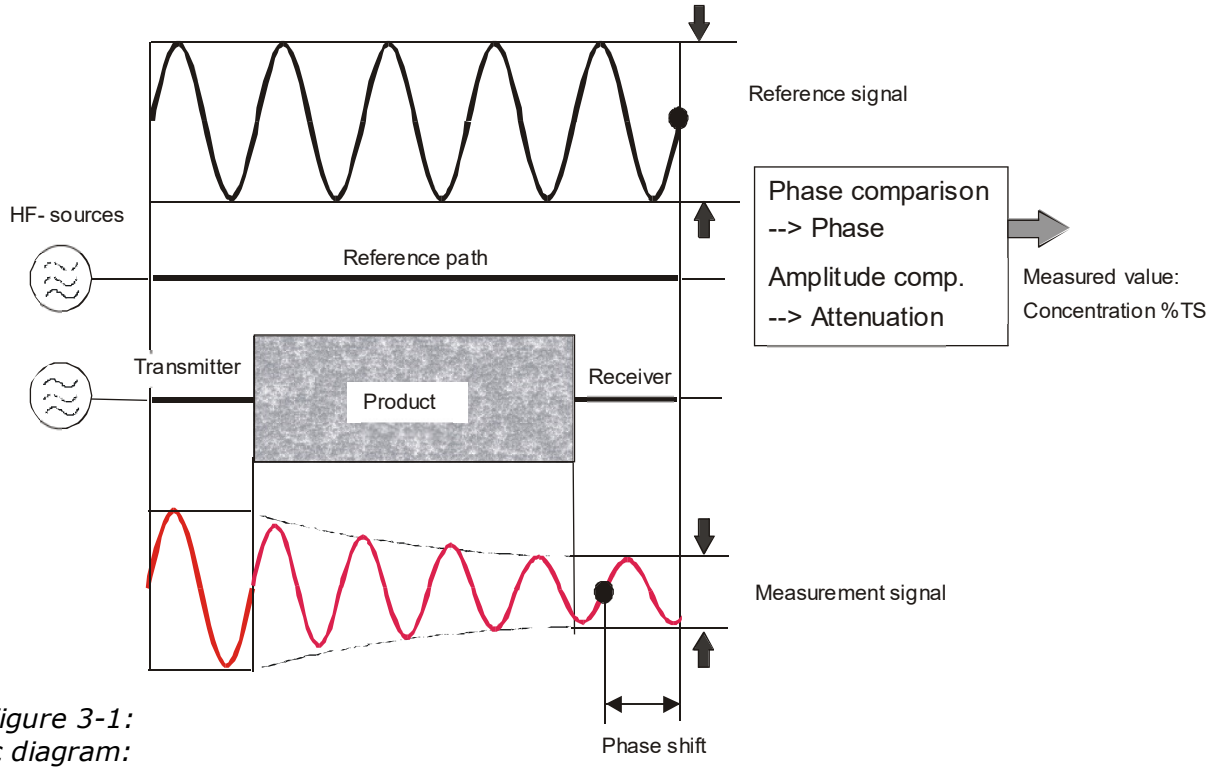

Figure 3-1: Schematic diagram: Change in microwave by product

The prerequisite is that the product being measured shows dielectric properties. Generally, water is a very distinct dielectric fluid. The water or dry mass concentration can therefore be determined by measuring the phase shift and/or attenuation.

The concentration to be detected in the product is therefore in good approximation linearly dependent on the phase shift and the attenuation. For this reason, we can measure the concentration or the dry matter content of the product using a linear calibration (see *chapter 3.2 Calculation of Measured Values*).

3.2 Calculation of Measured Values

The microwave parameters phase and attenuation are calibrated according to an automatic plausibility analysis.

During calibration, the phase and/or attenuation of a concentration value (or density value) are assigned through sampling. The calibration is done automatically and the sampling process is supported by the evaluation unit.

Which of the parameters (phase, attenuation or both) will be used for the calibration depends on the size and interference of the measuring effect. For example, the attenuation is significantly more sensitive to electrolytic conductivity (salt content).

In many cases, the pure phase measurement is recommended and calculated as follows:

$$\text{Measured value} = A \cdot \text{Phase} + C \qquad \textbf{Eq. 3-1}$$

where:

Measured value	Concentration / Moisture / Dry matter
A, C	Coefficients of the respective calibration function

The LB 565 allows you to calibrate, display and output two concentrations: Con1 and Con2. You have to enter the calibration coefficients separately for concentration 1 and 2. For more information please refer to the Software Manual.

3.3 Temperature Compensation

Temperature compensation (TC) is required for fluctuating product temperature. It is generally advisable to provide a temperature compensation, i.e. a temperature signal (0/4...20 mA or PT100) to be connected to the evaluation unit and, optionally, to enable the compensation in the evaluation unit. The evaluation unit is designed so that the required TC's can be calculated automatically. The variation in temperature where TC becomes absolutely essential is dependent on the product and on the water content. In the first approximation, ± 2° C should be set as fluctuation limit.

TIP

A TC has to be carried out whenever you are working with cooling crystallizers.

For example, if the product temperature is measured via the PT100 input, then Eq. 3-1 is expanded as follows:

$$\text{Measured value} = A \cdot \text{Phase} + D \cdot T_{meas} + C \qquad \textbf{Eq. 3-2}$$

where:

Measured value	Concentration / Moisture / Dry matter
A, D, C	Coefficients of the calibration function
T_{meas}	Product temperature

How to work with the temperature compensation is described in detail in the Software Manual.

3.4 Mechanical Components

The measuring system consists of an evaluation unit, a probe and a set of special high-frequency cables (short HF cable). The evaluation unit is available in two versions: the standard model MicroPolar Brix LB 565 and the high dynamics version MicroPolar Brix ++ LB 565 (see Figure 3-2 and Figure 3-3).

Figure 3-2: Evaluation unit MicroPolar Brix LB 565

Figure 3-3: Evaluation unit MicroPolar Brix ++ LB 565

The probes are available in different versions, as pipeline and container probe with or without flushing device (see Figure 3-4 and Figure 3-6).

Figure 3-4: Container probe LB 5650

Figure 3-5: Container probe with flushing device LB 5651

Figure 3-6: FlowCell LB 5660-102-00x nominal width 50 mm with V flange

3.4.1 Evaluation Units

The evaluation units comprise the evaluation computer and the microwave unit. The microwaves are generated, received and analyzed in the microwave unit. Signal processing and communication take place in the evaluation computer. For simple operation, the measuring system includes a display, 4 softkeys and an alphanumeric keypad. Different functions are assigned to the softkeys on the display.

Differences between MicroPolar Brix ++ und MicroPolar Brix

The MicroPolar Brix ++ evaluation unit has an additional HF amplifier module in comparison to the standard model; therefore, it also has a larger wall housing (dimensions see *chapter 6.2 Technical Data Evaluation Unit*). Otherwise, the evaluation units differ only in their application.

MicroPolar Brix ++

The high dynamics version MicroPolar Brix ++ permits higher product attenuations. Larger measuring paths can be irradiated, i.e. FlowCells with larger nominal diameters can be used. Which type of evaluation unit is used depends on the product attenuation. MicroPolar Brix is used up to an attenuation of 50 dB; MicroPolar Brix ++ is used for higher attenuations. The MicroPolar Brix ++ generally requires an attenuation of 40 dB. If this attenuation is not reached, the software displays an error message.

An RS232 interface is included on the bottom side of the instrument.

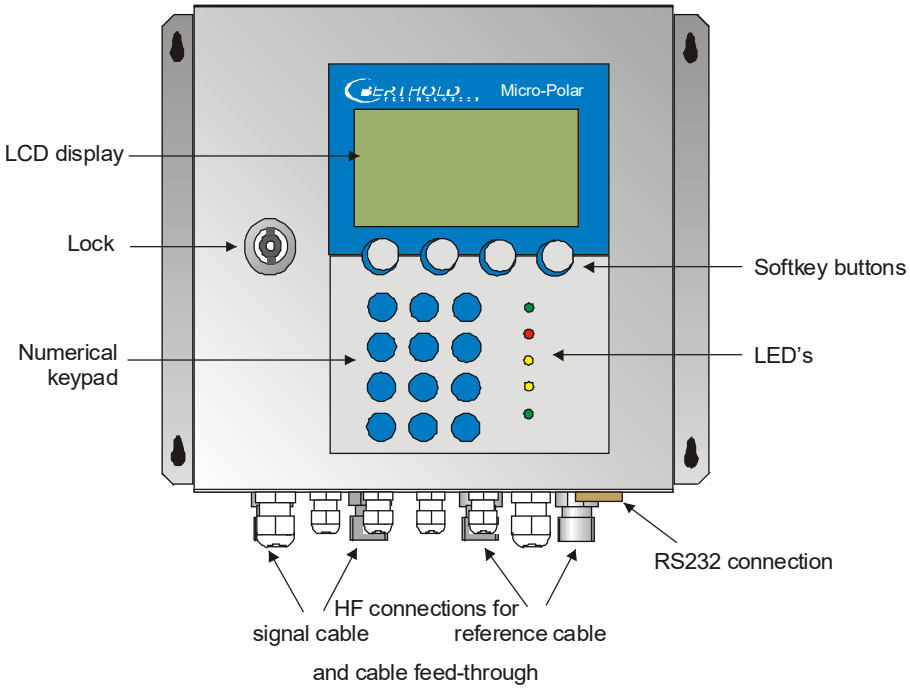

Figure 3-7: Evaluation unit – front view

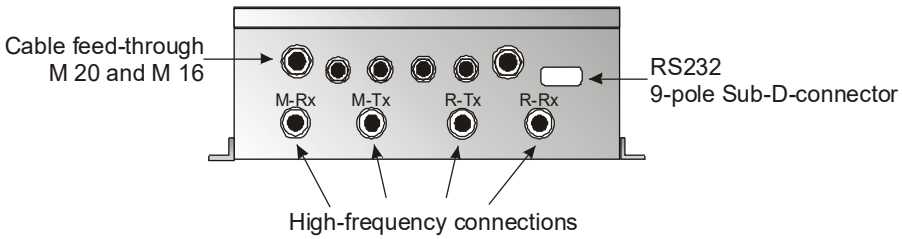

Figure 3-8: Evaluation unit – bottom view

LED's on the Front Panel

Five LED's on the instrument front panel indicate the current device status.

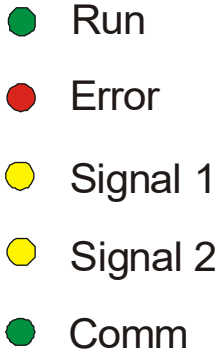

Figure 3-9: LEDs on the front panel of the evaluation unit

LED	Function
Run	On: Device in measurement mode Flashes + ERROR LED off: Device in warning state, on hold or paused. A display message with error code indicates the cause (see *Software Manual, chapter 11. Error Lists and Device States).*
Error	On: Device in error state. A display message with error code indicates the cause (see *Software Manual, chapter 11. Error Lists and Device States).* Canceled after reset or if error has been eliminated.
Signal 1	Display depending on the selected function of relay 1, possible functions: Error, no product, alarm min., alarm max., measurement stopped
Signal 2	Display depending on the selected function of relay 2, possible functions: Error, no product, alarm min., alarm max., measurement stopped
Comm	Communication active, e.g. via RS232 and RS485

Terminal block

The electrical connections of the LB 565 are located on a connector strip in the wall cabinet. The terminal block can be accessed from the front by opening the cover of the housing. There, you also find the power cut-off switch and the fuses. The high-frequency terminals are located on the outside of the housing. All other elements, especially the voltage-carrying elements (on the motherboard) are provided with a protective cover.

3.4.2 Flow Cell

The FlowCell is available in the nominal sizes of 50 to 150 mm (see fig. 3-11). As connection, the versions V flange EN 1092-1/11 or Hygiene milk pipe screw connection DIN 11853-1 are available. For technical data please see chapter 6.2 Technical Data Sensors.

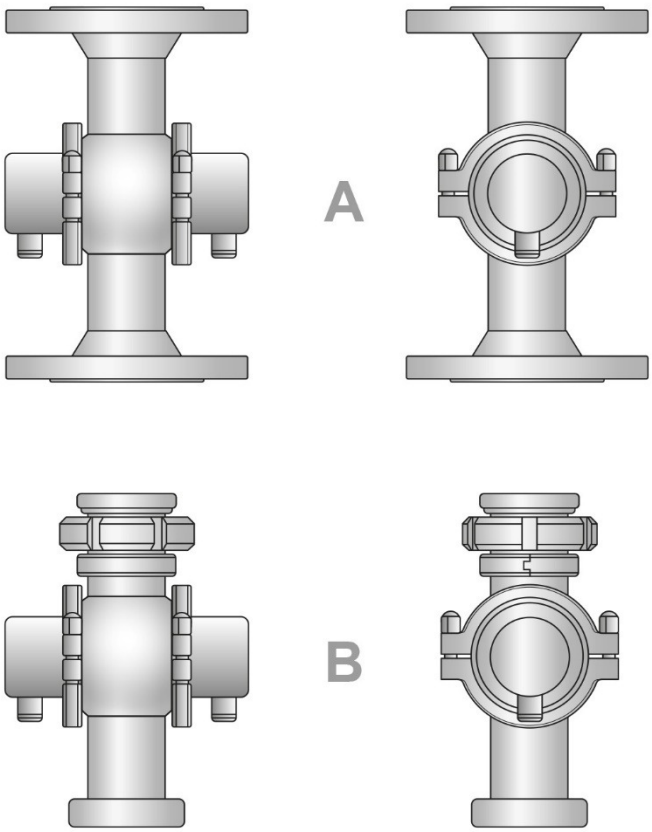

Figure 3-10: Flow cell versions

A: with V flange EN 1092-1/11
B: with Hygiene milk pipe screw connection DIN 11853-1

The FlowCell consists of a sturdy stainless steel body. The microwave transmitter and receiver are firmly welded to the outside of the pipe. The entire product pipe is PTFE-coated and thus meets the special requirements for use in food for use in food.

There are no objects that extend into the pipe (e.g. a measuring sensor). The flow cell can be installed in the pipeline using a flange, threaded connector or clamp connector. The adapter flanges are available as accessories.

The flow cell has two HF ports to feed in and output the microwave signals. The input and output can be allocated as needed (M-Tx, M-Rx). The microwave signals transmit the product over the entire pipeline cross-section.

For all versions, the following accessories are available:

1. Pipe-mounted PT100 or Inline PT100

2. Conductivity measuring device

3. Sampling valve (combination with 1. and 2. possible)

Overview accessories (see also chapter 6.2)**:**

Conductivity measuring device

Inline PT100

Pipe-mounted PT100

Sampling valve

Combination
Conductivity measuring
device with Sampling valve

Combination
Inline PT100 with
Sampling valve

3.4.3 Container Probe

The container probe is available in a version with and without flushing device (see Figure 3-11). The technical data are listed in *chapter 6.2 Technical Data Sensors*.

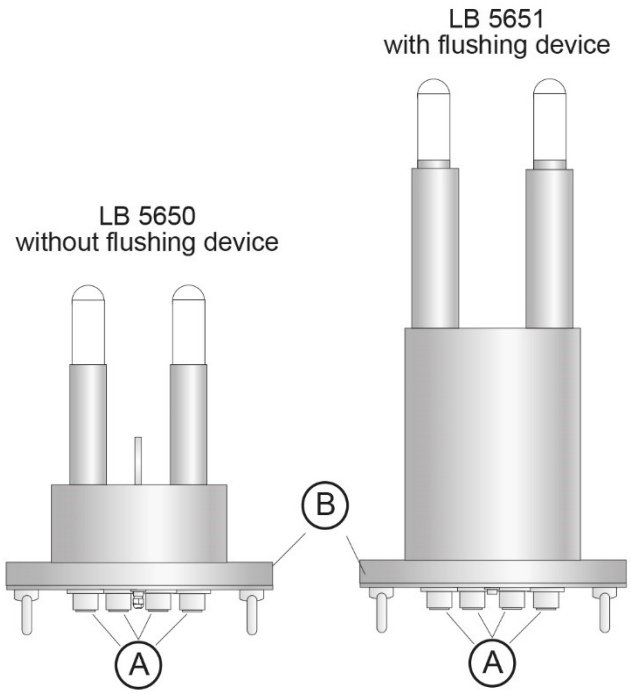

Figure 3-11: Container probe versions

A: High-frequency ports
B: Process connection, flanges of different sizes

Container probe type LB 5650 and type LB 5651

The container probe has been specially designed for concentration measurements in containers. Both measuring rods are immersed into the product. Microwaves are emitted from one end of the rod and received by the other end of the rod; they are emitted only towards the opposite end of the rod. This directional characteristic of the probe minimizes the interfering influence of metal parts in the vicinity of the probe and allows installation if only limited space is available. For example, the concentration of sugar strike can be measured continuously to find the suitable inoculation time.

The plastic caps of the measuring rods meet the special requirements for application in foodstuffs.

Two different probe types are available:

- The standard type is the container probe without flushing device.
- The flushing probe is used in processes where incrustations are likely to occur, for example, due to increased depositions. The flushing device prevents deposition on the microwave exit windows. In continuous crystallization processes (e.g. VKT) long travel times will be supported.

For the case depicted in Figure 3-11, the flow direction of the product being measured must be perpendicular to the drawing plane. This ensures a representative product between the measuring rods, provided the product is mixed thoroughly.

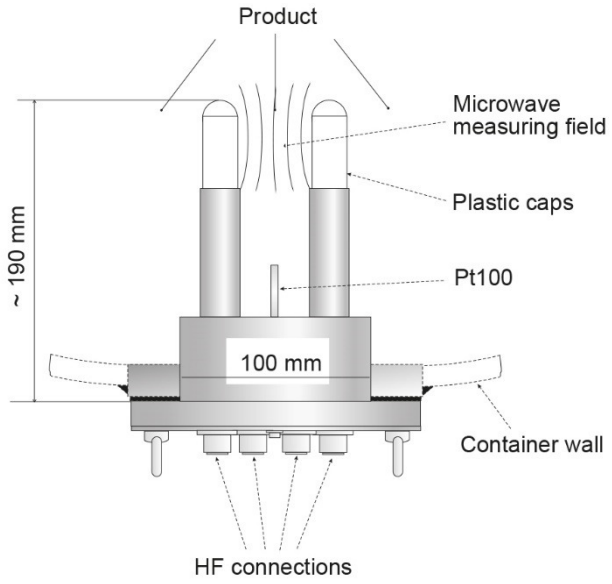

Figure 3-12: Container probe LB 5650

PT100

The container probe LB 5650 is the only one equipped with a PT100 connection and can be connected to the evaluation unit via a 4-core cable. The PT100 wiring diagram is described in *chapter 4.3.2 Pin Configuration of the Connector Strip.* To minimize the danger of incrustation in the immediate vicinity of the measuring rods, the container flush probe is not provided with a PT100.

NOTICE

Warning: Possible material damage!
Do not open the cover screws on the front of the container probes, see Figure 3-13.

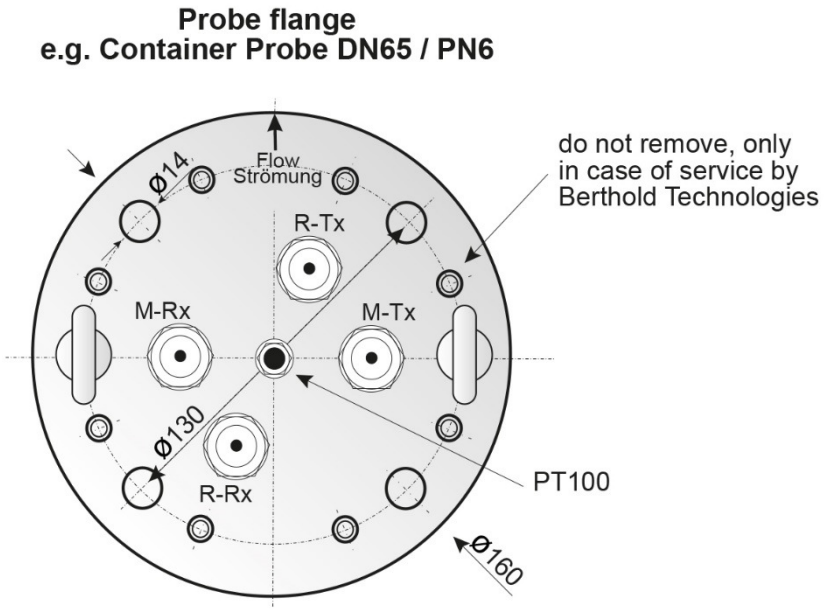

Figure 3-13: Front view container probe

Container probe type LB 5651 with flushing device

The flushing probe LB 5651 has been designed for processes in which depositions, for example, due to incrustations are likely to occur on the probe.

The flushing probe has two flushing channels which keep the measuring rods free from incrustations; this ensures that the microwaves come into direct contact with the product being measured. All probe parts coming into contact with the product meet the special requirements for application in foodstuffs. Figure 3-14 shows the probe design.

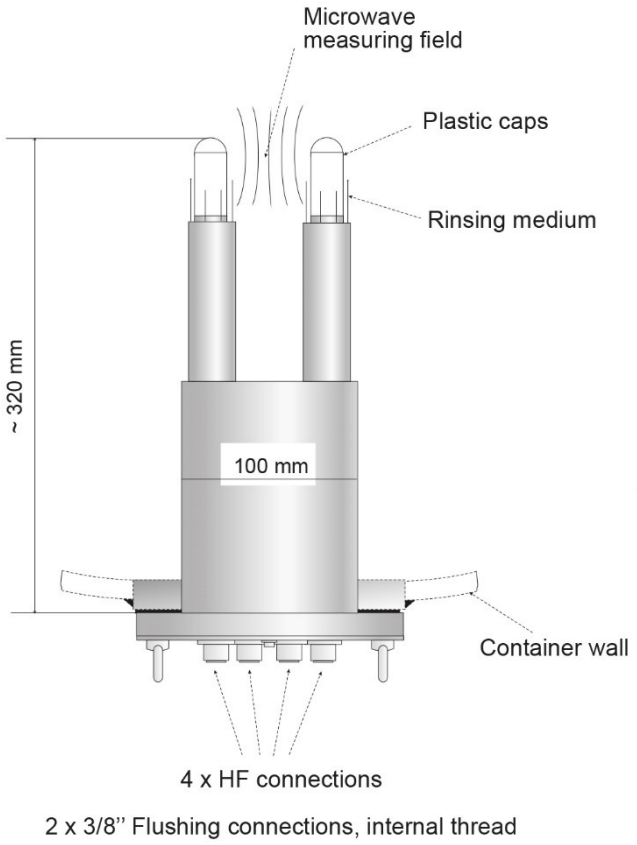

Figure 3-14:
Flushing probe LB 5651

The flushing slit width is the same for both probe rods and is depicted in Figure 3-15

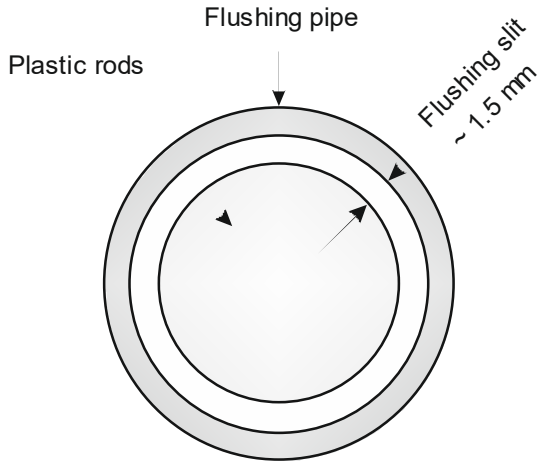

Figure 3-15:
Rod head with flushing pipe

3.4.4 High-frequency Cable

High-frequency cables (HF cable) are used to transmit microwaves between probe and evaluation electronics.

HF cables change their conductivity (for microwaves) with temperature and would therefore produce measurement errors with varying ambient temperature. This error is compensated for by enabling the automatic cable compensation. The influences of the ambient temperature on the signal cable are compensated for by means of the reference cable. The reference cable has the same length as the signal cable and must be exposed to the same ambient temperature during operation. We recommend installing both cable types together in a corrugated tube; this also simplifies installation.

Special HF cables are available:

For the container probe (with and without flushing device), the HF cable Quad is used (see Figure 3-16). This cable consists of four separate HF cables of equal length; their ends are terminated by an HF connector (N-type). Available cable lengths: 2, 4, 6, 8 and 10 m.

Two cable versions are available **for the FlowCell**

Version 1: A HF cable quad as described above, where the reference cable is sort-circuited on the probe side by means of the N-connector (see Figure 3-17).

Version 2: The FlowCell is connected using two separate HF cables (solid cable) of equal length (signal cable). Another separate cable, the length corresponding to the sum of both signal cables, makes up the reference cable (not shown). Available lengths of the solid cables: 2, 2.5, 3, 3.5 and 4.0 m.

NOTICE

Warning: Possible material damage!
Never bend HF cables! The bending radius should not be less than 100 mm. After installation, fix cables with cable binders.

NOTICE

During assembly, ensure that the end of the corrugated tube is bent down on the probe side. By doing so, the ingress of fluids into the corrugated tube is prevented.

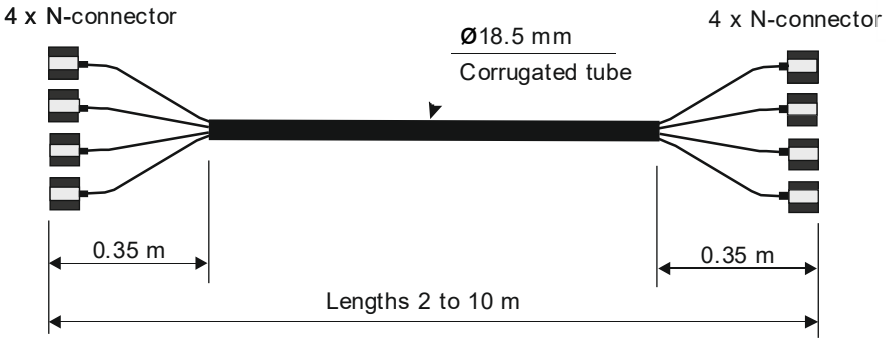

Figure 3-16: HF cable Quad

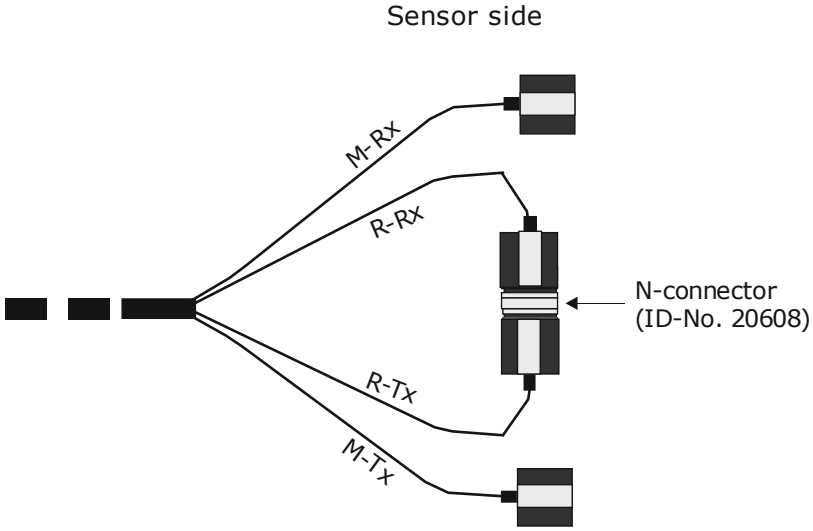

Figure 3-17: HF cable Quad probe side:

Figure 3-17: The ends of the reference line R-Rx and R-Tx are short-circuited with an N-connector.

For further technical data see *chapter 6.3 Technical Data HF Cable*.

Hygienic HF-cable

For use in hygienic applications a hygienic HF-Quad-Cable is available. It provides a complete sealing against fluids.

It is available in 2 or 4 m length.

3.5 Measurement Assembly on a Pipeline

The evaluation unit is installed close to the FlowCell to keep the HF cable between evaluation unit and probe as short as possible. The shorter the cable connection, the better the stability of the measurement. However, the HF cable must be at least 2 m long. The standard length is 2 m and the maximum length of the HF cable is 10 m.

The FlowCell is integrated into the existing pipeline system or in a bypass. The orientation of the FlowCell can either be vertical or horizontal. To avoid possible sedimentary deposits, vertical installation in a riser is preferred (see Figure 3-18).

The installation should preferably be close to a sampling point to ensure representative sampling for calibration.

A representative temperature signal (current signal or PT100) should be connected to the evaluation unit for product temperature compensation.

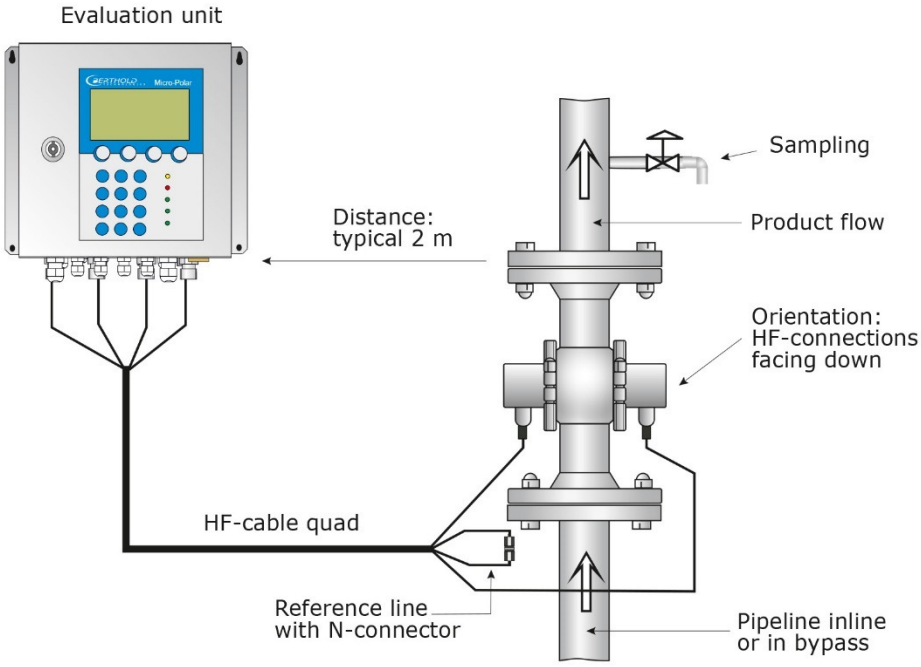

Figure 3-18: Typical measurement arrangement on <a pipeline

3.6 Measurement Assembly on a Container

The evaluation unit is installed in close proximity to the container probe to keep the HF cable between evaluation unit and probe as short as possible. The shorter the cable connection, the better the stability of the measurement. However, the HF cable must be at least 2 m long. The standard lengths of HF cables is 2 and 4 m.

The installation should preferably be close to a sampling point to ensure representative sampling for calibration. A representative temperature signal (current signal or PT100) should be connected to the evaluation unit for product temperature compensation.

Our example in Figure 3-19 shows the measurement configuration on a crystallizer. The probe is fixed to the container wall using a flange coupling so that both measuring rods are immersed into the product.

NOTICE

Install the container probe as far away from the stirrer as possible! Close to the stirrer, there is greater wear on the plastic caps of the measuring rods of the container probe.

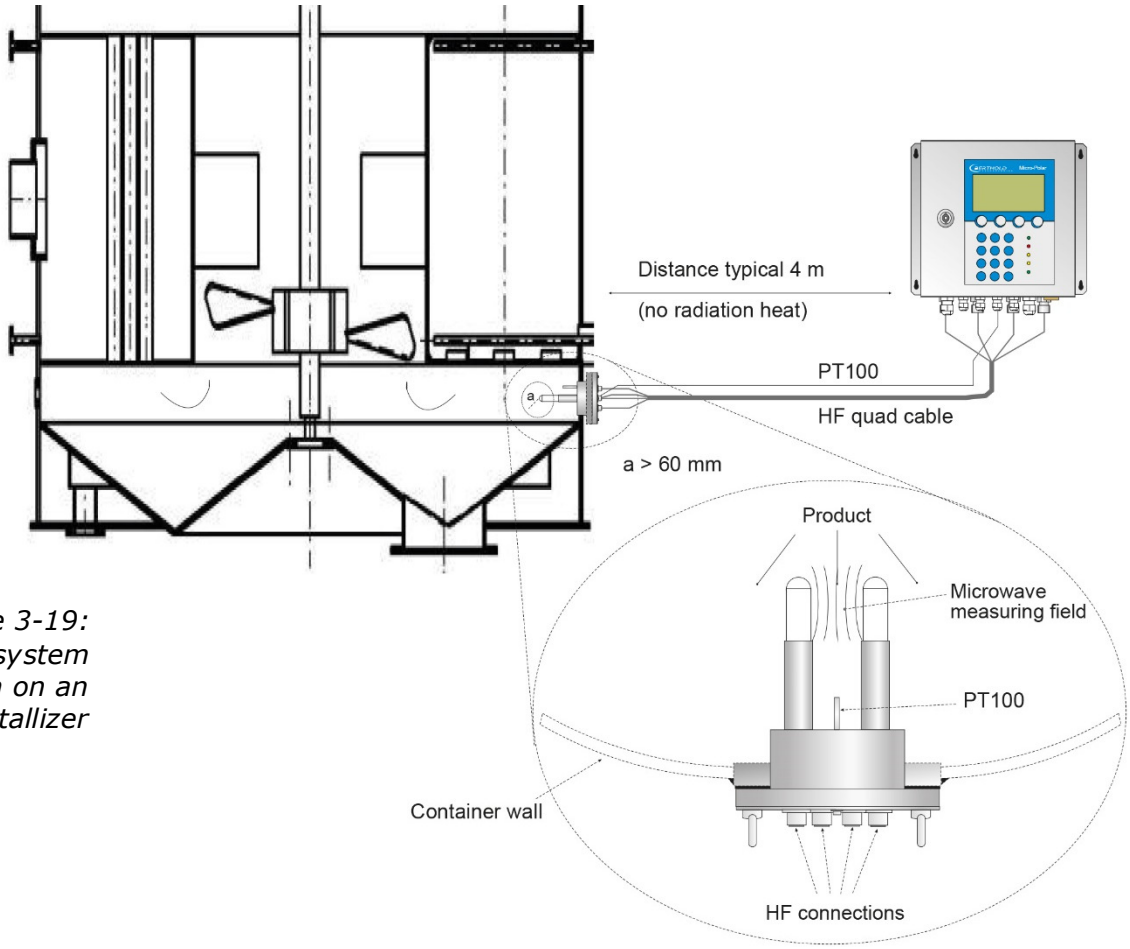

Figure 3-19: Typical system configuration on an evaporation crystallizer

Chapter 4. **Getting Started**

4.1 Transport

NOTICE

Warning: Possible material damage!
System parts may get damaged during transportation!

The probe and the evaluation unit should be transported in their original packaging. Protect parts against shocks.
Especially the measuring rods of the container probes have to be protected against mechanical shock!

After unpacking, make sure all parts listed on the packing list have been delivered and show no sign of damage; if necessary, clean these parts.

If you detect any damage, please notify the forwarder and the manufacturer immediately.

The weight of the system components may exceed 25 kg, depending on the version. We recommend, therefore, that you wear safety boots.

4.2 Installation

4.2.1 FlowCell Installation

⚠ WARNING

Danger of injury from leaking operating medium.

The FlowCell must be mounted correctly.

In particular, the correct tightening torque for the flange screws must be observed.

Note the following points when installing the FlowCell:

- The FlowCell is integrated at a suitable location in the pipeline system. Keep in mind that material sampling directly behind the flow cell should be possible for calibration.

- The FlowCell should be installed in a vertical riser, if possible. It must be ensured that material deposits cannot form on the pipe walls and no bubble formation occurs in the product.

  When aligned horizontally, the drainability of the pipeline has to be respected. To ensure this, the FlowCell must be mounted acc. to fig. 4-2.

- There should be a straight pipe section of at least 200 mm and equal nominal width before and after the flow cell to ensure a fairly homogeneous flow profile and to rule out possibly occurring microwave reflections in the pipeline.

- No gas inclusions should be present in the product. If gas inclusions cannot be ruled out, a pipeline pressure of at least 4 bar is required to minimize the influence of gas bubbles. Please observe the max. permissible operating pressure, see *chapter 6.2 Technical Data Sensors*.

- The high-frequency cables should preferably be connected to the FlowCell from below to prevent flowing water from getting to the connection sockets.

- The signal and reference cable should as far as possible follow the same path to be exposed to the same temperature and should not come into contact with hot pipelines. We recommend installing the HF cable through a common tubular cable protection. If you are working with the HF cable quad, this function is taken over in good approximation by the corrugated tube.

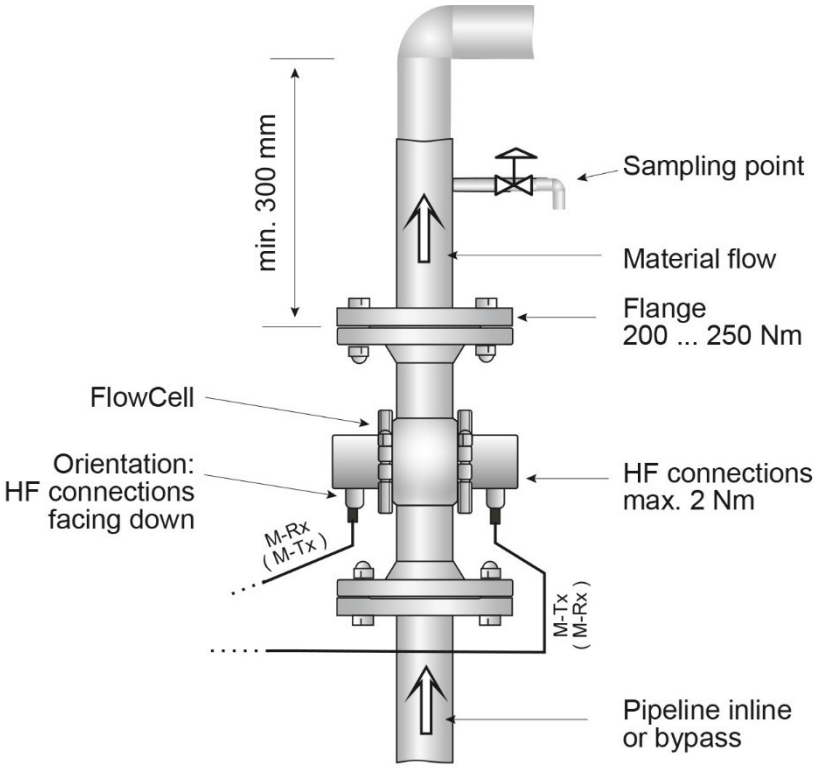

Figure 4-1: Installation in a vertical riser

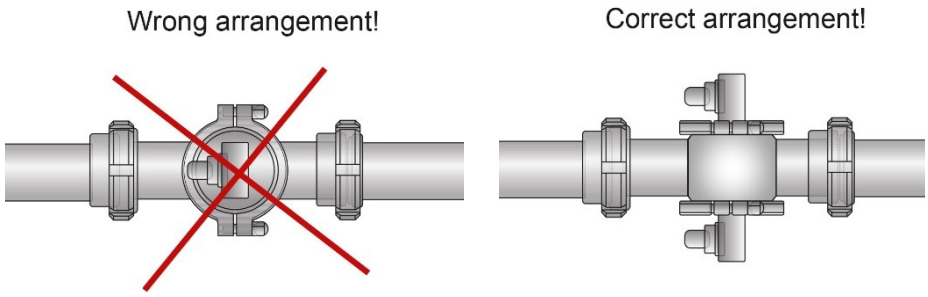

Abb. 4-2: Horizontal installation: The drainability of the pipeline must be respected. To ensure this, the FlowCell must not be rotated.

4.2.2 Container Probe Installation

⚠ WARNING

Danger of injury from leaking operating medium.

The Container probe must be mounted correctly.

In particular, the correct tightening torque for the flange screws must be observed.

Note the following points when mounting the probes:

- Select the installation site such that a good mixing and a homogeneous product are ensured and no bubbles are present in the probe. A sample tap should be available for representative sampling in the immediate vicinity.
- The probe must be flanged to the container so that the material to be measured flows between the two measuring rods. That means the fork (both measuring rods) must be installed perpendicular to the material flow.
- The distance between the measuring rod tips and any metalized walls (heating element, stirrer, container wall) should be at least **60 mm**.
- The following **mounting hole dimensions in the fitting flange** are required for installation of the probe:

Flange	Minimum mounting hole dimensions ∅ (mm)
DN 65 / PN 6	102 ± 0.3
others	104 ± 0.5

- For further installation dimensions, please refer to chapter 8 (see Assembly Sheets).
- Use the appropriate flat gasket (standard accessory) to compensate for minor surface tolerances in the fitting flange.

Installation on process containers

Figure 3-19 shows the position of the container probe on the container. This position is also valid for the container flush probe. Follow the instructions in *chapter 3.6 Measurement Assembly on a Container.*

The assembly sheets in chapter 8 include all the information required for installation.

Dismounting in the event of a stuck flange

When installing the probe to the crystallizers, due to the process, it may be the case that the probe flange is stuck to the process flange. In such case, during the dismounting process, remove the two eyebolts first. Then insert two longer screws (M8) into their bore holes up to the process flange. If you continue to rotate the screws, you will push the probe away from the process flange.

Installation in pipelines

Container probes can be installed in pipelines with a nominal width ≥ 200 mm using an adapter flange. Note the position and orientation of the container probe, refer to the technical drawings in *chapter 8.4.7 and 8.5.6 Installation Situation in Pipelines.*

Connecting the flushing pipes

The container probe with flushing device has two flushing connections with G3/8'' female thread (DIN ISO 228-1). The flushing connections should be sealed only at this thread. Sealing the probe cover, for example with silicone, is not permitted.

If the flushing pipe is not connected, the container probe must be closed with a blind plug.

Flushing parameters (only for flushing probe)

The degree of deposition or incrustation is essential for the flush settings, i.e. flush interval and flush duration. The flushing parameters must be matched to the product and the process.

The following product and process independent flushing parameters must be strictly adhered to:

Flush solution	Water, condensate
Temperature of flush solution	Maximum 120°C
Pressure	≥ 3 bar, max. 8 bar
Fittings	2 x G3/8'' female thread (DIN ISO 228-1)
Supply pipe	≥ 1/2 inch

Product and process-dependent flushing parameters, **typical starting rates:**

Interval	every 2 hours
Duration	12 seconds
Temperature of flush solution	average product temperature, usually 65 ±5°C

For measurements in secondary product (C-product), the flushing intervals can often be significantly reduced, e.g. every 6 hours for 30 seconds.

In general: The flushing connections can be flushed simultaneously or sequentially. The flushing parameters are valid for each flushing connection.

TIP

The flush duration has to take into account possible inertias of the system, e.g. valve openings. The flush supply pipes must be well insulated to prevent that the flush solution is initially colder.

Amounts of water

With a 5 bar flushing pressure, the amount of water per flushing connector is approximately 0.8 liters per second.

4.2.3 Setting Up the Evaluation Unit

Note the following points when installing the evaluation unit:

- Set up the evaluation unit near the microwave probe, keeping in mind the length of the HF cable.
- Protect the instrument against vibrations.
- For instrument installation you should foresee a separating device to allow easy and quick disconnection of the device from the power supply.
- Provide an automatic separating device (line circuit breaker) that disconnects the unit from power within 0.03 seconds in case of failure. The separating device must be matched to the cable cross-section of the supply line, but at least it must be designed for 1 A continuous current.

- When installing the evaluation unit on a crystallizer, you should use a spacer rail to minimize the thermal radiation and conduction. See Figure 4-3:
- For outdoor applications, the evaluation unit must be protected from direct sunlight and rain, for example by a suitable shelter.

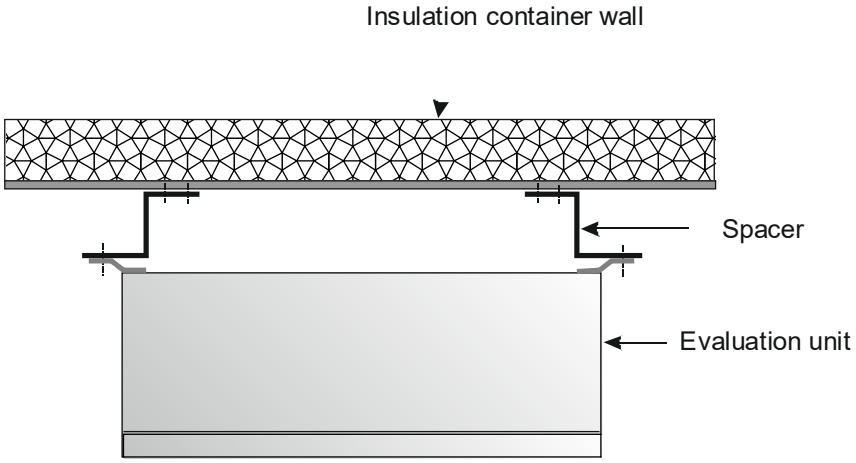

Figure 4-3: View from above: Installation of evaluation unit on a crystallizer

4.3 Connecting the Evaluation Unit

4.3.1 Connecting the HF Cable

You need the following HF quad cable to connect the sensor to the evaluation unit.

For the flow cell

Version 1: 1 x HF cable quad and 1 x N-connector

Version 2: 2 x solid cables (as signal cable, same length)
1 x solid cable (as reference cable)

For the container probes

1 x HF cable quad

Prerequisite for a correct measurement is the correct installation of cables! Please keep in mind:

TIP

Make sure the cable does not get into contact with hot pipes over the entire length (corrugated tube and single cable section after splitting), e.g. direct contact with the device wall (not insulated). This will ensure that all individual cables are exposed to the same ambient conditions and that the compensation of the cable drift works properly.

NOTICE

Never bend the HF cable! The bending radius should not be less than 100 mm. Fix the HF cable with cable binders or other suitable means, so that the cable cannot slip anymore!

NOTICE

During assembly, ensure that the end of the corrugated tube is bent down on the probe side. By doing so, the ingress of fluids into the corrugated tube is prevented.

Connecting the Flow Cell

Version 1

The HF cable quad and the HF connectors on the evaluation unit are labeled. Connect the flow cell to the evaluation unit as shown in Figure 4-4; only cables with identical labeling can be combined. The two connections on the flow cell are not labeled, the assignment of both cable connectors M-Tx and M-Rx is arbitrary. Connect the cable connectors R-Tx and R-Mx with the N-connector (short-circuited).

Version 2

Connect the flow cell to the evaluation unit as shown in Figure 4-5; make sure that the reference cable (ring line) is connected to R-Tx and R-Mx.

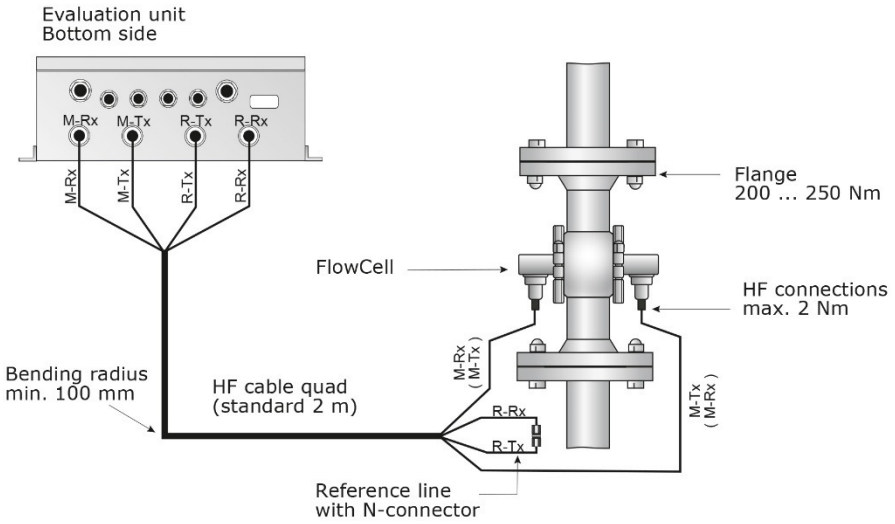

Abb. 4-4: *FlowCell* connection, version 1

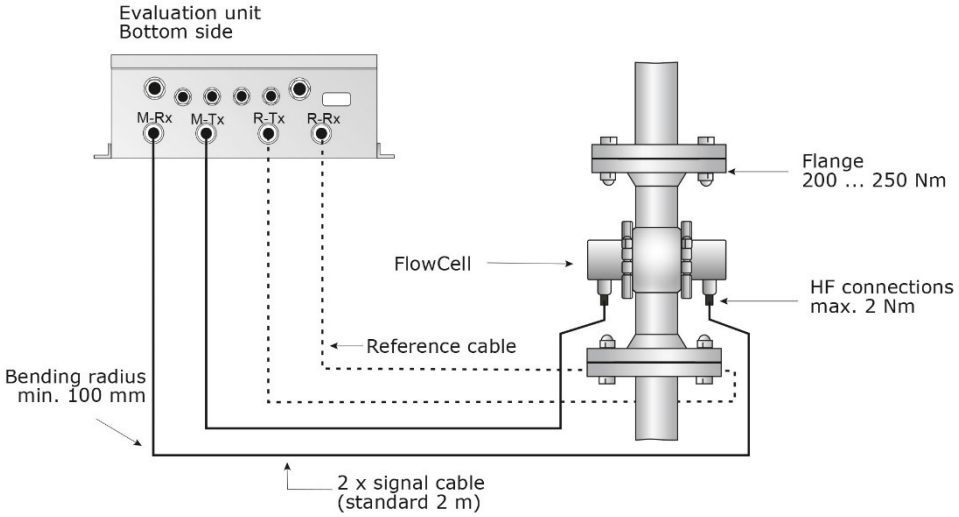

Abb. 4-5: *FlowCell* connection, version 2

Connecting the container probes

The HF cables and the HF connections on the evaluation unit and on the probe are labeled. Connect the probe to the evaluation unit as shown in Figure 4-6; only cables with identical labeling can be combined.

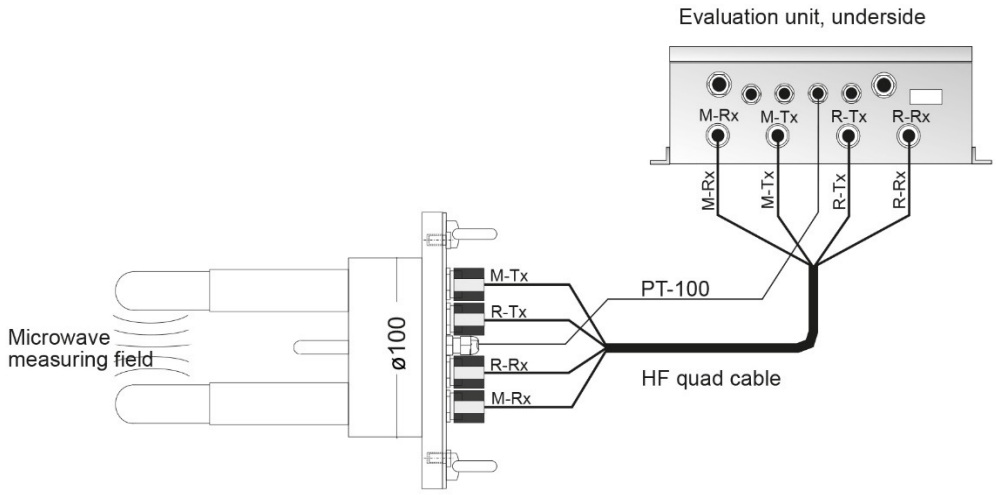

Figure 4-6: Connecting the container probe to the evaluation unit

Hand tighten all screwed connections of the HF cable (2 Nm = 0.2 kg/m)! Before tightening, carefully screw on the cable by hand. **Caution! Threaded joint jams easily.**

Check occasionally if the screwed connection is still properly tightened. If the installation is exposed to vibrations, the screwed connection may come loose and this may result in inaccurate measurements or corrosion of the connections.

As long as the cables are not connected, the coaxial sockets must be covered immediately with plastic caps and the cable connectors have to be protected by suitable provisions against moisture and dirt.

4.3.2 Pin Configuration of the Connector Strip

⚠ WARNING

Electrical hazards

Disconnect power to rule out any contact with live parts during installation and servicing.
Turn off power before opening the instrument. NEVER work on open and live instruments.

Temperature signal connection

A PT100 or a temperature current signal has to be connected to current input 1 or 2 if significant temperature fluctuations occur in the product and if a temperature dependence of the phase or attenuation measurement is likely to occur. The temperature sensor must detect the material temperature in the vicinity of the microwave probe.

When commissioning the container probe, connect the 4-core cable of the PT100 to the connector strip of the evaluation (see fig. 4-7). Connect the other end of the cable with the corresponding plug on the container probe (see fig. 4-6).

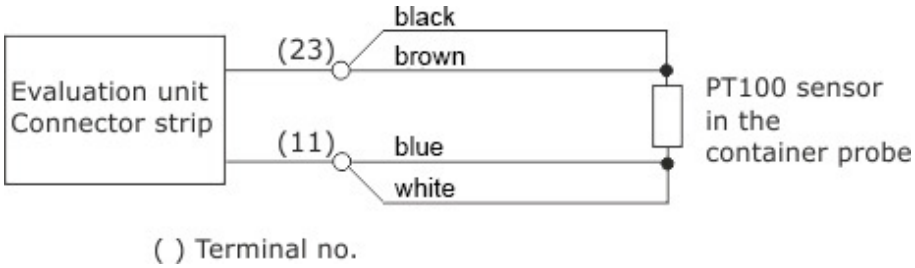

Figure 4-7: PT100 connection container probe

NOTICE

In the delivered state, the PT100 cable has a length of 10 meters. We recommend shortening the cable to the required length. Combine the two core pairs in accordance with figure 4-7.

After connection of the PT100 cable, the included ferrite core must be wound around the cable. The applicable position is within the housing, as close as possible to the cable bushing.

Figure 4-8: Ferrite core

Other connections

- Connect all desired input and output signals to the terminal strip as shown on the following pages. Use the M feed-through to keep the degree of protection.
- Check if the voltage indicated on the type plate matches your local supply voltage.
- Connect the deenergized power cable to the terminals 3(L1), 2(N) and 1(PE).
- Verify that the test switch (power interruption) is in position "On" (see Fig. 5-1).
- Close the instrument housing and turn on the power supply.

NOTICE

Caution! Potential hazards, material damage!
Device type:
LB 565-12 MicroPolar Brix ++ (ID no. 51832-02)

When connecting the 24 V DC power supply, the + and – poles must be connected correctly. There is no reverse polarity protection!

The line cross-section for the power supply must be at least 1.0 mm^2.

The connector strip of the evaluation unit includes the following terminals:

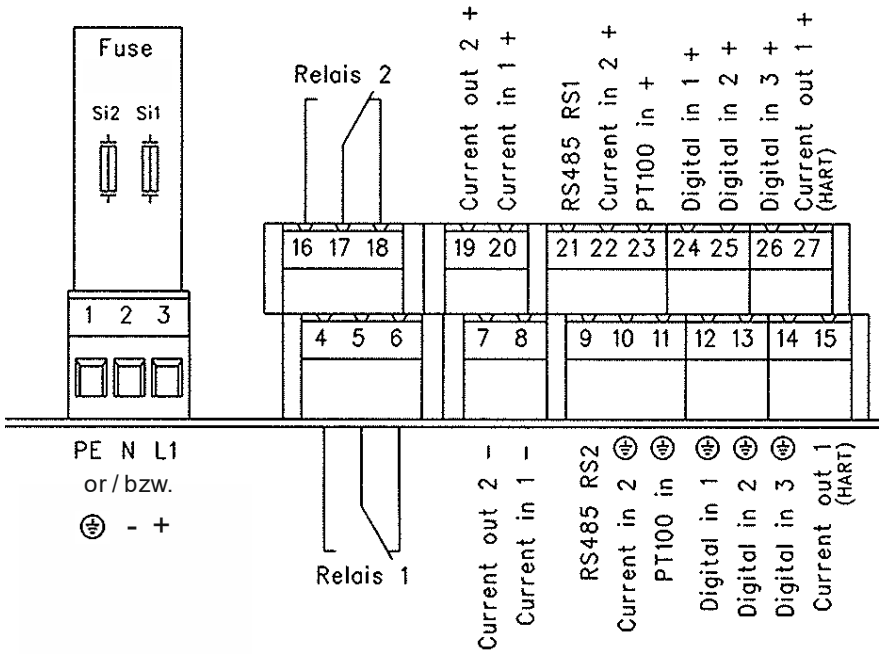

Figure 4-9:
LB 565 wiring diagram

Power supply: Terminals 3 (L1, +), 2 (N, -) and 1 (PE, ⏚)

For MicroPolar Brix, depending on device type, see name plate on the housing outer wall.
1.) 100…240 V AC, 45…65 Hz
2.) 24 V DC: 18…36 V
24 V AC: -20%, +5%, 40…440 Hz

For MicroPolar Brix ++, depending on device type, see name plate on the housing outer wall.
1.) 100…240 V AC, 45…65 Hz
2.) 24 V DC: 18…36 V, no reverse polarity protection

Current input no. 1 (terminals 20+ and 8-), insulated

Input as 0/4 - 20 mA signal. For example, for temperature compensation or reference signal recording.

Current input no. 2 (terminals 22+ and 10-), not insulated

Input as 0/4 - 20 mA signal. For example, for temperature compensation or reference signal recording.

Current output no. 1 (terminals 27+ and 15-), insulated

Output as 4 - 20 mA signal. Output options: Concentrations (1 / 2), current input signals (1 / 2) and PT100 signal

Current output no. 2 (terminals 19+ and 7-), insulated

Output as 0/4 - 20 mA signal. Output options: Concentrations 1 and 2, current input signals 1 and 2 and PT100 signal

PT100 (terminals 23+ and 11-)

Connection for temperature measurement.

Digital input 1: DI1 (terminals 24+ and 12-)

Only for potential-free contacts! Configuration options:

- No function
- Measurement: Start (closed) and stop (open)

Digital input 2: DI2 (terminals 25+ and 13-)

Only for potential-free contacts! Configuration options:

- No function
- Average value: hold (closed) and continue averaging (open)
- Product selection: product 1 (open) and product 2 (closed)

Digital input 3: DI3 (terminals 26+ and 14-)

Only for potential-free contacts! Configuration options:

- No function
- Start sampling, open: no action, closed: unique measurement starts
- Product selection

Relay 1: (terminals 4, 5 and 6)

Changeover contacts (SPDT), insulated, configuration option:

- No function
- Error message
- Stop measurement
- Limit value min. and max.
- No product

Relay 2: (terminals 16, 17 and 18)

change-over contacts (SPDT), insulated

Select configuration:

- No function
- Error message
- Stop measurement
- Limit value min. and max.
- No product

RS485 interface (terminals 21 (RS1) and 9 (RS2))

Serial data interface for output of the live data (all readings for every sweep (measuring cycle), the protocol and data logs.
Data format: 38400 baud, 8 data bits, 1 stop bit, no parity, no hand-shake.

RS232 interface (on instrument bottom)

9-pole SubD-connector. Serial data interface for output of the live data (all readings for every sweep (measuring cycle), the protocol and data logs.

Data format: Data transfer rate 38400 baud, 8 data bits, 1 stop bit, no parity, no handshake

4.3.3 Digital Outputs, Relay

The status of the measurement is output via two relays:

- Error
- Alarm (alarm min. and max.)
- No product

  On the Plausibility menu, you can enter a min. attenuation for pause detection (e.g. for process pause, no product present); if this value is not reached, „No product" is signaled via a relay and the current output drops to 0 or 4 mA. A typical application is pause detection between the discontinuous evaporation crystal processes.

- Measurement stopped

The respective switching state is also signaled via LED's on the front panel (LED's signal 1 and 2).

Relay no.	Error, alarm, no product, measurement stopped, zero current state	Normal
1	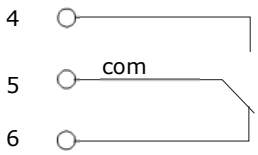	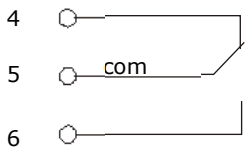
2	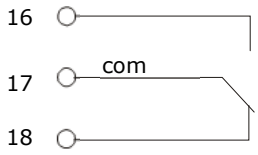	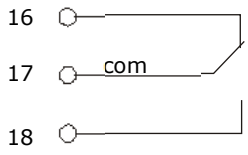

The relays with changeover contacts can either be operated as make contact, terminals 4 & 5 (open at error, alarm ...) or as break contact, terminals 5 & 6 (closed at error, alarm ...)

Chapter 5. **Service instructions**

5.1 General Information

A malfunction of the measuring system is not always due to a defect in the instrument. Often the error is caused by incorrect operation, improper installation or irregularities in the product being measured. If a malfunction occurs, anyway, the measuring system helps you to identify and eliminate errors by displaying error messages on the display, indicating operator errors and defects of the electronics.

Defective modules of the evaluation unit cannot usually be repaired but must be replaced. The microwave module is firmly bolted to a screening hood and must not be opened.

For device disposal, please contact the Berthold Service and apply for a recycling passport.

5.2 Wear Parts

The evaluation unit does not include any parts that are subject to wear or components that require special maintenance.

The plastic caps of the measuring rods of the container probes and the PEEK Microwave windows of the FlowCell may be subject to abrasion over the course of time. A low to medium abrasive influences the measurement only very little and can be compensated for by a calibration. Therefore, check the wear parts in in-tervals of about 2 years. In case of heavy wear, the plastic caps of the measuring rods of the container probe and the PEEK Microwave windows of the FlowCell can be replaced.

Replacing the plastic caps of the measuring rods

1. Unscrew the two plastic caps from the measuring rods and remove the four sealing rings (see figure 5-1, yellow arrow).
2. Clean the four grooves of the sealing rings with a lint-free (if necessary wet) cloth.
3. For each measuring rod, insert two new sealing rings into the grooves.
4. Screw on the two new plastic caps.

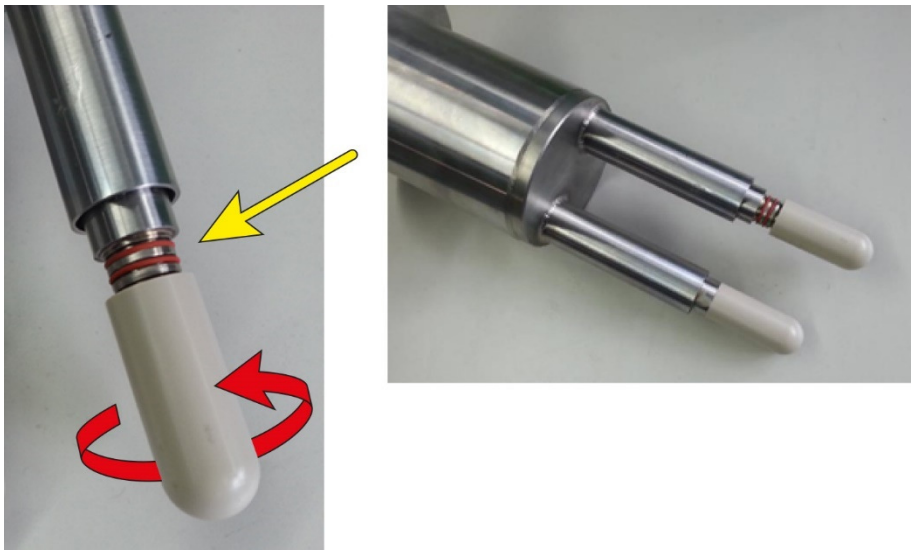

Figure 5-1: Replacing the plastic caps of the measuring rods

Caps set for container probe	
Id.-Nr. 66049-S	2 pieces of PEEK plastic caps with 4 sealing rings

Replacing the Microwave windows of the FlowCell

1. Open the fixing clamp (see fig. 5-2, item 1).
2. Remove the antenna (see fig. 5-2, item 2), the microwave window (see fig. 5-2, item 3) and the sealing O- rings.
3. Attach the new microwave window, the new sealing O-rings and the antenna to the FlowCell with the fixing clamp according to fig. 5-3.

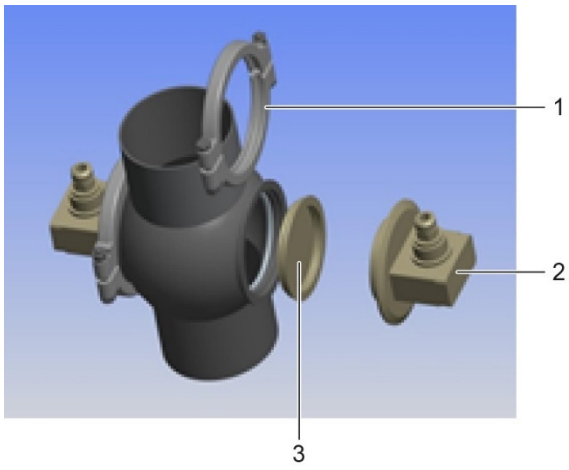

Figure 5-2: Antenna and Microwave window

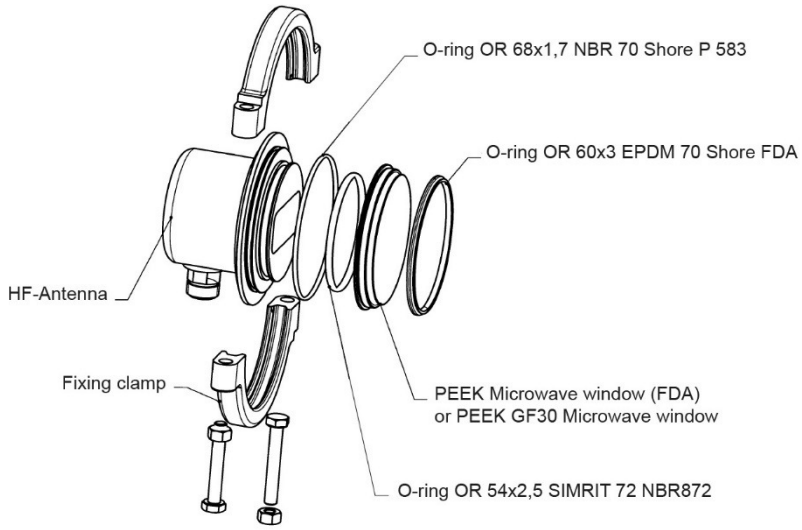

Figure 5-3: Assembly Microwave window

NOTICE

It is recommended to always change the complete set of sealing O-rings.

Microwave windows set for FlowCell	
Id.-Nr. 66624-S	2 pieces of PEEK Microwave windows with 6 sealing O-rings
Id.-Nr. 66625-S	2 pieces of PEEK Microwave windows GF30 glass fibre reinforced with 6 sealing O-rings

5.3 Instrument Cleaning

Clean all system components exclusively with a damp cloth with no chemical cleaning agent. Parts coming into contact with the product (during regular operation) can be cleaned with hot water, taking into account the temperature limits (see chapter 6.2 Technical Data Sensors).

Battery

If the measuring system LB 565 is a long time without power supply (power failure or disconnected from the mains supply), the system clock is powered by the lithium battery on the motherboard. However, the device is working properly even with a dead battery, only measurement data output via a serial interface may become unusable due to incorrect date and time information.
The service life of the battery, even under continuous stress, is at approximately 8 years. Replacement of batteries must be carried out in a device disconnected from mains.

Battery type: 3 Volt lithium cell (button cell), type CR2032

5.4 Fuse Replacement

The mains fuses of the LB 565 are located in the wall housing. The fuses may only be replaced with the power off and must match the specified value.

Use only fuses with the correct rating:
For MicroPolar Brix:
Device version with 100 ... 240 V AC: 2.0 A slow-blow
Device version with 24 V AC/DC: 2.0 A slow-blow

For MicroPolar Brix++:
Device version with 100 ... 240 V AC: 2.0 A slow-blow
Device version with 24 V DC: 6.3 A slow-blow

NOTICE

Spare fuses must match the rating specified by the device manufacturer. Short-circuiting or manipulation is not permitted.

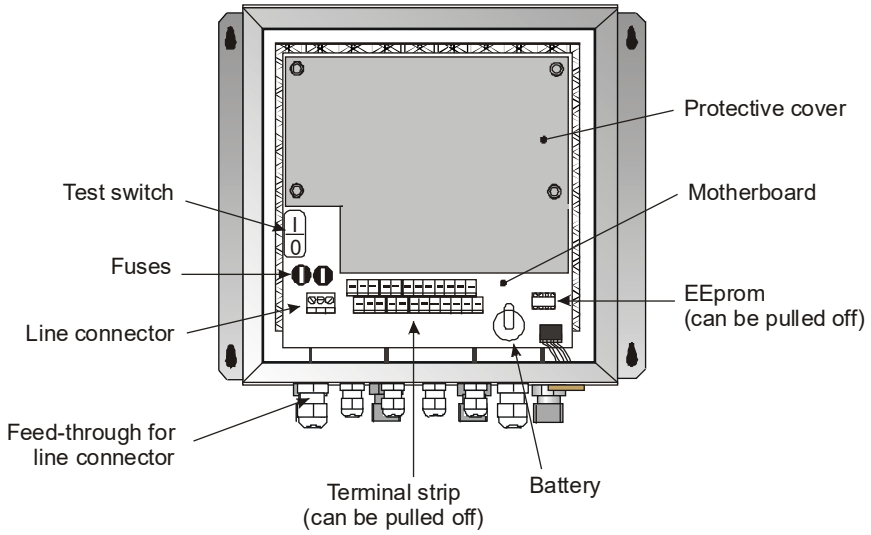

Figure 5-4: View with opened wall housing MicroPolar

Chapter 6. **Technical Data**

General specifications	
Method	Microwave transmission measurement
Operating frequency	2.4 - 2.5 GHz (ISM band), depending on local regulations
Transmission power	MicroPolar Brix: < 0.1 mW (< - 10 dBm) MicroPolar Brix ++: < 10 mW (< 10 dBm) All coaxial line power
Applications	Concentration measurement in containers and pipes

6.1 Technical Data Evaluation Unit

Evaluation unit	
Housing	Wall housing made of stainless steel, see dimensional drawing in *chapter 8* MicroPolar Brix: HxWxD: 300 x 323 x 140 mm MicroPolar Brix++: HxWxD: 400 x 338 x 170 mm
Protection type	IP 65
Weight	MicroPolar Brix: about 6.5 kg MicroPolar Brix ++: about 8.0 kg
Ambient conditions during operation	-20 ... +60 °C (253 K ...333 K), no condensation Relative humidity: max. 80 % Altitude: max. 2000 m
Ambient conditions during storage	-20 ... +70 °C (253 K ...343 K), no condensation Relative humidity: max. 80 %
Achievable accuracy	≤ 0.2 weight % (standard deviation) depending on product and sensor
Display	Dot matrix LC display, 114 mm x 64 mm, 240 x 128 pixels, with back-lighting, automatic contrast setting
Keyboard	Freely accessible foil keypad, light-stable and weatherproof: alphanumeric keyboard and 4 softkeys (software-assigned buttons)

Power supply	For MicroPolar Brix, depending on device type: 1.) 100 ... 240 V AC, 45 ... 65 Hz 2.) 24 V DC: 18 ... 36 V; 24 V AC: -20%, +5%, 40 ... 440 Hz For MicroPolar Brix ++, depending on device type: 1.) 100 ... 240 V AC, 45 ... 65 Hz 2.) 24 V DC: 18 ... 36 V, no reverse polarity protection
Power consumption	For MicroPolar Brix: max. 30 VA (AC/DC), depending on configuration For MicroPolar Brix ++: max. (48/60) VA (AC/DC), depending on configuration
Fuses	For MicroPolar Brix: 2 x 2.0 A / slow-blow For MicroPolar Brix ++: 2 x 2.0 A / slow-blow at 100 ... 240 V AC or 2 x 6.3 A / slow-blow at 24 V DC
Battery type	3 V Lithium button cell, type CR2032
Measured value	e.g. concentration, dry content
Inputs and outputs	
Cable cross-section	min. 1.0 mm² (mains supply)
Cable feed-through	2 x M20x1.5 for cable 5...14 mm (depending on application) 4 x M16x1.5 for cable 5 ...8 mm (depending on application)
Sensor connection	Inputs and outputs for signal and reference channel, 50 Ω N-socket
HF cable	Cable lengths: 2, 4, 6 and 10 m; 50 Ω; both sides with 4 N connectors
Current input	2 x current input 0/4 ...20 mA, ohmic resistance 50 Ω, 1x insulated, 1x instrument ground e.g. for temperature compensation
Current output	Current output 1: 4...20 mA, ohmic resistance max. 800 Ω, insulated Current output 2: 0/4...20 mA, ohmic resistance max. 800 Ω, insulated e.g. for result or temperature output
PT100 connection	Measuring range: -50 ... +200 °C (223 ... 473 K); measurement tolerance: < 0.4 °C

Digital input	3 x digital inputs (DI1..3), for floating connectors (Do not connect to a power supply). Configuration options: DI1: none, measurement start/stop DI2: none, measurement hold, product selection DI3: none, sampling, product selection Function description: 1. Measurement (Start/Stop), open: Measurement stopped, closed: Measurement started and/or measurement running 2. Hold measurement, open: measurement running, closed: measurement stopped, i.e. average values and current output are held 3. Product selection via a DI: open: Product 1 (P1), closed: P2 Product selection via two DI's**:** DI2 & DI3 open: P1 DI2 closed & DI3 open: P2 DI2 open & DI3 closed: P3 DI2 & DI3 closed: P4 4. Start sampling: open: no actions, closed: single measurement starts
Relay outputs	2 x relays (SPDT), insulated Configuration options: - Collective failure message - Stop measurement - Limit value (min. and max.) - No product Load capacity: AC: max. 400VA DC: max. 90W AC/DC: max. 250V, max. 2A, non-inductive ≥ 150V: voltage must be grounded The cable used at the relay output must correspond to a mains cable. Restrictions at 24 V AC/DC (DC: 18 ...36 V; AC: 24 V +5 %, -20 %) mains supply, if the ground conductor is not connected to terminal 1 (PE): AC: max. 50 V DC: max. 70 V
Serial interfaces	RS232 on the bottom side RS485 via terminal strip Data format: 38400 Bd, no handshake, 8 data bits, 1 stop bit, no parity

6.2 Technical Data Sensors

FlowCells	
Application	Microwave FlowCell with various nominal diameters and flanges for concentration measurement on pipelines
Material	Inline housing made of stainless steel 1.4404 polished (AISI 316L) Mikrowave windows made of PEEK Product touching sealing made of EPDM
Process coupling	Two versions: 1. Hygiene milk pipe screw connection DIN 11853-1 EHEDG certified 2. Flange according to EN 1092-1/11 (V flange) FDA-approved materials Optional adapter for the V flange version with ASA flange
Process pressure	up to 16 bar (relative)
Temperature range	Product temperature: 10...130 °C (283...403 K), temporarily up to 140 Ambient temperature: -20...60 °C (253...333 K) Storage temperature: 10...80 °C (283...353 K)
Connections	2 x HF connections: N female, 50 Ω for HF cable with max. 10 m length
Versions	Nominal pipe widths from 50 ... 150 mm
Dimensions	See dimensional drawings in chapter 8.

Overview FlowCells with V flange

Designation	ID no.	Nominal width [mm]	Flange	Pressure [bar]
LB 5660-102-00x	66744-001	50	DN 50 / PN 16	16
LB 5660-202-00x	66744-002	65	DN 65 / PN 16	
LB 5660-302-00x	66744-003	80	DN 80 / PN 16	
LB 5660-402-00x	66744-004	100	DN 100 / PN 16	
LB 5660-502-00x	66744-005	125	DN 125 / PN 16	
LB 5660-602-00x	66744-006	150	DN 150 / PN 16	

Overview FlowCells with Hygiene milk pipe screw connection

Designation	ID no.	Nominal width [mm]	Pressure [bar]
LB 5660-112-00x	66744-013	50	16
LB 5660-212-00x	66744-014	65	
LB 5660-312-00x	66744-015	80	
LB 5660-412-00x	66744-016	100	
LB 5660-512-00x	66744-017	125	
LB 5660-612-00x	66744-018	150	

Overwiew Microwave windows set

The microwave windows of the FlowCell are available in a reinforced glass fibres design for applications with a high grade of abrasion. This design is not approved for the food sector.

Id.-Nr.	Description
66624-S	2 pieces of PEEK Microwave windows with 6 sealing O-rings
66625-S	2 pieces of PEEK Microwave windows GF30 glass fibre reinforced with 6 sealing O-rings

Overview ASA flange adapter

Designation	ID no.
ASA flange adapter set for Flow Cell 50	62324
ASA flange adapter set for Flow Cell 65	62319
ASA flange adapter set for Flow Cell 80	62319
ASA flange adapter set for Flow Cell 100	62331
ASA flange adapter set for Flow Cell 150	62335
The kit consists of two adapters, screws and two seals.	

Overview Inline housing, FDA

for temperature or conductivity sensors or sampling valve

Designation	VFL	G-BS/M
	Id.-Nr.	Id.-Nr.
Inline housing for Flowcell 50	67078	67084
Inline housing for Flowcell 65	67079	67085
Inline housing for Flowcell 80	67080	67086
Inline housing for Flowcell 100	67081	67087
Inline housing for Flowcell 125	67082	67088
Inline housing for Flowcell 150	67083	67089

Overview surface temperature sensor DN 50

Self-adhesive PT100 temperature sensor with fixing material

Connection cable 10 m, 4-wire (loose ends)

Temperature range: -50 - +200 °C

Designation	Id.-Nr.
Self-adhesive temperature sensor for DN 50	66655
Self-adhesive temperature sensor for DN 65	66656
Self-adhesive temperature sensor for DN 80	66657
Self-adhesive temperature sensor for DN 100	66658
Self-adhesive temperature sensor for DN 125	66659
Self-adhesive temperature sensor for DN 150	66660

Overview sensors

Designation	Id.-Nr.
Conductivity sensor hygienic, Clamp-flange Inductive conductivity measuring device for liquid media in hygienic applications Measurement range: 0-999 mS/cm Process connection: Clamp-flange Process pressure: Max. 16 bar Power supply: 18-36 V DC, max. 190 mA Output: 4-20 mA	66693
Temperature sensor EHEDG, Clamp-flange PT100 temperature sensor for hygienic applications Measurement range: -50 - +250 °C Length 20 mm, diameter 4 mm Process connection: Clamp-flange With connection cable 10 m (loose ends)	66694

Overview Sampling valve and accessories

Designation	Id.-Nr.
Sampling valve aseptic, Clamp-flange Aseptic Inline Sampling valve Stainless steel 1.4404 (AISI 316L), bellows PTFE Discharge port S-DN 10 without flushing connection Process connection: Clamp-flange	66738
Clamp-blind flange Clamp-blind flange for Inline housing DN 50-150 Stainless steel 1.4306 (AISI 304L)	66737
Clamp coupling 1 piece Clamp coupling for Inline housing DN 50-150 Stainless steel 1.4306 (AISI 304L)	66736

Container probes	
Application	Container probes with and without flushing device for concentration measurement in process containers and pipelines with nominal width ≥ 200 mm.
Material	Plastic caps, stainless steel PT100 connection cable: Silicon / Teflon
Process coupling	Flange according to DIN EN 1092 type 05 DN65 / PN6, DN 80, 100, 150 / PN16; ASA flange 2.5'' / 150 PSI (More more on request)
Process pressure	Up to 16 bar, depending on model
Temperature range	Product temperature: 10...120 °C (283...393 K) Ambient temperature: -20...60 °C (253...333 K) Storage temperature: 10...80 °C (283...353 K)
Connections	4 x HF connections: N female, 50 Ω for HF cable with max. 10 m length
Dimensions	See dimensional drawings in chapter 8.
Accessory sealing washer	
Material	Klingersil C-4400
Thickness	3 mm
Caps set for container probe	
Id.-Nr. 66049-S	Id.-Nr. 66049-S

Overview container probes and sealing washers

Designation	ID no.	Flange	Pressure [bar]	ID no. Seals
LB 5650-01	65464-01	DN 65 / PN6	6	32175
LB 5650-02	65464-02	DN 80 / PN16	16	33717
LB 5650-03	65464-03	DN 100 / PN16	16	46661
LB 5650-04	65464-04	DN 150 / PN16	16	46664
LB 5650-05	65464-05	ASA 2.5'' / 150 PSI	16	46665
LB 5650-09	65464-09	ASA 3'' / 150 PSI	16	50659
LB 5651-01	65937-01	DN 65 / PN6	6	32175
LB 5651-02	65937-02	DN 80 / PN16	16	33717
LB 5651-03	65937-03	DN 100 / PN16	16	46661
LB 5651-04	65937-04	DN 150 / PN16	16	46664
LB 5651-05	65937-05	ASA 2.5'' / 150 PSI	16	46665

6.3 Technical Data HF Cable

HF cable Quad	
Material	Corrugated tube: Polyamide (PA6) Cable sheath: Polyethylene (PE)
Protection type	IP 66
Temperature	In operation: -30 ... +70 °C When installing: -20 ... +70 °C

Cable length [m]	ID no.
2	43431
4	43432
6	43433
8	43434
10	43435

HF-Kabel Quad, hygienic	
Material	Corrugated tube: Polyamide (PA6) Cable sheath: Polyethylene (PE)
Protection type	IP 66
Temperature	In operation: -30 ... +70 °C When installing: -20 ... +70 °C

Cable length [m]	ID no.
2	67048
4	67049

HF cable Quad (solid cable)	
Material	Cable sheath: Polyethylene (PE)
Protection type	IP 68 when unscrewed
Temperature	In operation: -40 ... +85°C When installing: -40 ... +85°C
Attenuation coeffi-cient	About 0.3 dB/m

Cable length [m]	ID no.
2.0	11476
2.5	11477

3.0	11478
3.5	11479
4.0	11480

6.4 Format of Serial Data Output RS232 and RS485

Headline

Date·Time→State→Status→Product→Att→Phi→R2→Tint→IN1→IN2→PT100→C→Cm→C2→C2m¶

Following lines

01.01.2005·00:00:00→0000→0→1→0.43→5.30→0.07→0.0→0.0→0.0→0.0→75.36→75.00→0.00→0.00¶

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Column no.	Description	Format
1	Date and time	DD.MM.YY·HH:MM:SS
2	State	4 digits, HEX
3	Status: Information about the quality of the last measurement	0 : Measurement OK < 0 : Error
4	Product number	X (1 to 4)
5	Attenuation [dB]	X.XX
6	Phase [°/GHz]	X.XX
7	Dispersion of the phase regression	X.XX
8	Device temperature [temperature unit]	X.X
9	Current input 1 [unit of current input]	X.X
10	Current input 2 [unit of current input]	X.X
11	PT100 temperature [temperature unit]	X.X
	[...] with selection of the unit g/cm^3	
12	Concentration 1 live	X.XX [X.XXXX]
13	Concentration 1 averaged	X.XX [X.XXXX]
14	Concentration 2 live	X.XX [X.XXXX]
15	Concentration 2 averaged	X.XX [X.XXXX]

Special characters

"→" Tabulation "¶" Carriage return + Line feed "·" Spaces

Chapter 7. **Certificates**

7.1 EC Declaration of Conformity

BERTHOLD TECHNOLOGIES GmbH & Co.KG

Calmbacher Str. 22
75323 Bad Wildbad, Germany

Phone +49 7081 177-0
Fax +49 7081 177-100
info@BertholdTech.com
www.BertholdTech.com

EC – Declaration of Conformity

We herewith confirm that the constraction of the following indicated products / systems / units is brought into circulation to comply with the relevant EC regulations.

This declaration is declared void should alterations or unintended use take place without our authorisation.

Title: **Concentration-Measuring System Micro-Polar Brix**

Type: LB 565-XX

Relevant EC regulations:

89/336/EWG (electromagnetic compatibility)
reviewed: 91/263/EWG, 92/31/EWG, 93/68/EWG, 93/97/EWG

73/23/EWG (low voltage guidelines)
reviewed: 93/68/EWG

The following norms were considered for the assessment of the pruducts:

EN 55011:1998 + A1:1999 + A2:2002
EN 61010-1:2002-08
EN 61006-6-2:2001
EN 61000-4-2:1995 + A1:1998 + A2:2001
EN 61000-4-3:2002 + A1:2002
EN 61000-4-4:1995 + A1:2001 + A2:2001
EN 61000-4-5:1995 + A1:2001
EN 61000-4-6:1996 + A1:2001
EN 61000-4-11:1994 + A1:2001

This declaration is issued by the manufacturer:

BERTHOLD TECHNOLOGIES GmbH & Co. KG
P.O. Box 100163
D-75312 Bad Wildbad / Germany

by

Dr. J. Briggmann
Development Manager
Process Control

H. Tetzlaff
Specialist CE Certification

Bad Wildbad, 05.04.2004

Registergericht / Court of Registration: Calw HRA 991
Persönlich haftende Gesellschafterin / Fully liable Associates: BERTHOLD TECHNOLOGIES Verwaltungs-GmbH
Registergericht / Court of Registration: Calw HRB 1520
Geschäftsführung / Management: Hans J. Oberhofer (Vors./CEO), Dr. Wilfried Reuter
Beiratsvorsitzender / Chairman of the Board: Dr. Fritz Berthold
USt.-IdNr. / VAT Reg.No: DE813050511
Deutsche Steuernummer / German Tax No: 49036/08038
Dresdner Bank 75105 Pforzheim Konto/account no.6 511 120 (BLZ 666 800 13)/ SWIFT-BIC DRES DE FF 666 IBAN: DE05 6668 0013 0651 1120 00
Sparkasse PF-CW 75323 Bad Wildbad Konto/account no.80 450 05 (BLZ 606 510 70)/ SWIFT-BIC PZHSDE66 IBAN: DE76 6065 1070 0008 0450 05

BERTHOLD TECHNOLOGIES GmbH & Co.KG

Calmbacher Str. 22
75323 Bad Wildbad, Germany

Phone +49 7081 177-0
Fax +49 7081 177-100
info@Berthold.com
www.Berthold.com

EC-Declaration of Conformity

We herewith conform that the construction of the following indicated products / systems / units is brought into circulation to comply with the relevant EC regulations.

This declaration is declared void should alteration or unintended use take place without our authorisation.

Description: ***Concentration-Measuring Systems Micro-Polar Brix ++***

Type: ***LB 565-XX***

	EC-Regulation and Reviews		**considered Norms**	
EMC	2004/108/EG		EN 55011	1998 +A1:1999 +A2:2002
			EN 61326-1	2006-05
			EN 61000-4-2	1995 +A1:1998 +A2:2001
			EN 61000-4-3	2006-12
			EN 61000-4-4	2004
			EN 61000-4-5	1995 +A1:2001
			EN 61000-4-6	1996 +A1:2001
			EN 61000-4-11	1994-08 +A1:2001-02
			Namur NE21	2004
Low Voltage Directive	73/23/EWG	93/68/EWG	EN 61010 Part 1	2002-08
R&TTE	1999/5/EC		ETSI EN 300 440-1 ETSI EN 300 440-2	2007-08 2007-08

This declaration is issued by the manufacturer

BERTHOLD TECHNOLOGIES GmbH & Co. KG
Calmbacher Str. 22
75323 Bad Wildbad, Germany

updated by

Dr. Wilfried Reuter
Technical Director
Bad Wildbad, 06.06.2008

Registergericht / Court of Registration: Stuttgart HRA 330991
Persönlich haftende Gesellschafterin / Fully liable Associates: BERTHOLD TECHNOLOGIES Verwaltungs-GmbH
Registergericht / Court of Registration: Stuttgart HRB 331520
Geschäftsführung / Management: Hans J. Oberhofer, Dr. Wilfried Reuter
Beiratsvorsitzender / Chairman of the Board: Dr. Fritz Berthold
U.St.-Id-Nr. / VAT Reg. No.: DE813050511
Deutsche Steuernummer / German Tax No.: 49038/08038
WEE-Reg. No.: DE99468690

Dresdner Bank 75105 Pforzheim Konto/Account No. 6 511 120 (BLZ 666 800 13) /SWIFT-BIC DRES DEFF 666 IBAN: DE05 6668 0013 0651 1120 00
Sparkasse PF-CW 75323 Bad Wildbad Konto/Account No. 80 450 03 (BLZ 666 500 85) /SWIFT-BIC PZHSDE66 IBAN: DE37 6665 0085 0008 0450 03

CERTIFICATE OF COMPLIANCE

Valid until end: December, 2018

EHEDG
EUROPEAN HYGIENIC ENGINEERING & DESIGN GROUP

TYPE EL
CLASS I

TUM Certification
hereby declares that the product

microwave flow cell with PEEK windows and EPDM O-ring seals in size DN50 – DN150

from

Berthold Technologies GmbH & Co. KG, 75323 Bad Wildbad, Germany

has been evaluated for compliance with the
Hygienic Equipment Design Criteria of the EHEDG, by:

TUM (Forschungszentrum für Brau- u. Lebensmittelqualität) at Weihenstephan, Germany

and meets the criteria as demonstrated by:

Evaluation Report No. 596TUM2017

Signed _____ *Evaluation Officer*
Dr. Jürgen Hofmann

Signed _____ *Head of Department*
Prof. Dr. Fritz Jacob

Date of issue: 13 November 2017

Certificate No. 17/2017

TECHNISCHE UNIVERSITÄT MÜNCHEN
FORSCHUNGSZENTRUM WEIHENSTEPHAN für Brau- und Lebensmittelqualität

85354 Freising-Weihenstephan, Germany
©EHEDG

7.2 Frequency License

CETECOM ICT Services GmbH

EC Identification number 0682

authorized by the German Government

to act as Notified Body in accordance with the R&TTE Directive 1999/5/EC of 09. March 1999.

CERTIFICATE
EXPERT OPINION

Registration-No.: **E814059R-EO**

Certificate Holder: **Berthold Technologies GmbH & Co KG**
Calmbacher Strasse 22

D-75323 Bad Wildbad

Product Designation: **LB 465–xx, LB 466–xx, LB 565–xx, LB 566–xx**

Product Description: **Short Range Devices**

Product Manufacturer: **Berthold Technologies GmbH & Co KG**
Calmbacher Strasse 22

D-75323 Bad Wildbad

Essential requirements	Specifications / Standards	Submitted documents	Result
EMC (R&TTE, Article 3.1b)	EN 55011:1998+A1:1999 (class A) EN 61000-6-2:2001	Test Report	conform
Radio spectrum (R&TTE, Article 3.2)	EN 300 440-1 V1.3.1 (2001-09) EN 300 440-2 V1.1.1 (2001-09)	Test Report	conform

Marking: **The product shall be signed with CE and our notified body number as shown right hand.**

CE 0682

The scope of this evaluation relates to the submitted documents only.
The certificate is only valid in conjunction with the following number of annexes.

Number of annexes: 1

Saarbrücken, 24.06.2004
Place, Date of Issue

Signed by Ernst Hussinger
Notified Body

GERMAN NOTIFIED BODY · DEUTSCHE BENANNTE STELLE ·

CETECOM ICT Services GmbH, Untertürkheimer Straße 6-10, D-66117 Saarbrücken, Germany
http://www.cetecom.de

CETECOM ICT Services GmbH

CETECOM™

CERTIFICATE OF CONFORMITY

Registration-No.: **E814059R-CC** Number of annexes: ---

Certificate Holder: **Berthold Technologies GmbH & Co KG**
Calmbacher Strasse 22

D-75323 Bad Wildbad

Product Designation: **LB 465–xx, LB 466–xx, LB 565–xx, LB 566–xx**

Product Description: **Short Range Devices**
(humidity sensor)

Product Manufacturer: **Berthold Technologies GmbH & Co KG**
Calmbacher Strasse 22

D-75323 Bad Wildbad

Specifications and test reports:

Specification	Test report no. & date	Name of test laboratory	Notes
EN 55011:1998+A1:1999 (class A) EN 61000-6-2:2001	2003-731-1182-REN dated Sept. 9, 2003	ELMAC GmbH	conform
EN 300 440-1 V1.3.1 (2001-09) EN 300 440-2 V1.1.1 (2001-09)	2-3389-01-01/03 dated May 14, 2004	CETECOM ICT	conform

Statement **This equipment fulfils the requirements or parts thereof in the above mentionend specifications.**

CETECOM ICT Services is authorized to act as Notified Body in accordance with the R&TTE Directive 1999/5/EC of 09. March 1999

Saarbrücken, 24.06.2004
Place, Date of Issue

Signed by Ernst Hüssinger
Notified Body

GERMAN NOTIFIED BODY · DEUTSCHE BENANNTE STELLE ·

CETECOM ICT Services GmbH

CERTIFICATE OF CONFORMITY

Registration-No.: **E815580V-CC** Number of annexes: ---

Certificate Holder: **BERTHOLD TECHNOLOGIES GmbH & Co KG**
Calmbacher Strasse 22
75323 Bad Wildbad
Germany

Product Designation: **Micro-Polar ++ LB 566-1x**
Micro-Polar Brix ++ LB 565-1x

Product Description: **Short Range Devices**
(humidity sensor)

Product Manufacturer: **BERTHOLD TECHNOLOGIES GmbH & Co KG**
Calmbacher Strasse 22
75323 Bad Wildbad
Germany

Specifications and test reports:

Specification	Test report no. & date	Name of test laboratory	Notes
EN 300 440-1 V1.4.1 (2007-08) EN 300 440-2 V1.2.1 (2007-08)	2-4837-01-02/07 dated February 07, 2008	CETECOM ICT	conform

Statement **This equipment fulfils the requirements or parts thereof in the above mentionend specifications.**

CETECOM ICT Services is authorized to act as Notified Body in accordance with the R&TTE Directive 1999/5/EC of 09. March 1999

Saarbrücken, 2008-12-05
Place, Date of Issue

Signed by Ernst Hussinger
Notified Body

GERMAN NOTIFIED BODY • DEUTSCHE BENANNTE STELLE •

CETECOM ICT Services GmbH, Untertürkheimer Straße 6-10, D-66117 Saarbrücken, Germany

CETECOM ICT Services GmbH

EC Identification Number 0682

authorized by the German Government

Bundesnetzagentur

BNetzA-bS-02/51-52

to act as Notified Body in accordance with the R&TTE Directive 1999/5/EC of 9. March 1999.

EXPERT OPINION

Registration-No.:	**E815580V-EO**
Certificate Holder:	**BERTHOLD TECHNOLOGIES GmbH & Co KG** **Calmbacher Strasse 22** **75323 Bad Wildbad** **Germany**
Product Designation:	**Micro-Polar ++ LB 566-1x** **Micro-Polar Brix ++ LB 565-1x**
Product Description:	**Short Range Devices**
Product Manufacturer:	**BERTHOLD TECHNOLOGIES GmbH & Co KG** **Calmbacher Strasse 22** **75323 Bad Wildbad** **Germany**

Essential requirements	Specifications / Standards	Submitted documents	Result
Radio spectrum (R&TTE, Article 3.2)	EN 300 440-1 V1.4.1 (2007-08) EN 300 440-2 V1.2.1 (2007-08)	Test Report	conform

Marking: **The product shall be signed with CE and our notified body number as shown right hand.**

CE 0682

The scope of this evaluation relates to the submitted documents only.
The certificate is only valid in conjunction with the following number of annexes.

Number of annexes: 1

Saarbrücken, 2008-12-05
Place, Date of Issue

Signed by Ernst Hussinger
Notified Body

GERMAN NOTIFIED BODY • DEUTSCHE BENANNTE STELLE •

CETECOM ICT Services GmbH, Untertürkheimer Straße 6-10, D-66117 Saarbrücken, Germany
http://www.cetecom-ict.de

- Technical Acceptance Certificate -

CTC advanced GmbH (formerly CETECOM ICT Services GmbH)
Untertuerkheimer Str. 6 | 66117 Saarbruecken | German | www.ctcadvanced.com

CTC advanced
member of RWTÜV group

Certificate Holder:	**BERTHOLD TECHNOLOGIES GMBH & CO. KG** CALMBACHER STR. 22 75323 BAD WILDBAD Germany
ISED Certification Number:	**4777A-IC01X01**
CTC Registration Number:	**1865**
OATS Facility ID Number:	**3462C-1**
OATS Facility:	**CTC advanced GmbH** Untertuerkheimer Str. 6 -10 66117 Saarbruecken Germany Phone: +49 681 598-0 Fax: +49 681 598-8775 Email: info@ctcadvanced.com
Product Description:	**Concentration, Dry Mass, Water, Density measuring system**

Bundesnetzagentur

BNetzA-CAB-03/22-51

authorized by the German Government to act as CAB in accordance with the MRA EU Canada of 1st November 1998.

Certification of equipment means only that the equipment has met the requirements of the above-noted specification. Licence applications, where applicable to use certified equipment, are acted on accordingly by the ISED issuing office and will depend on the existing radio environment, service and location of operation. This certificate is issued on condition that the holder complies and will continue to comply with the requirements and procedures issued by ISED. The equipment for which this certificate is issued shall not be manufactured, imported, distributed, leased, offered for sale or sold unless the equipment complies with the applicable technical specifications and procedures issued by ISED.

La certification du matériel signifie seulement que le matériel a satisfait aux exigences de la norme indiquée ci dessus. Les demandes de licences nécessaires pour l'utilisation du matériel certifié sont traitées en conséquence par le bureau de délivrance d'ISDE et dépendent des conditions radio ambiantes, du service et de l'emplacement d'exploitation. Le présent certificat est délivré à la condition que le titulaire satisfasse et continue de satisfaire aux exigences et aux procédures d'ISDE. Le matériel à l'égard duquel le présent certificat est délivré ne doit pas être fabriqué, importé, distribué, loué, mis en vente ou vendu à moins d'être conforme aux procédures et aux spécifications techniques applicables publiées par ISDE.

I hereby attest that the subject equipment was tested and found in compliance with the above-noted specification.
J'atteste par la présente que le matériel a fait l'objet d'essai et jugé conforme à la spécification ci-dessus.

FOREIGN CERTIFICATION BODY
CAB ID NO DE0001

CTC advanced GmbH

cn=Gerald Schmidt, o=CTC advanced GmbH, ou=SCT-141216, email=gerald.schmidt@ctcadvanced.com, c=DE
2017.09.08 10:20:11 +02'00'

Saarbrücken

Certification Body

- Technical Acceptance Certificate -

CTC advanced GmbH (formerly CETECOM ICT Services GmbH)
Untertuerkheimer Str. 6 | 66117 | German | www.ctcadvanced.com

CTC advanced
member of RWTÜV group

Certificate Holder:	**BERTHOLD TECHNOLOGIES GMBH & CO. KG** CALMBACHER STR. 22 75323 BAD WILDBAD Germany
ISED Certification Number:	**4777A-IC01X12**
CTC Registration Number:	**1866**
OATS Facility ID Number:	**3462C-1**
OATS Facility:	**CTC advanced GmbH** Untertuerkheimer Str. 6 -10 66117 Saarbruecken Germany Phone: +49 681 598-0 Fax: +49 681 598-8775 Email: info@ctcadvanced.com
Product Description:	**Concentration, Dry Mass, Water, Density measuring system**

Bundesnetzagentur

BNetzA-CAB-03/22-51

authorized by the German Government to act as CAB in accordance with the MRA EU Canada of 1st November 1998.

Certification of equipment means only that the equipment has met the requirements of the above-noted specification. Licence applications, where applicable to use certified equipment, are acted on accordingly by the ISED issuing office and will depend on the existing radio environment, service and location of operation. This certificate is issued on condition that the holder complies and will continue to comply with the requirements and procedures issued by ISED. The equipment for which this certificate is issued shall not be manufactured, imported, distributed, leased, offered for sale or sold unless the equipment complies with the applicable technical specifications and procedures issued by ISED.

La certification du matériel signifie seulement que le matériel a satisfait aux exigences de la norme indiquée ci dessus. Les demandes de licences nécessaires pour l'utilisation du matériel certifié sont traitées en conséquence par le bureau de délivrance d'ISDE et dépendent des conditions radio ambiantes, du service et de l'emplacement d'exploitation. Le présent certificat est délivré à la condition que le titulaire satisfasse et continue de satisfaire aux exigences et aux procédures d'ISDE. Le matériel à l'égard duquel le présent certificat est délivré ne doit pas être fabriqué, importé, distribué, loué, mis en vente ou vendu à moins d'être conforme aux procédures et aux spécifications techniques applicables publiées par ISDE.

I hereby attest that the subject equipment was tested and found in compliance with the above-noted specification.
J'atteste par la présente que le matériel a fait l'objet d'essai et jugé conforme à la spécification ci-dessus.

FOREIGN CERTIFICATION BODY
CAB ID NO DE0001

CTC advanced GmbH

cn=Gerald Schmidt, o=CTC advanced GmbH, ou=SCT-141216, email=gerald.schmidt@ctcadvanced.com, c=DE
2017.09.08 09:10:01 +02'00'

Saarbrücken

Certification Body

TCB

GRANT OF EQUIPMENT AUTHORIZATION

Certification

Issued Under the Authority of the

Federal Communications Commission

By:

TCB

CTC advanced GmbH (former CETECOM ICT Services Gmb
Untertuerkheimer Strasse 6-10
66117 Saarbruecken,
Germany

Date of Grant: 09/08/2017

Application Dated: 09/08/2017

Berthold Technologies
Calmbacher Str. 22 75323 Bad Wildbad Germany
Bad Wildbad, 75323
Germany

Attention: Dirk Moermann , Dr.

NOT TRANSFERABLE

EQUIPMENT AUTHORIZATION is hereby issued to the named GRANTEE, and is VALID ONLY for the equipment identified hereon for use under the Commission's Rules and Regulations listed below.

FCC IDENTIFIER: R9ZFCC01X01
Name of Grantee: Berthold Technologies
Equipment Class: **Part 15 Field Disturbance Sensor**
Notes: **Concentration, Dry Mass, Water, Density measuring system**

Grant Notes	FCC Rule Parts	Frequency Range (MHZ)	Output Watts	Frequency Tolerance	Emission Designator
	15.245	2441.0 - 2441.0			

PC II to add additional antennas.

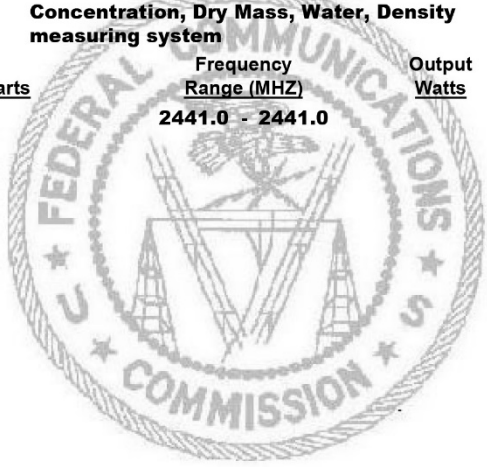

TCB

GRANT OF EQUIPMENT
AUTHORIZATION

TCB

Certification
Issued Under the Authority of the
Federal Communications Commission
By:

CTC advanced GmbH (former CETECOM ICT Services Gmb
Untertuerkheimer Strasse 6-10
66117 Saarbruecken,
Germany

Date of Grant: 09/08/2017

Application Dated: 09/08/2017

Berthold Technologies
Calmbacher Str. 22 75323 Bad Wildbad Germany
Bad Wildbad, 75323
Germany

Attention: Dirk Moermann , Dr.

NOT TRANSFERABLE

EQUIPMENT AUTHORIZATION is hereby issued to the named GRANTEE, and is VALID ONLY for the equipment identified hereon for use under the Commission's Rules and Regulations listed below.

FCC IDENTIFIER: R9ZFCC01X12
Name of Grantee: Berthold Technologies
Equipment Class: Part 15 Field Disturbance Sensor
Notes: Concentration, Dry Mass, Water, Density measuring system

Grant Notes	FCC Rule Parts	Frequency Range (MHZ)	Output Watts	Frequency Tolerance	Emission Designator
	15.245	2441.0 - 2441.0			

PC II to add additional antennas.

Chapter 8. **Technical Drawings**

8.1 Dimensional Drawings of Evaluation Unit Housing

8.1.1 Evaluation Unit for MicroPolar Brix

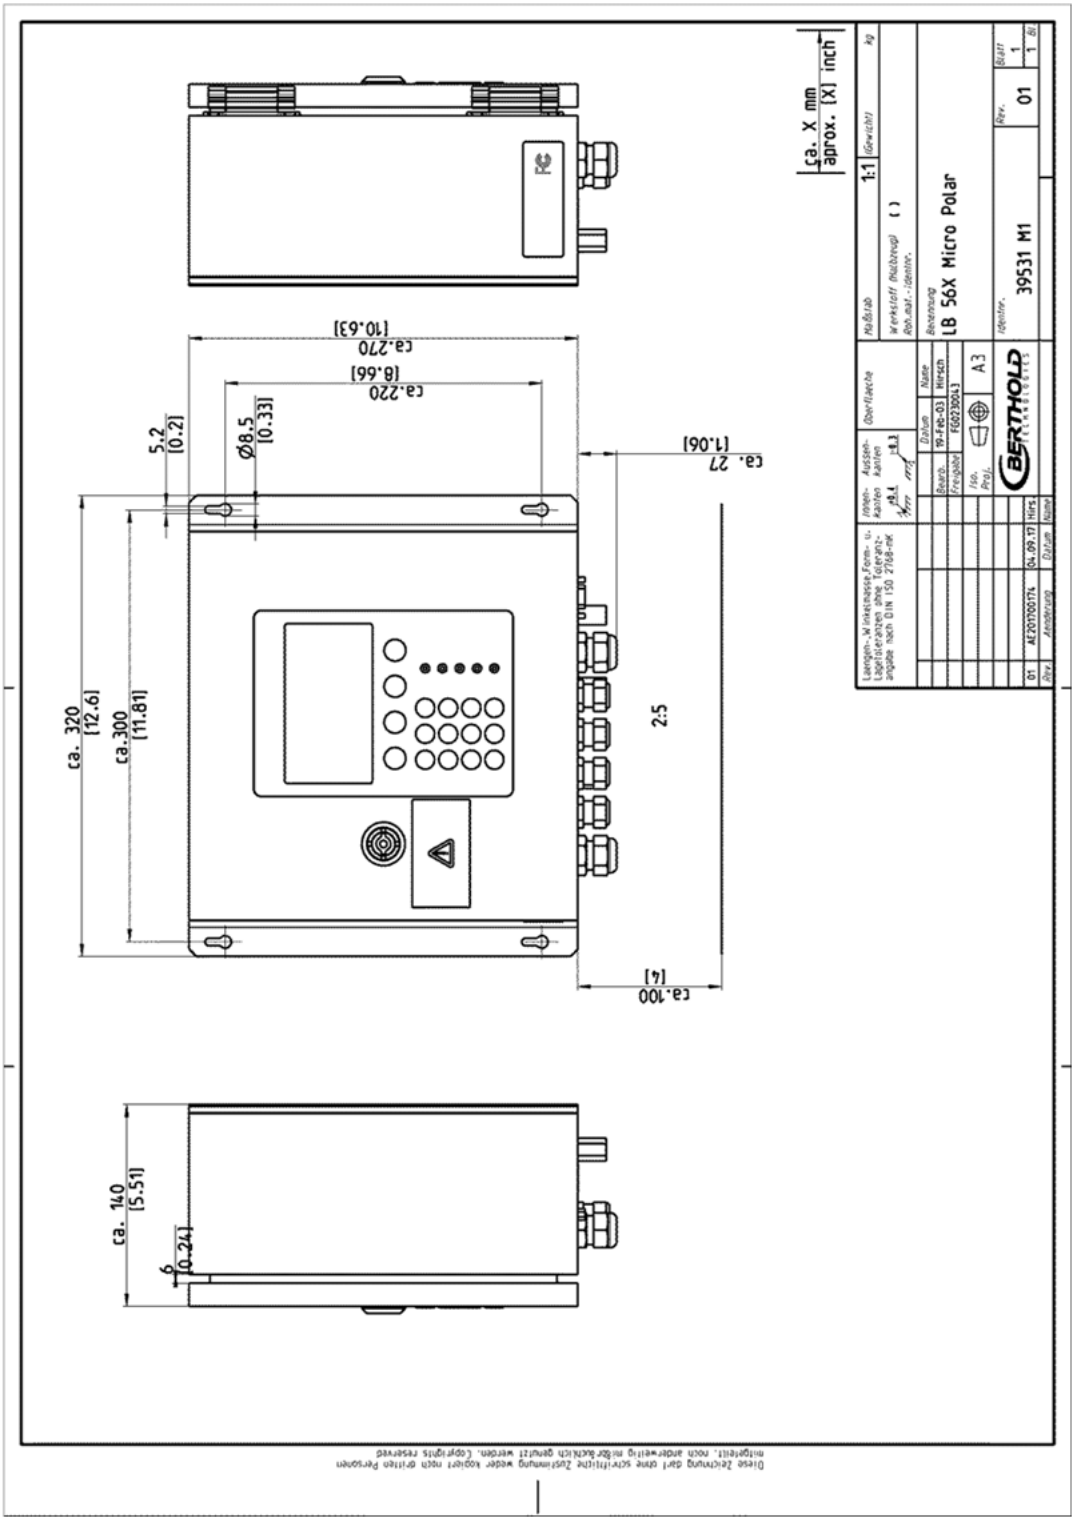

8.1.2 Evaluation Unit for MicroPolar Brix ++

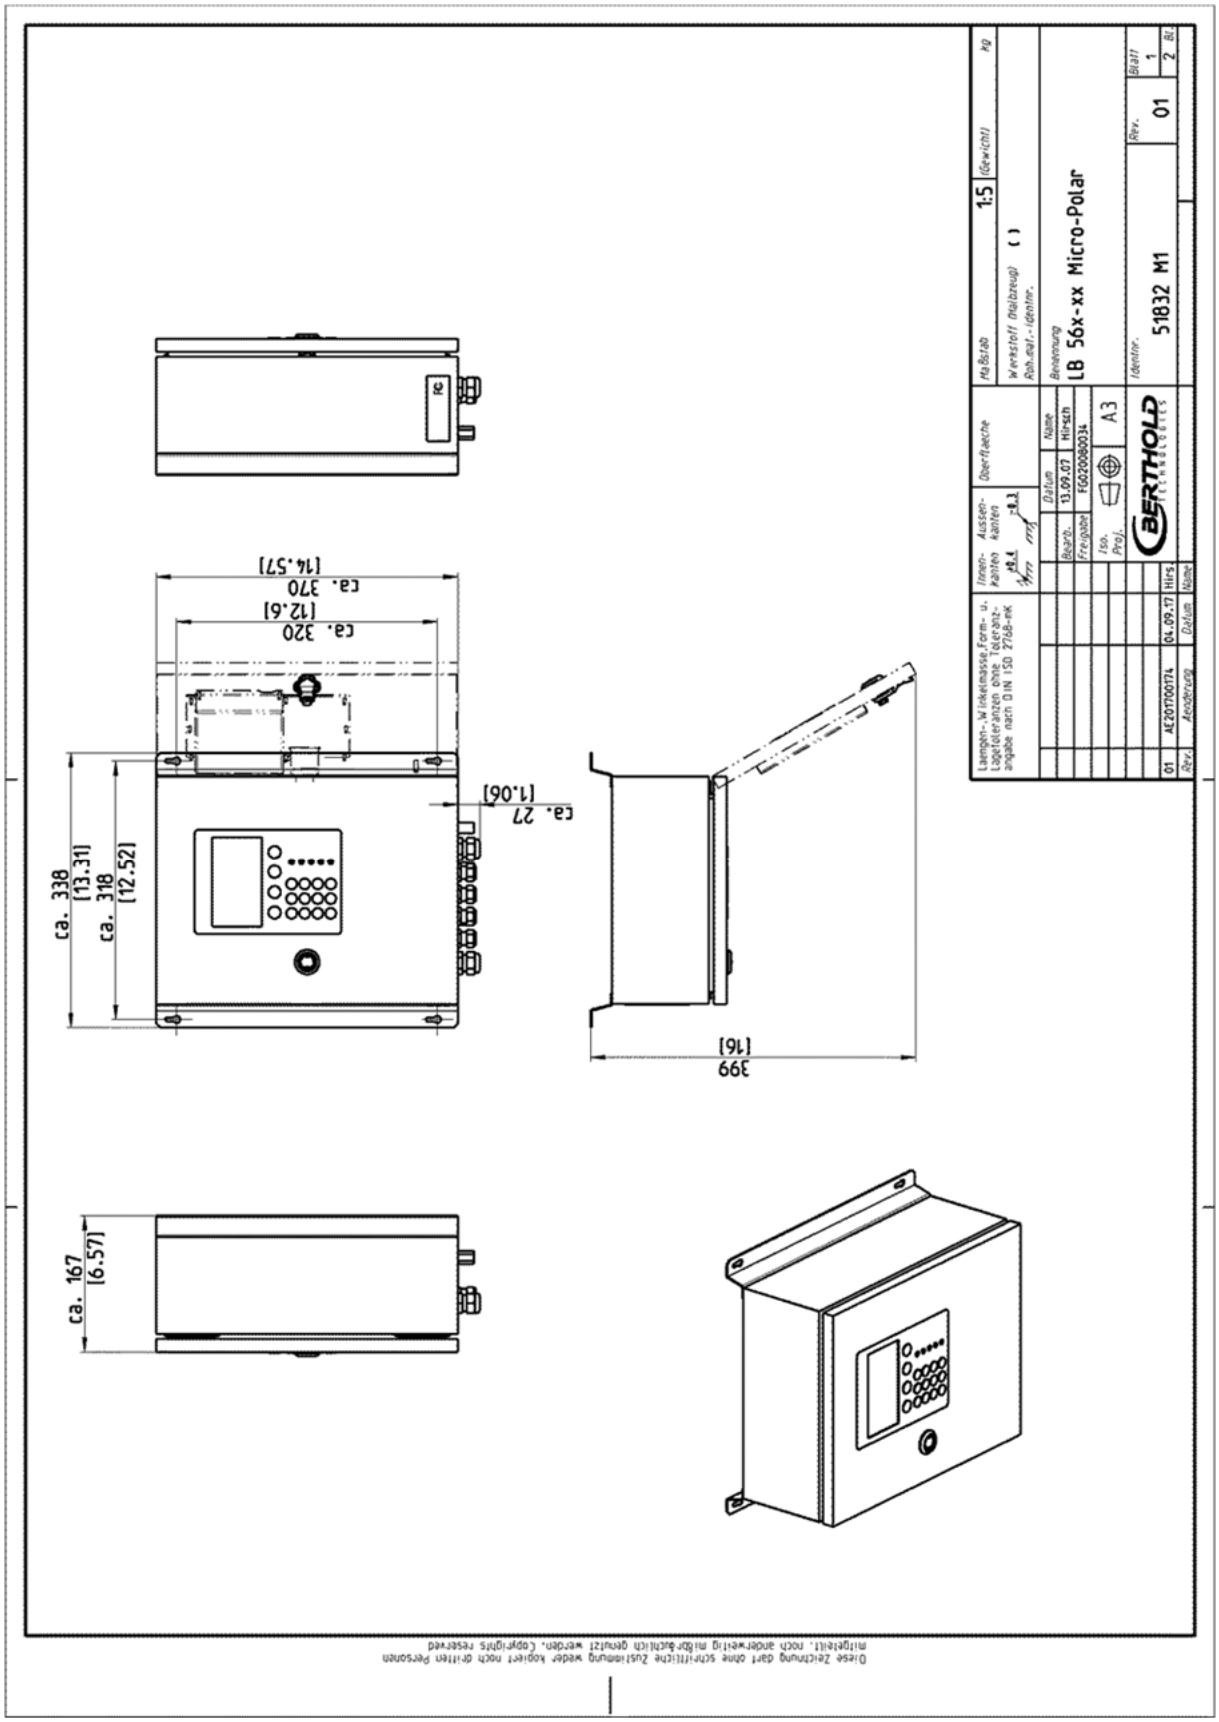

8.2 Electrical Wiring Diagram

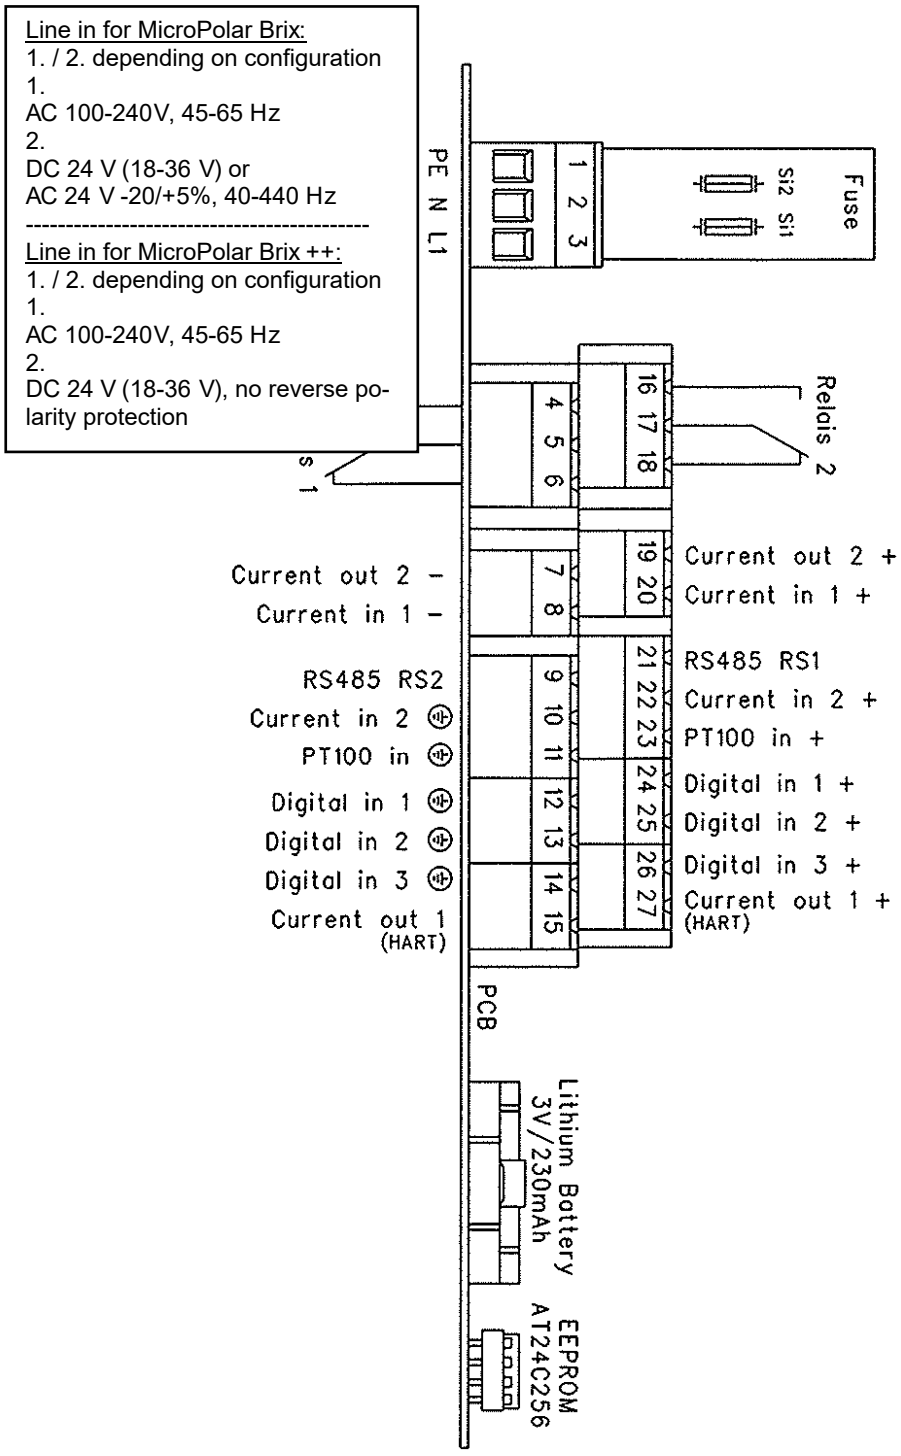

8.3 Dimensional Drawings Flow Cells

8.3.1 Type LB 5660-102-00X FlowCell DN 50 Flange, FDA

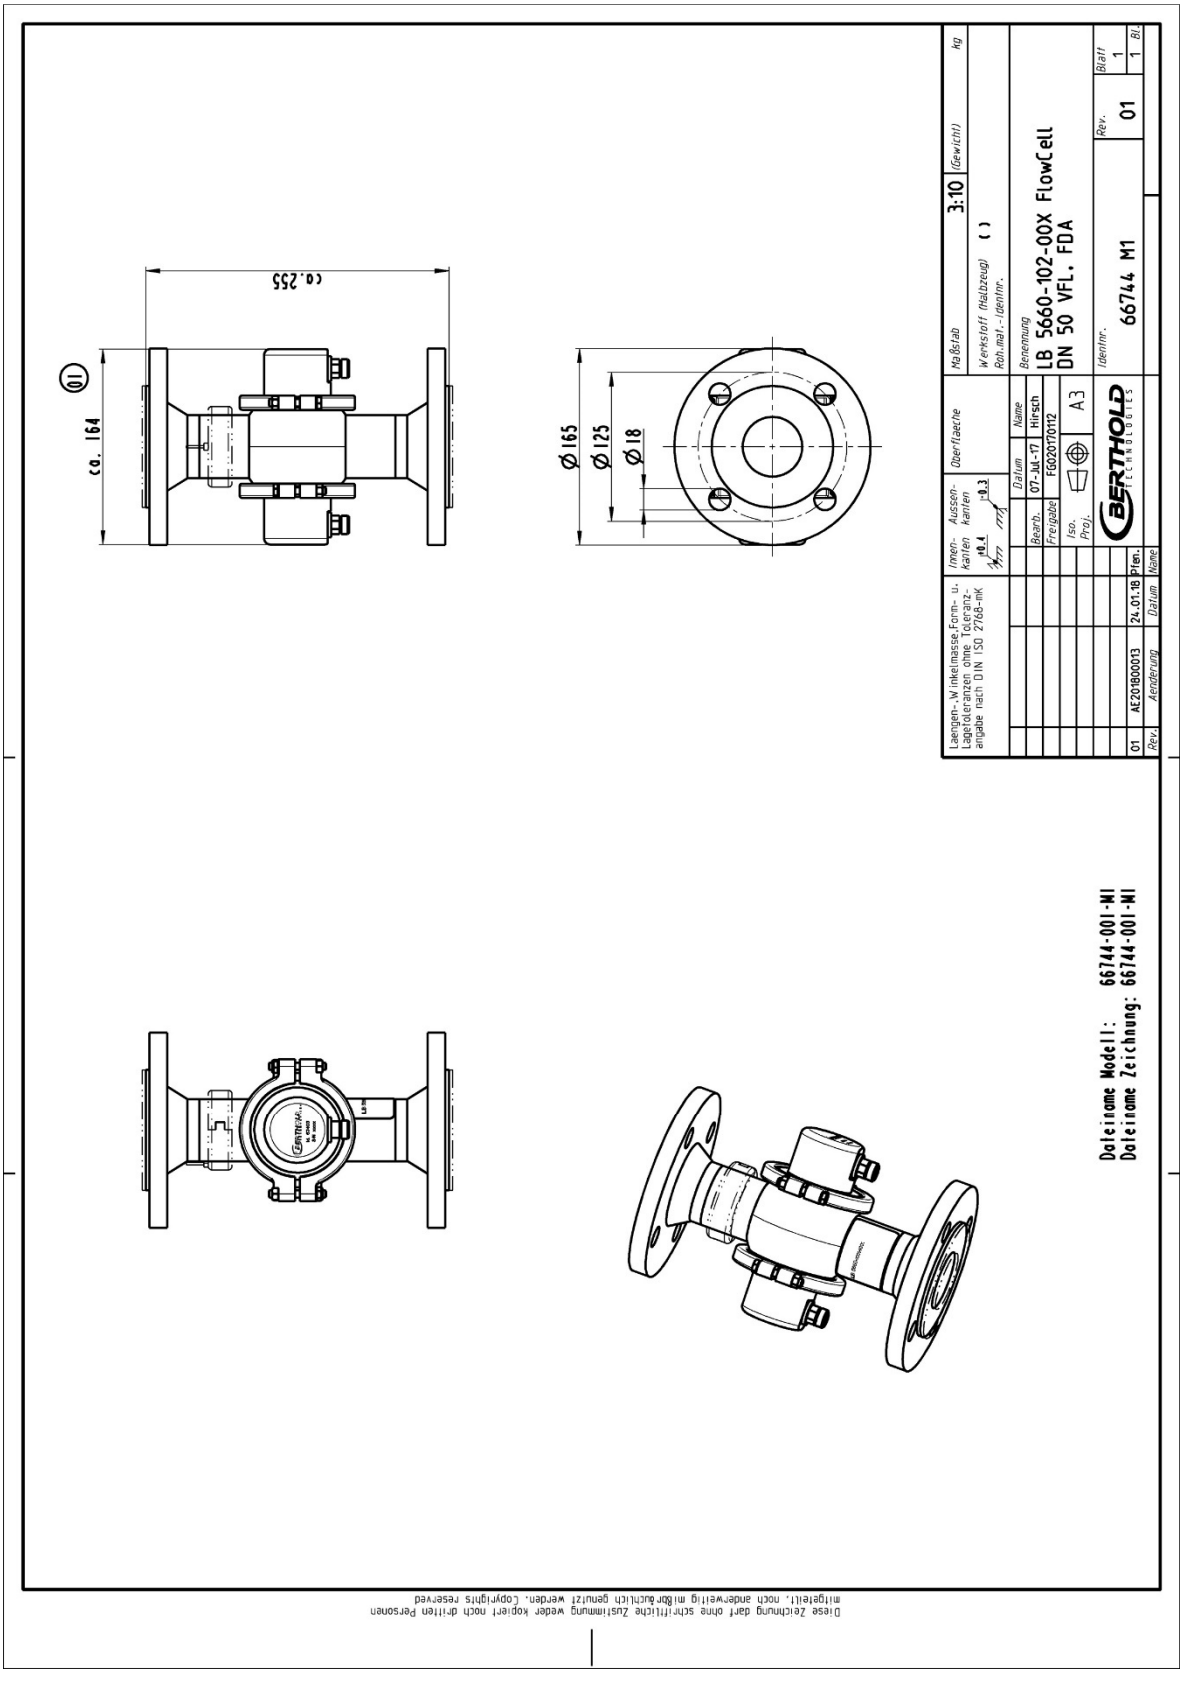

8.3.2 Type LB 5660-202-00X FlowCell DN 65 Flange, FDA

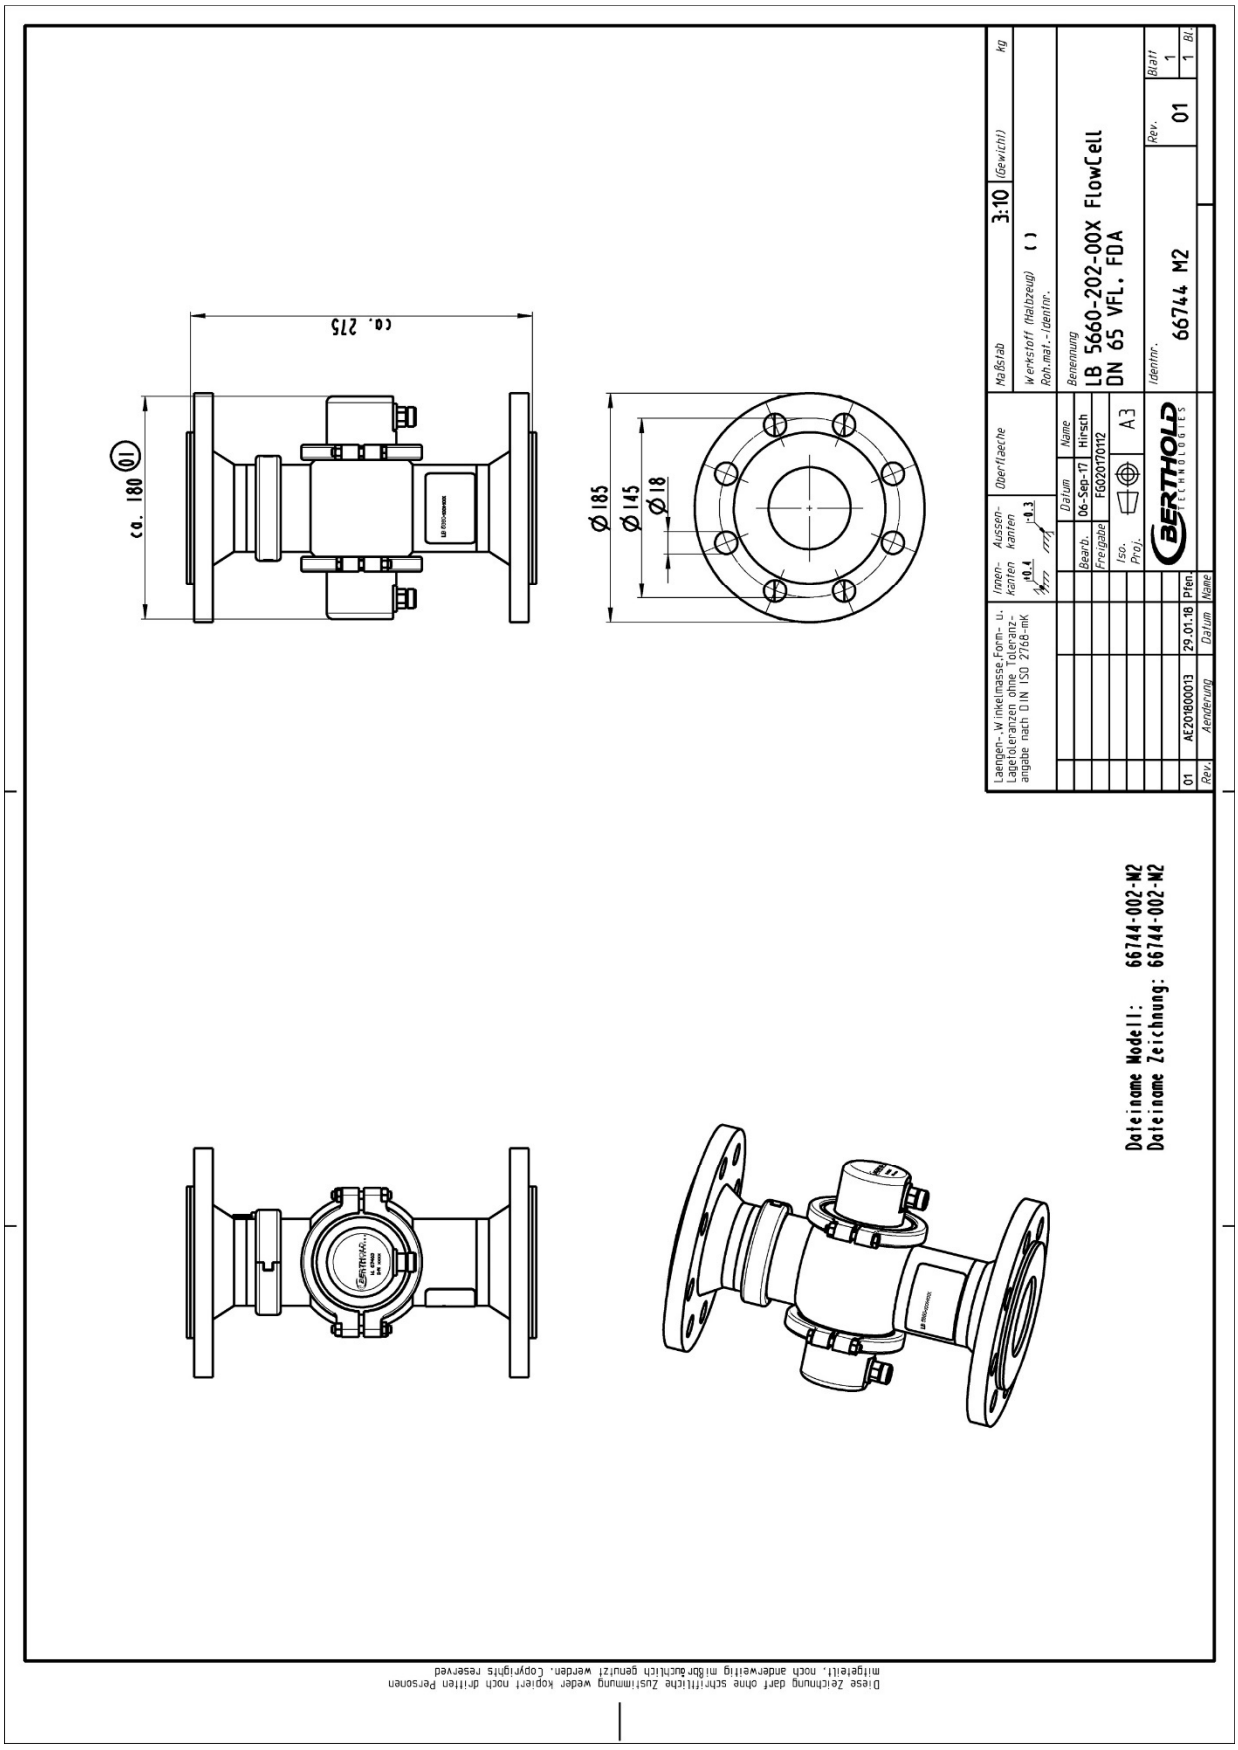

8.3.3 Type LB 5660-302-00X FlowCell DN 80 Flange, FDA

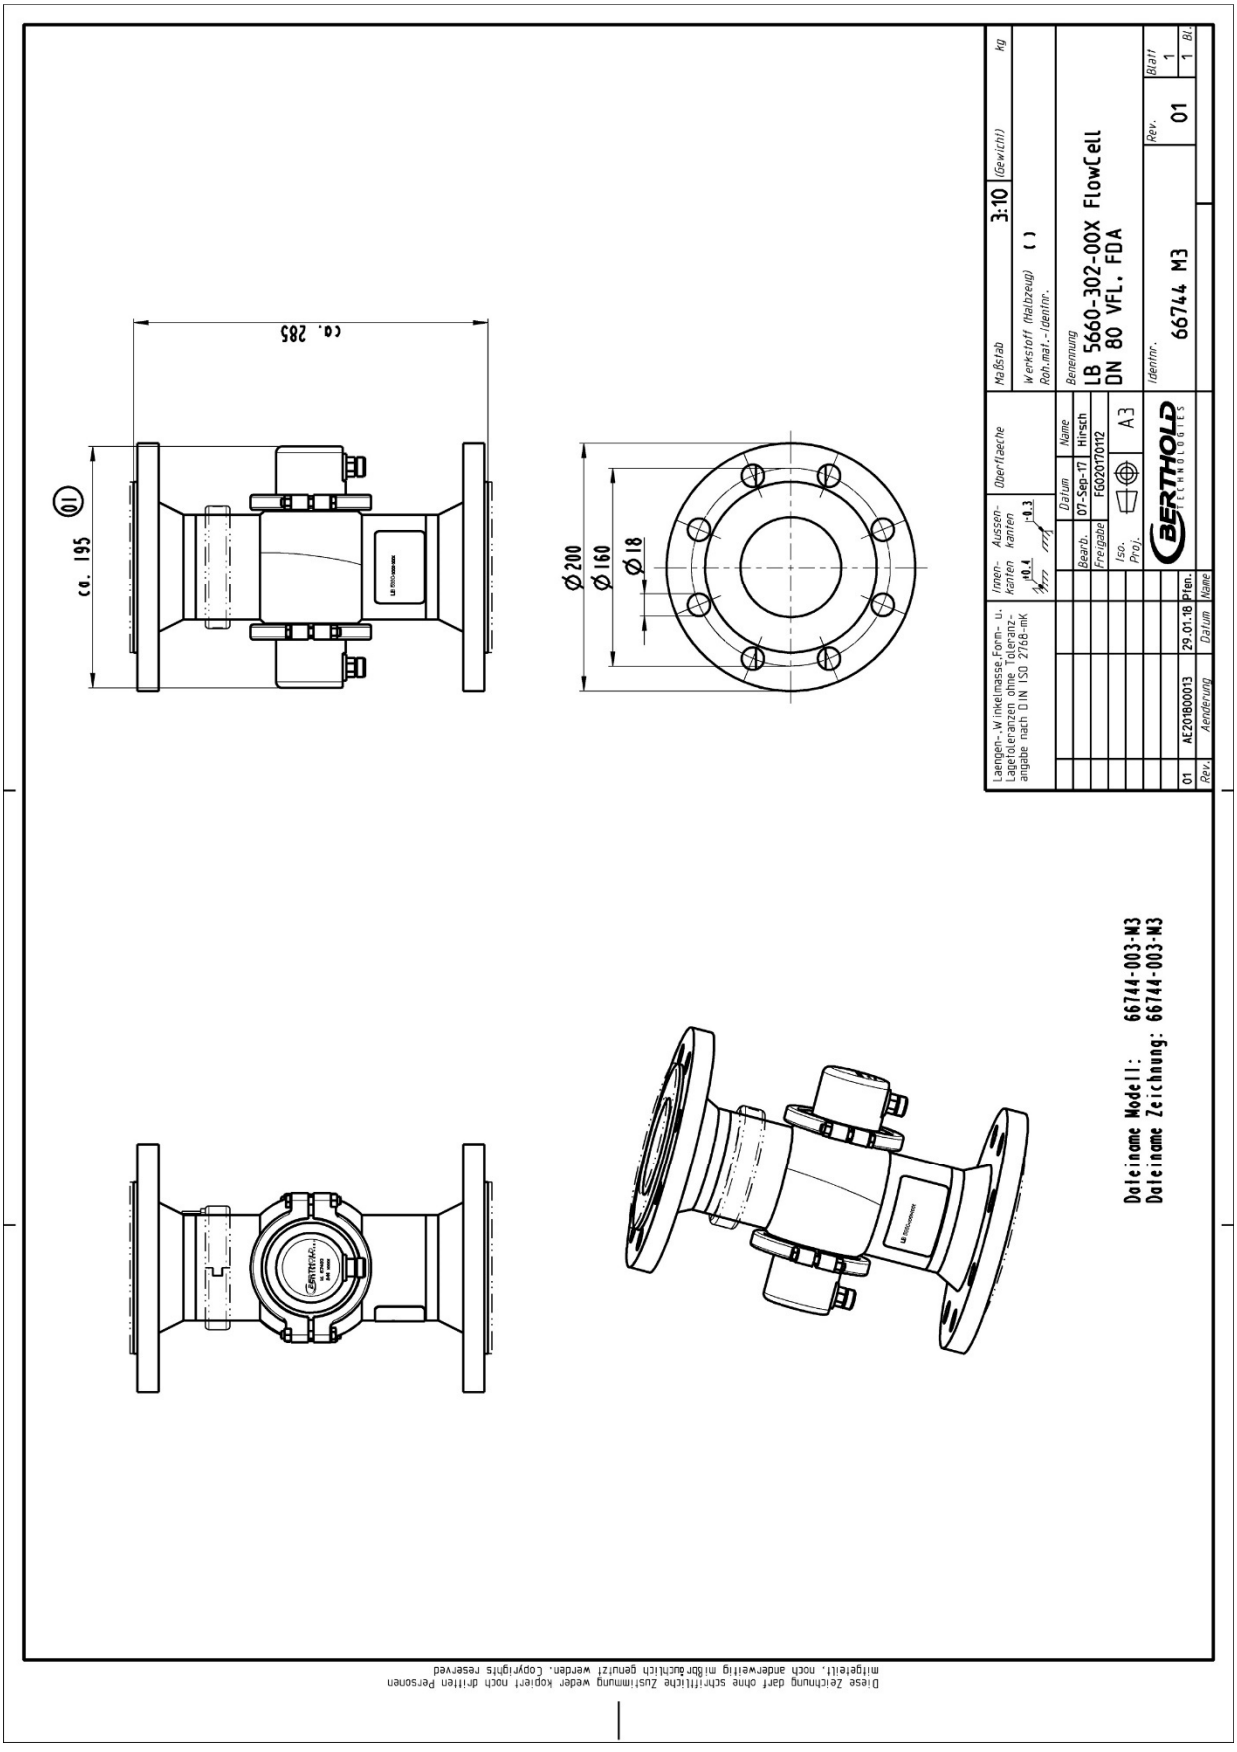

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig missbräuchlich genutzt werden. Copyrights reserved

8.3.4 Type LB 5660-402-00X FlowCell DN 100 Flange, FDA

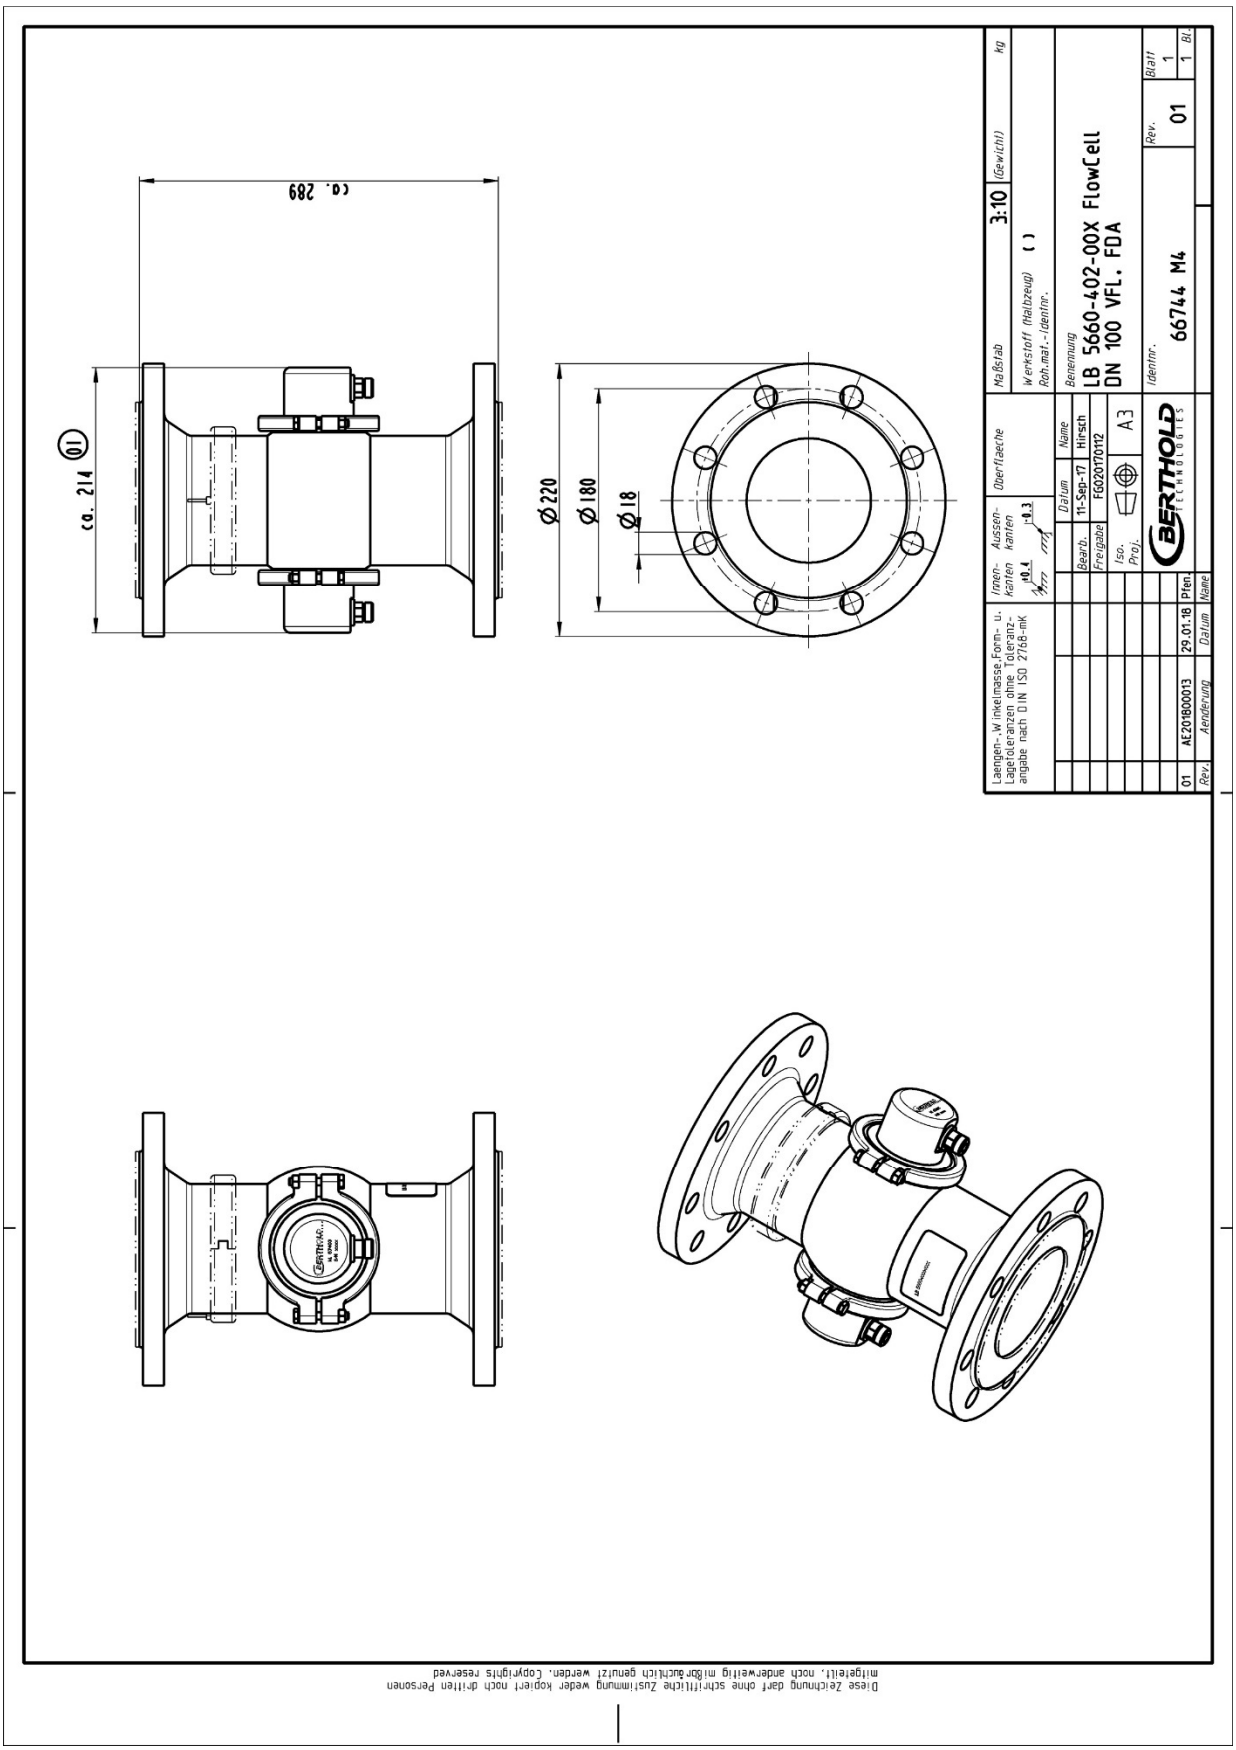

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig missbräuchlich genutzt werden. Copyrights reserved

8.3.5 Type LB 5660-502-00X FlowCell DN 125 Flange, FDA

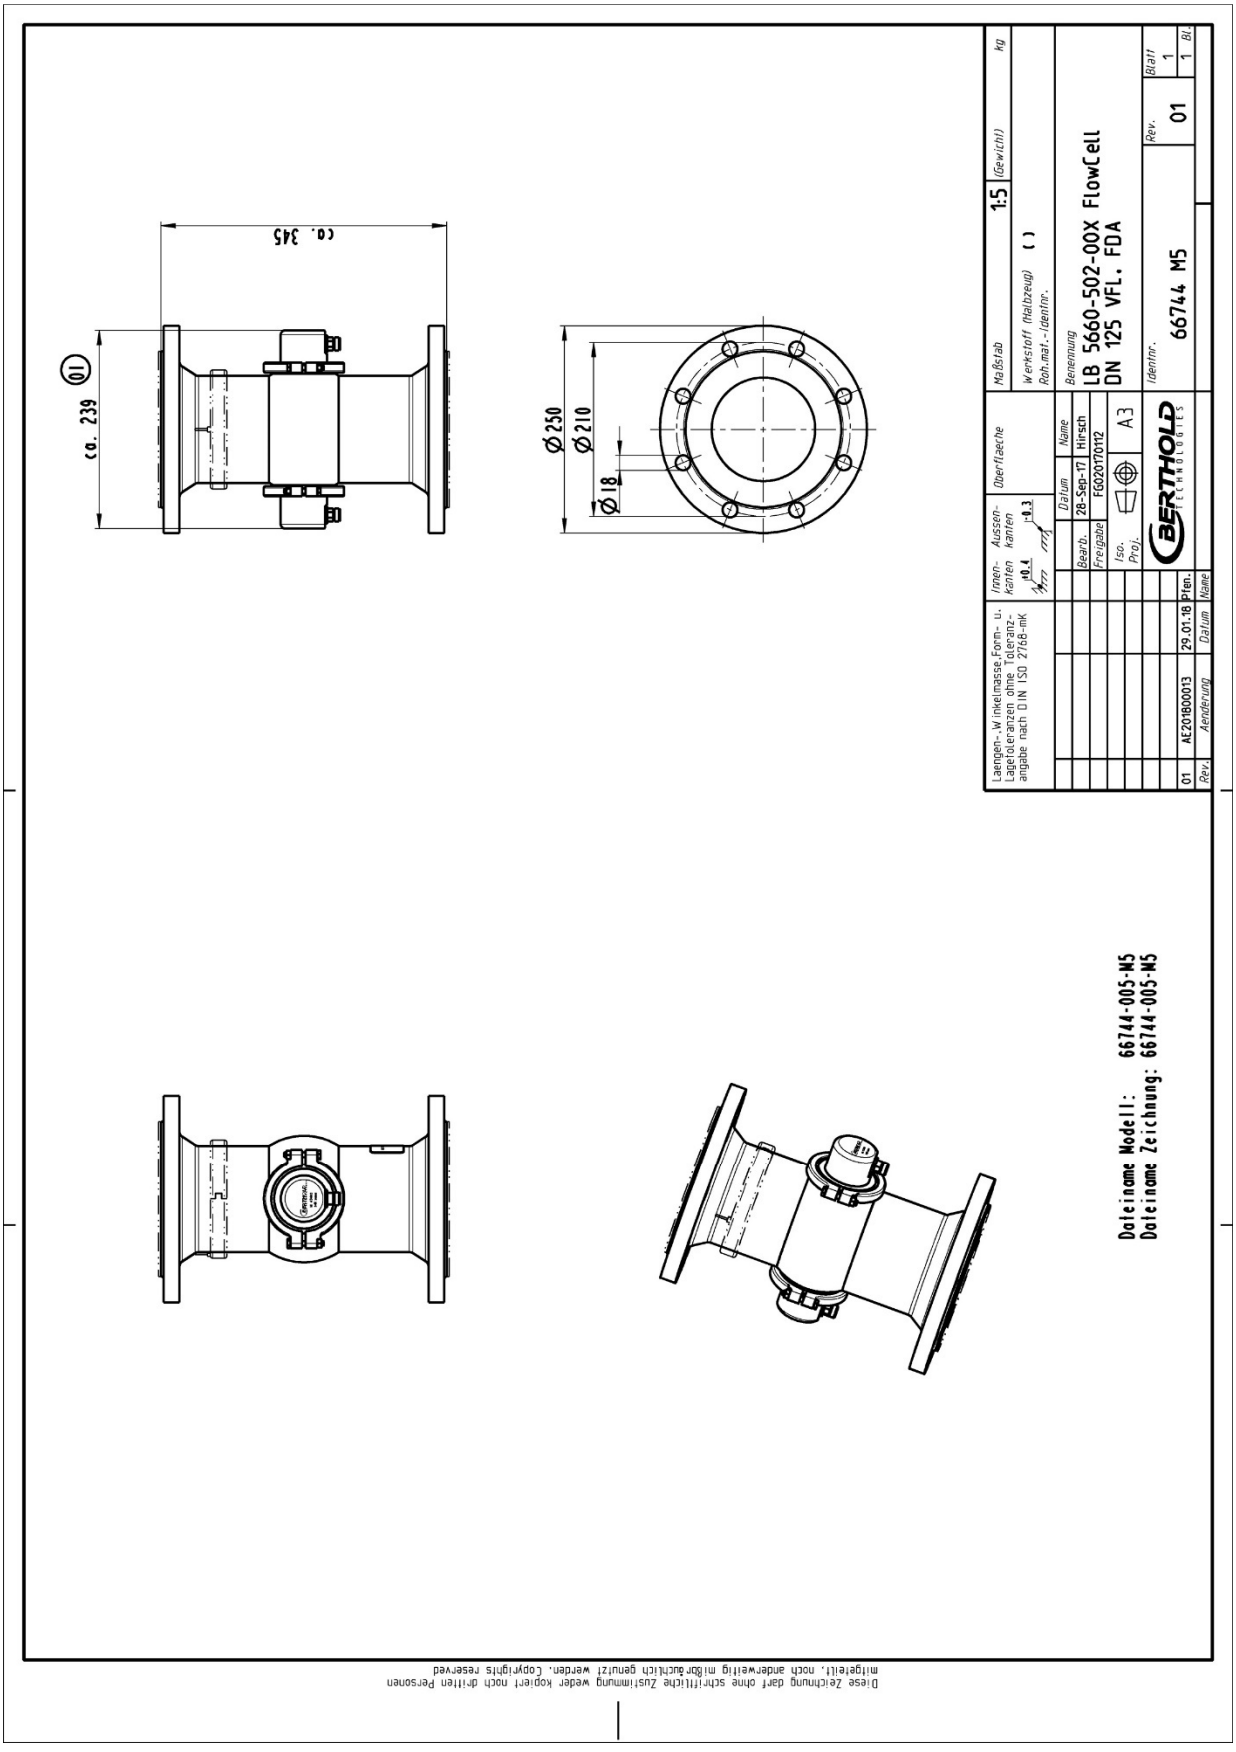

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyrights reserved

8.3.6 Type LB 5660-602-00X FlowCell DN 150 Flange, FDA

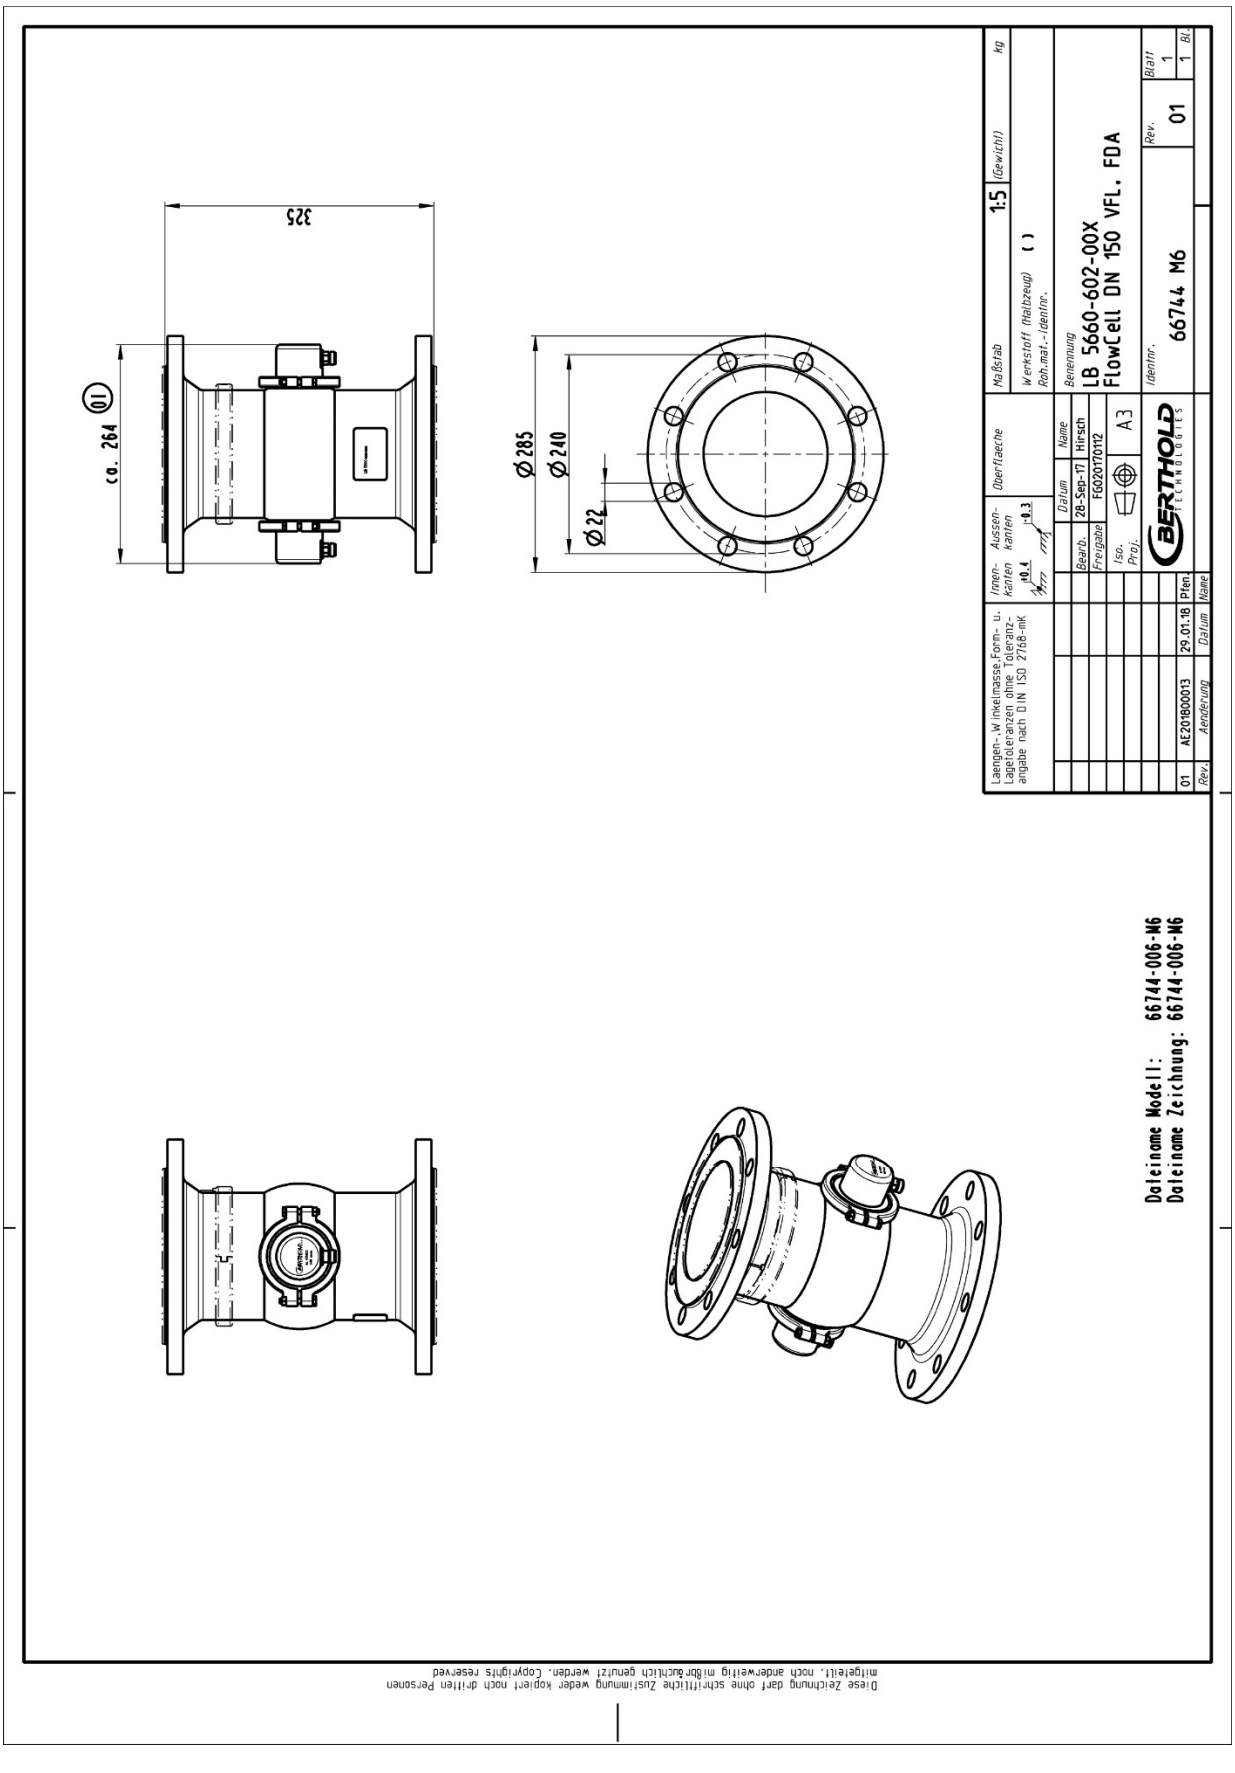

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyrights reserved

8.3.7 Type LB 5660-112-00X FlowCell DN 50 G-BS/M

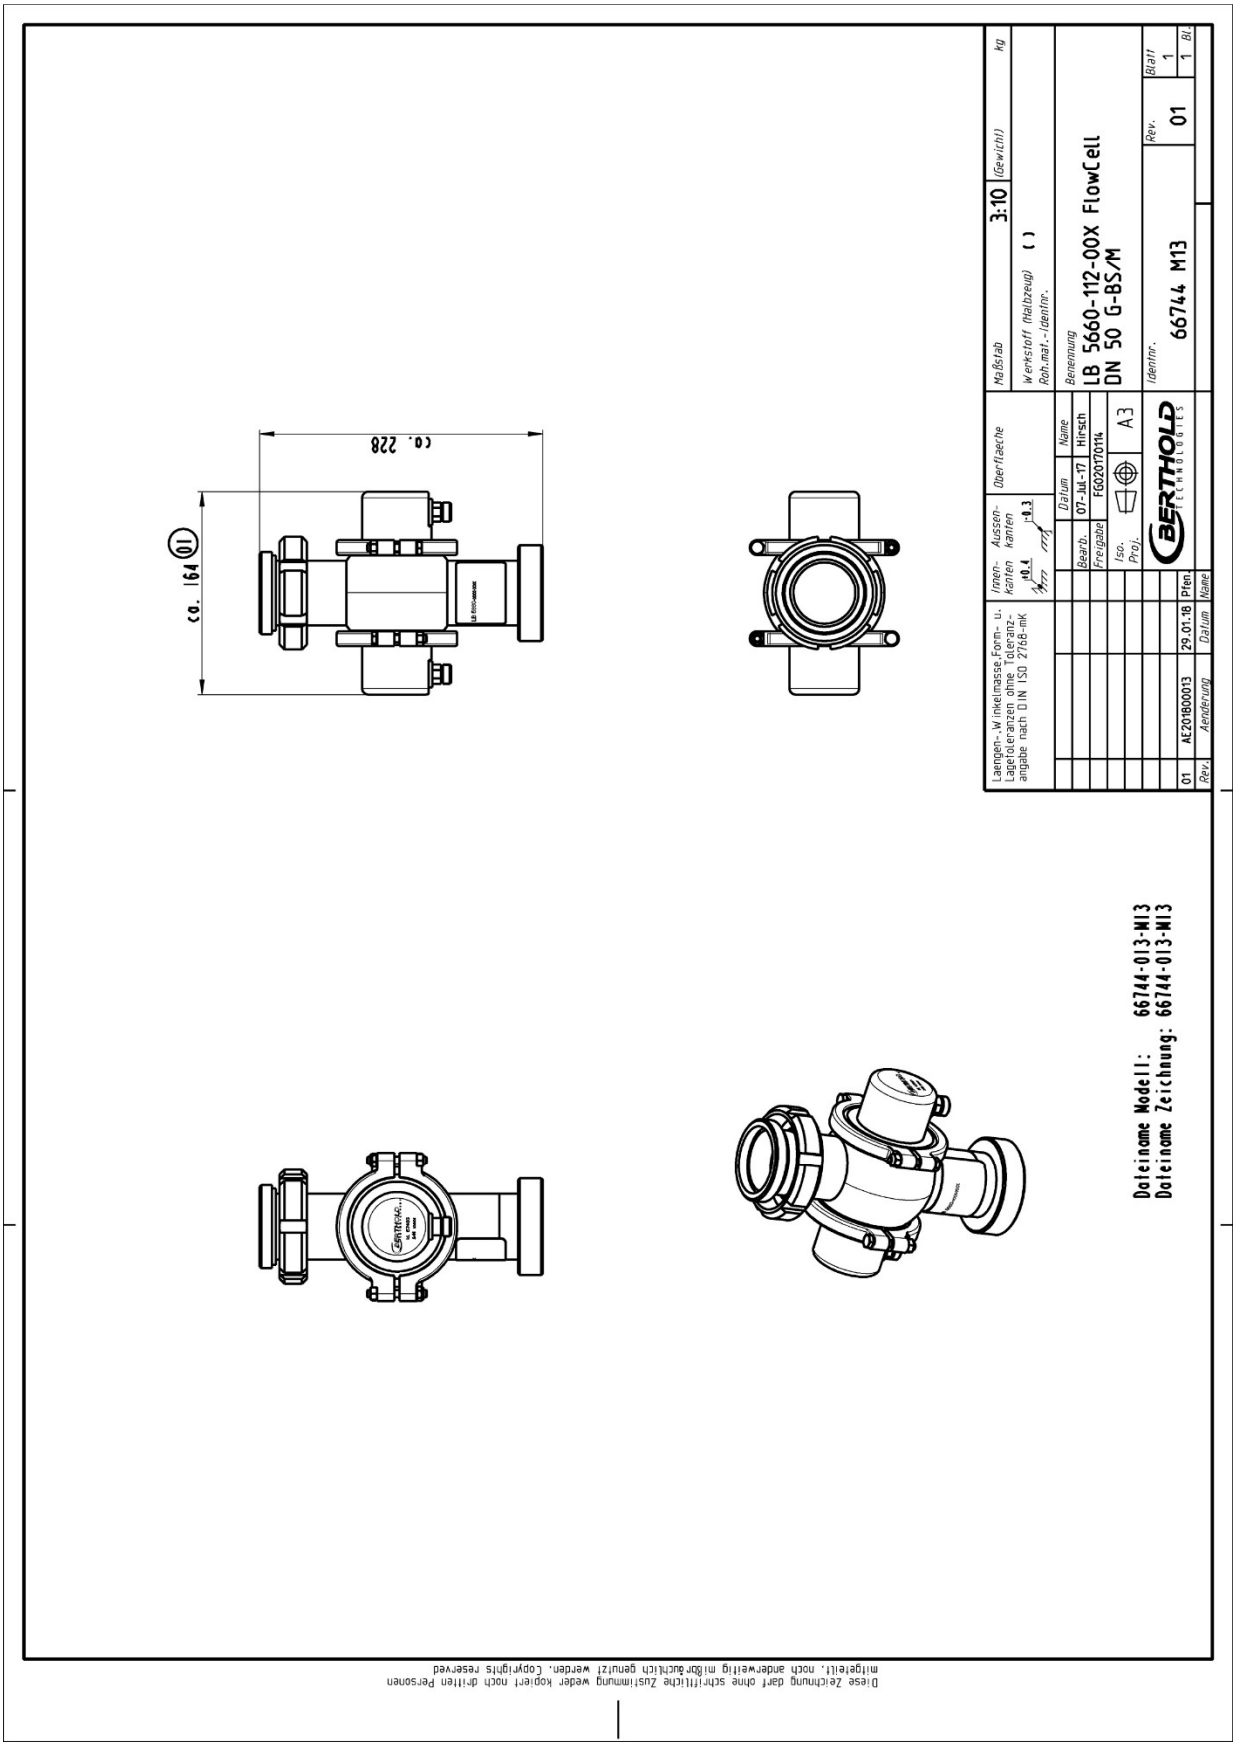

8.3.8 Type LB 5660-212-00X FlowCell DN 65 G-BS/M

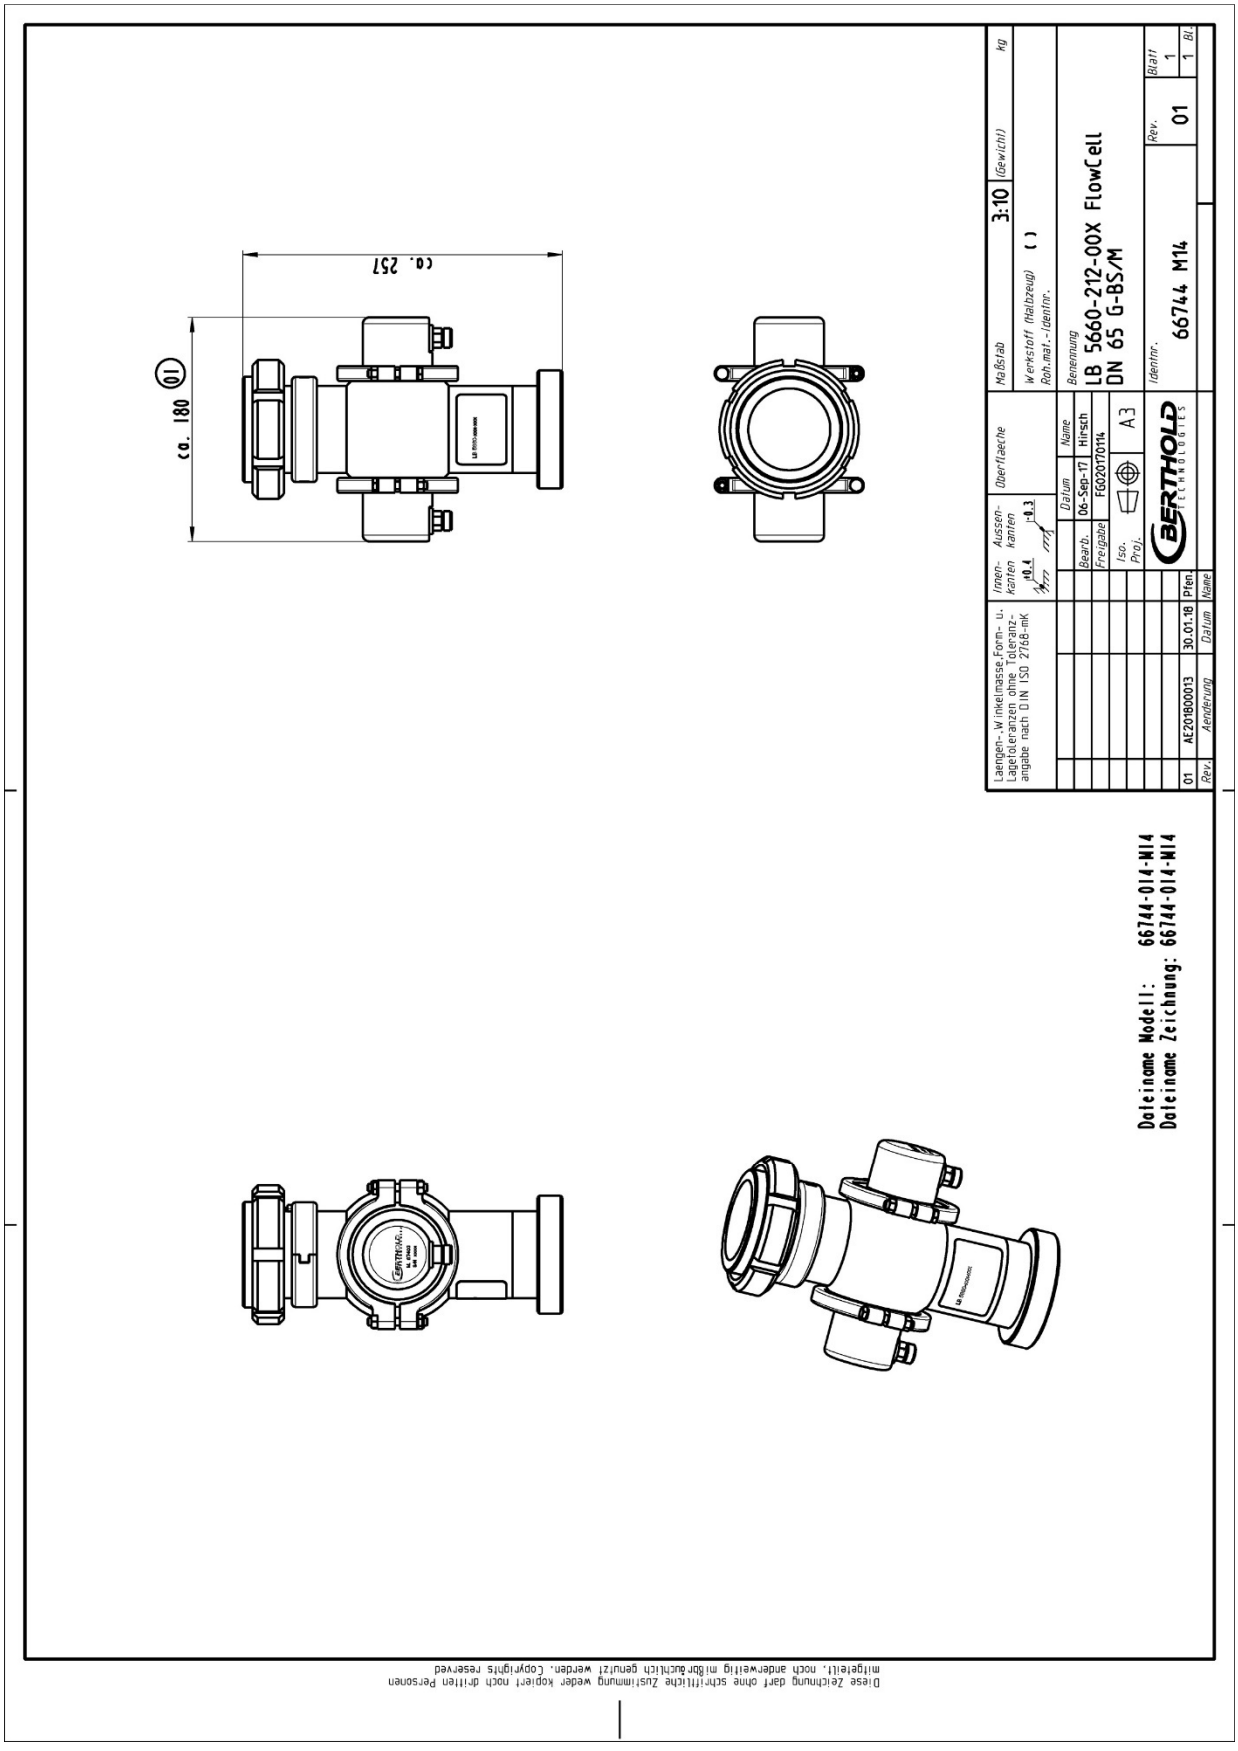

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig missbräuchlich genutzt werden. Copyrights reserved

8.3.9 Type LB 5660-312-00X FlowCell DN 80 G-BS/M

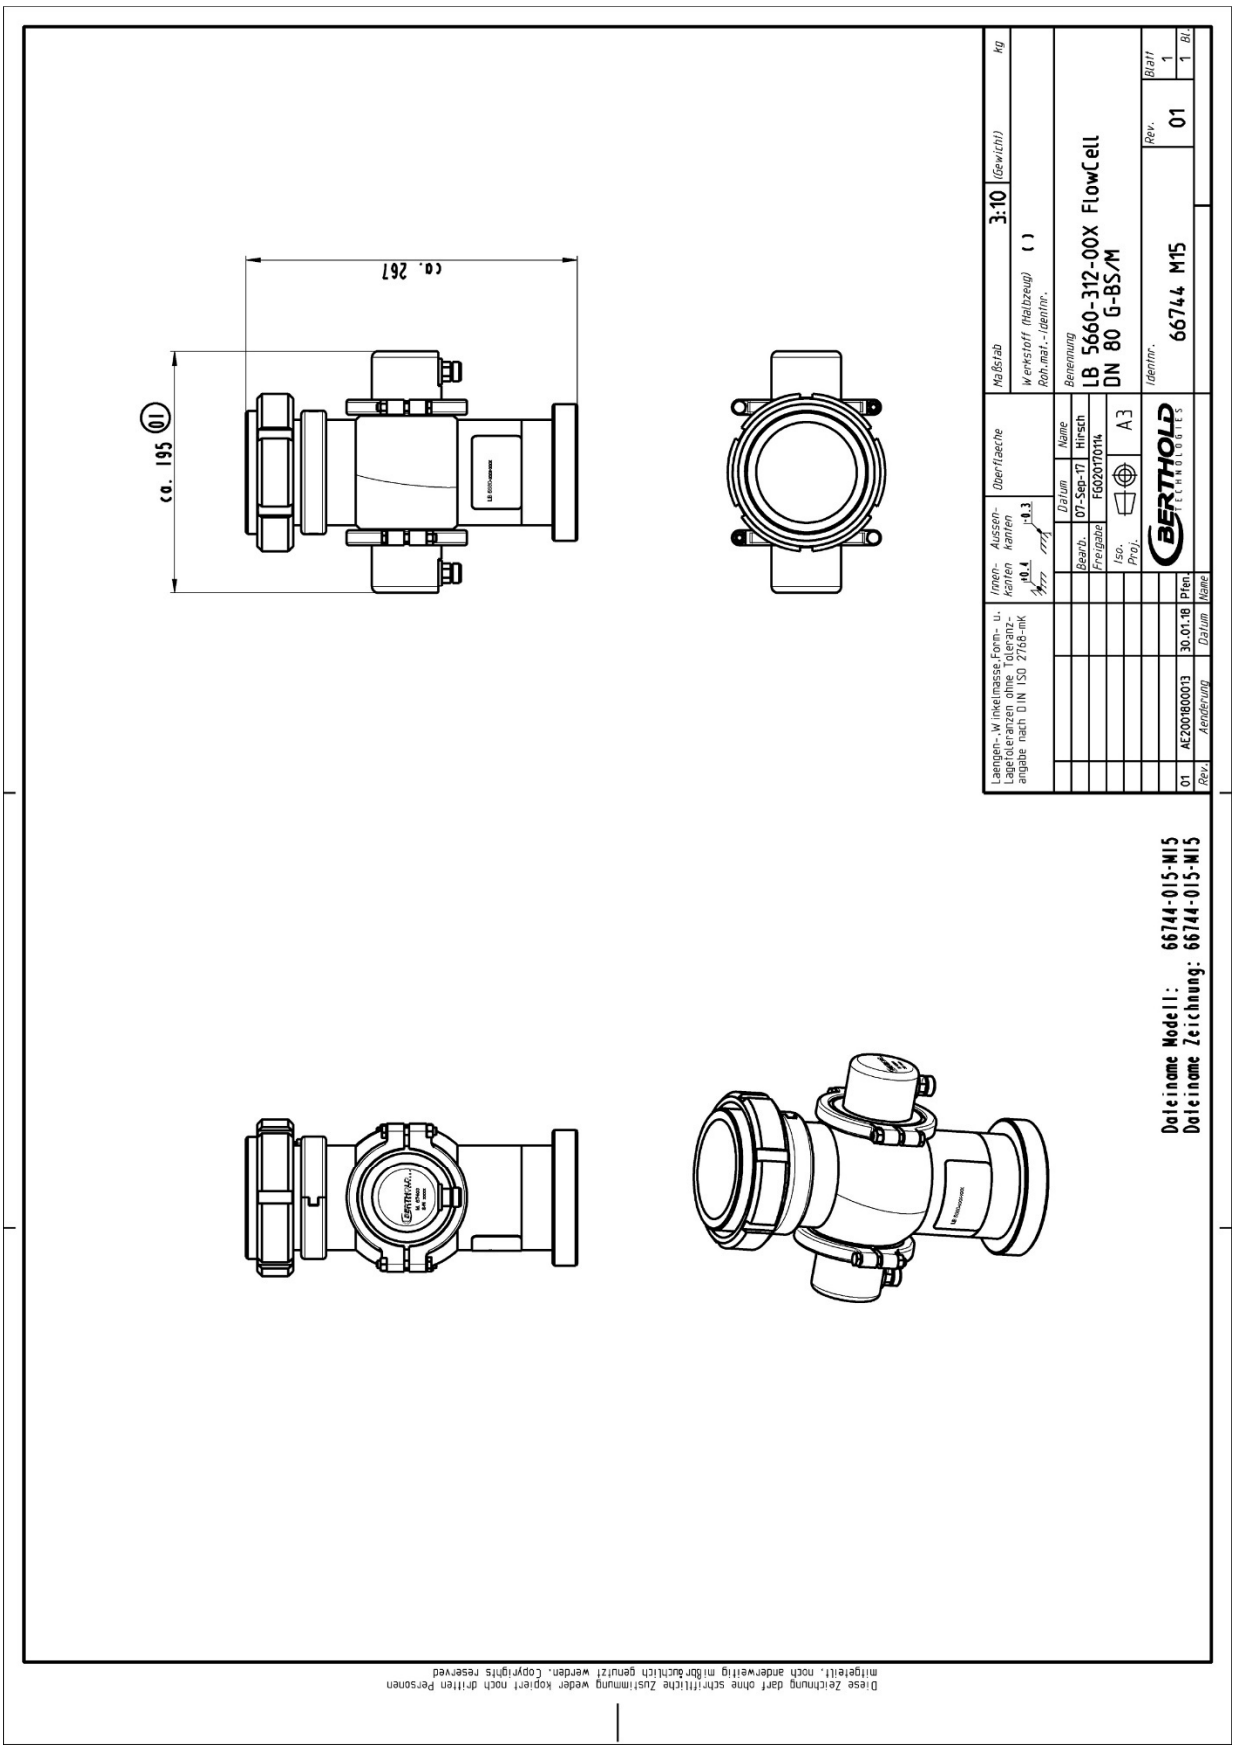

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyrights reserved

8.3.10 Type LB 5660-412-00X FlowCell DN 100 G-BS/M

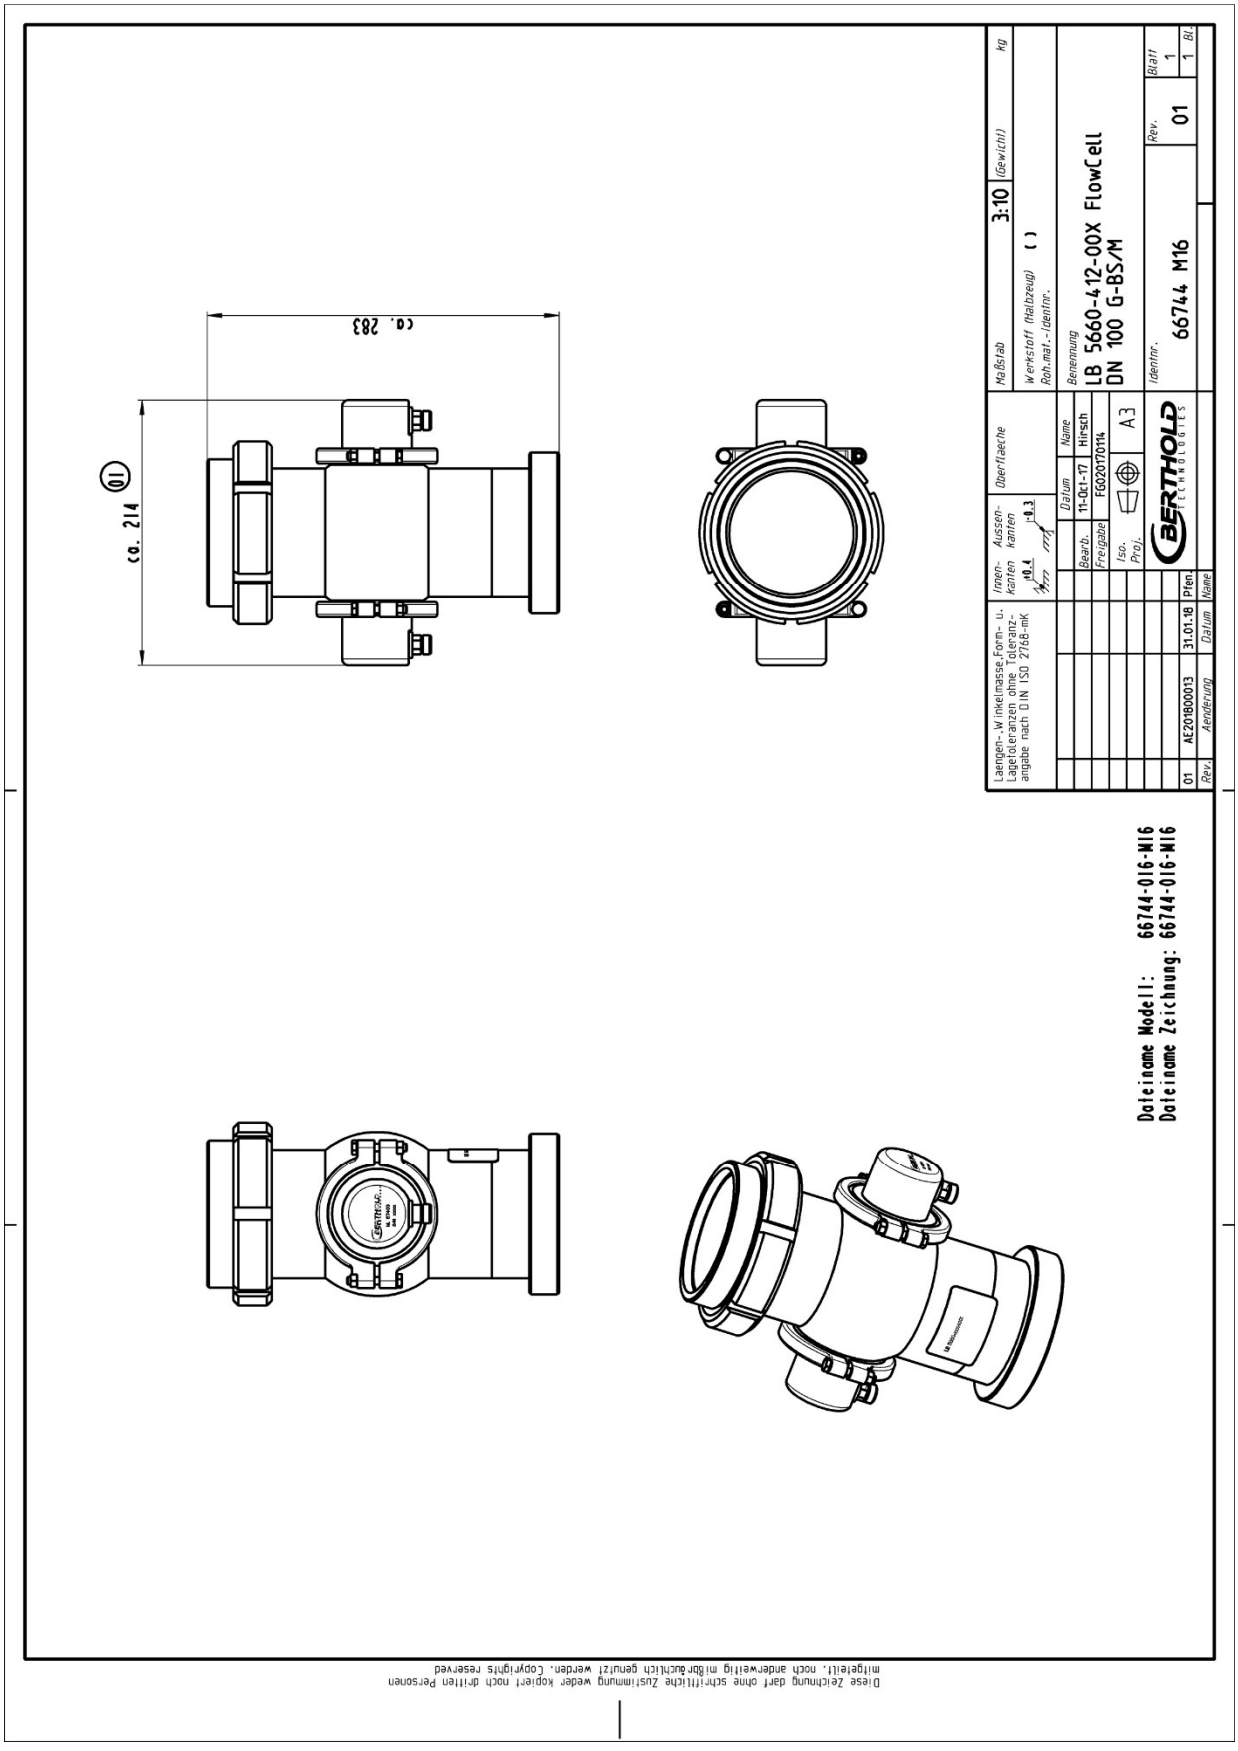

8.3.12 Type LB 5660-512-00X FlowCell DN 125 G-BS/M

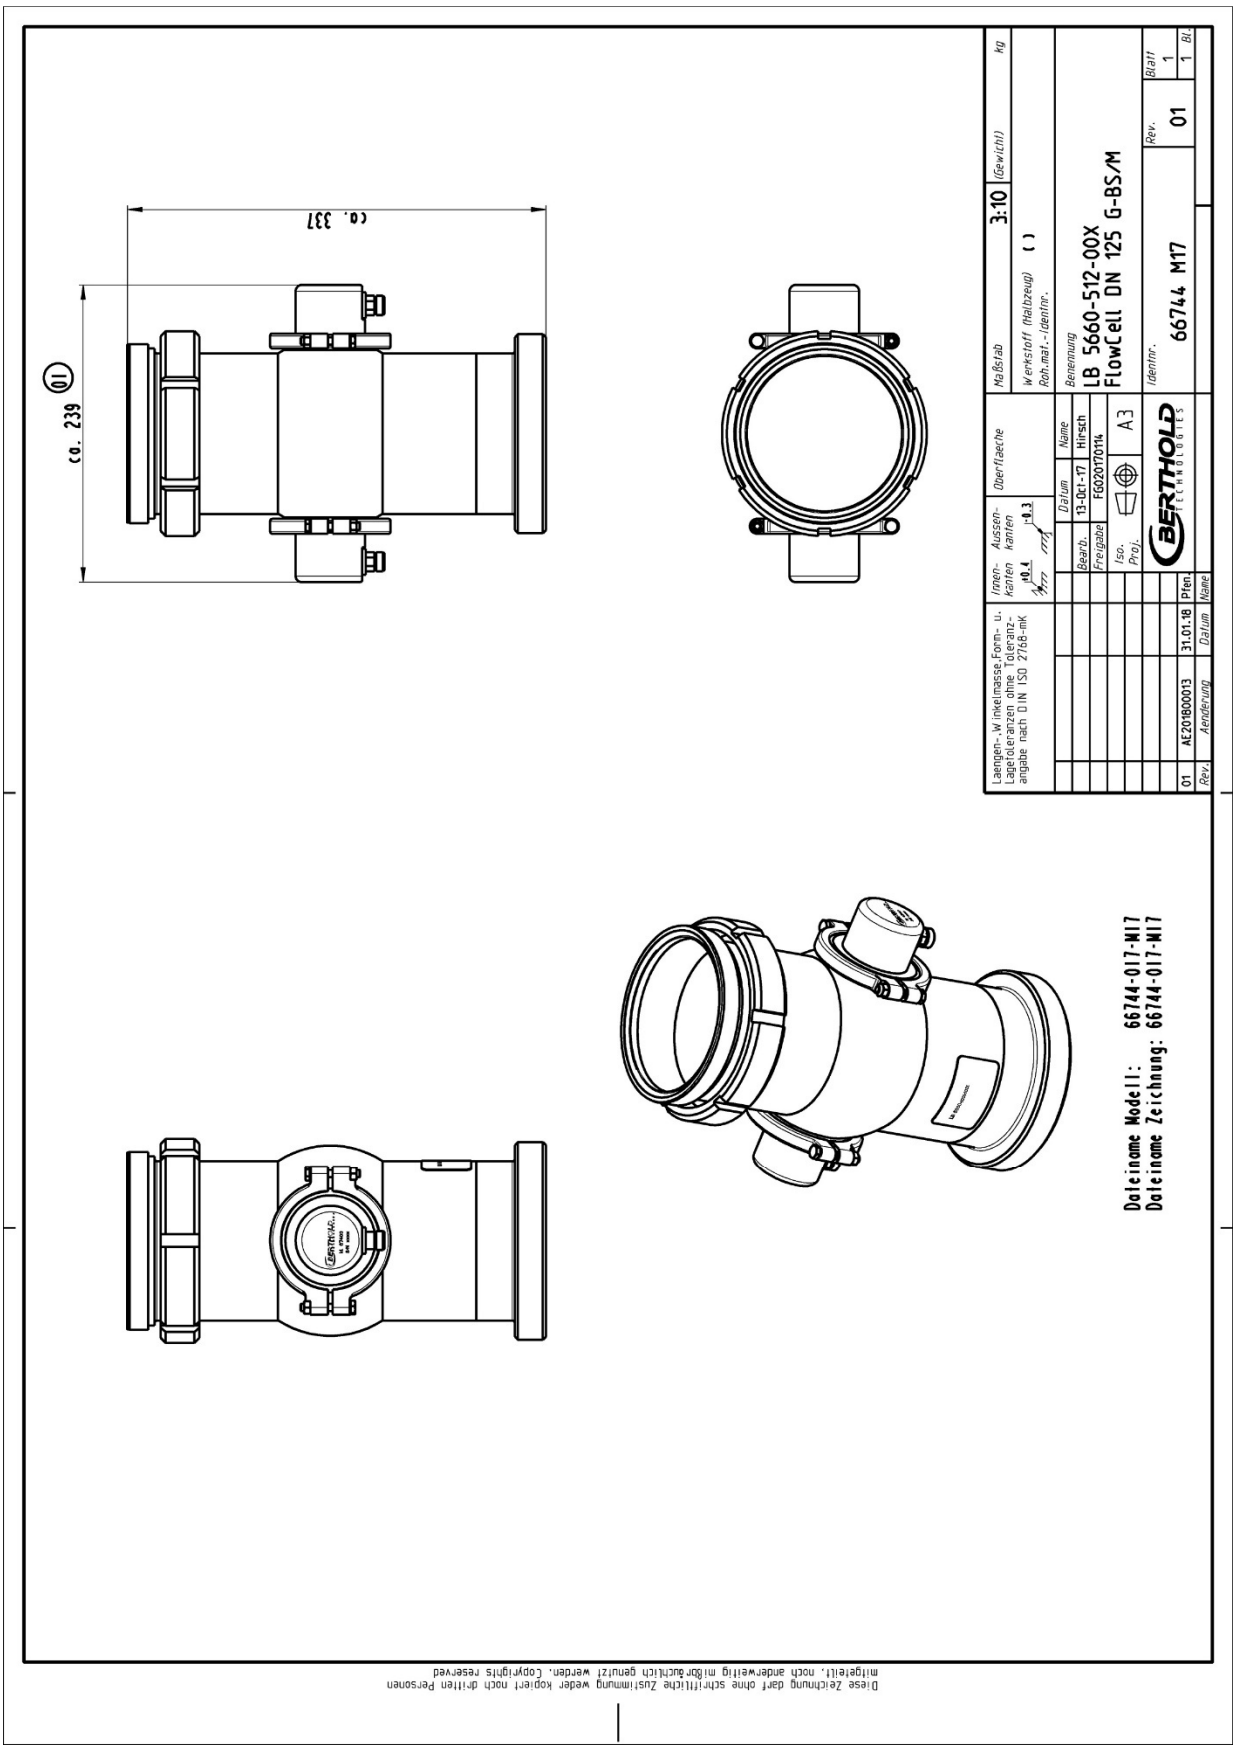

8.3.14 Type LB 5660-612-00X FlowCell DN 150 G-BS/M

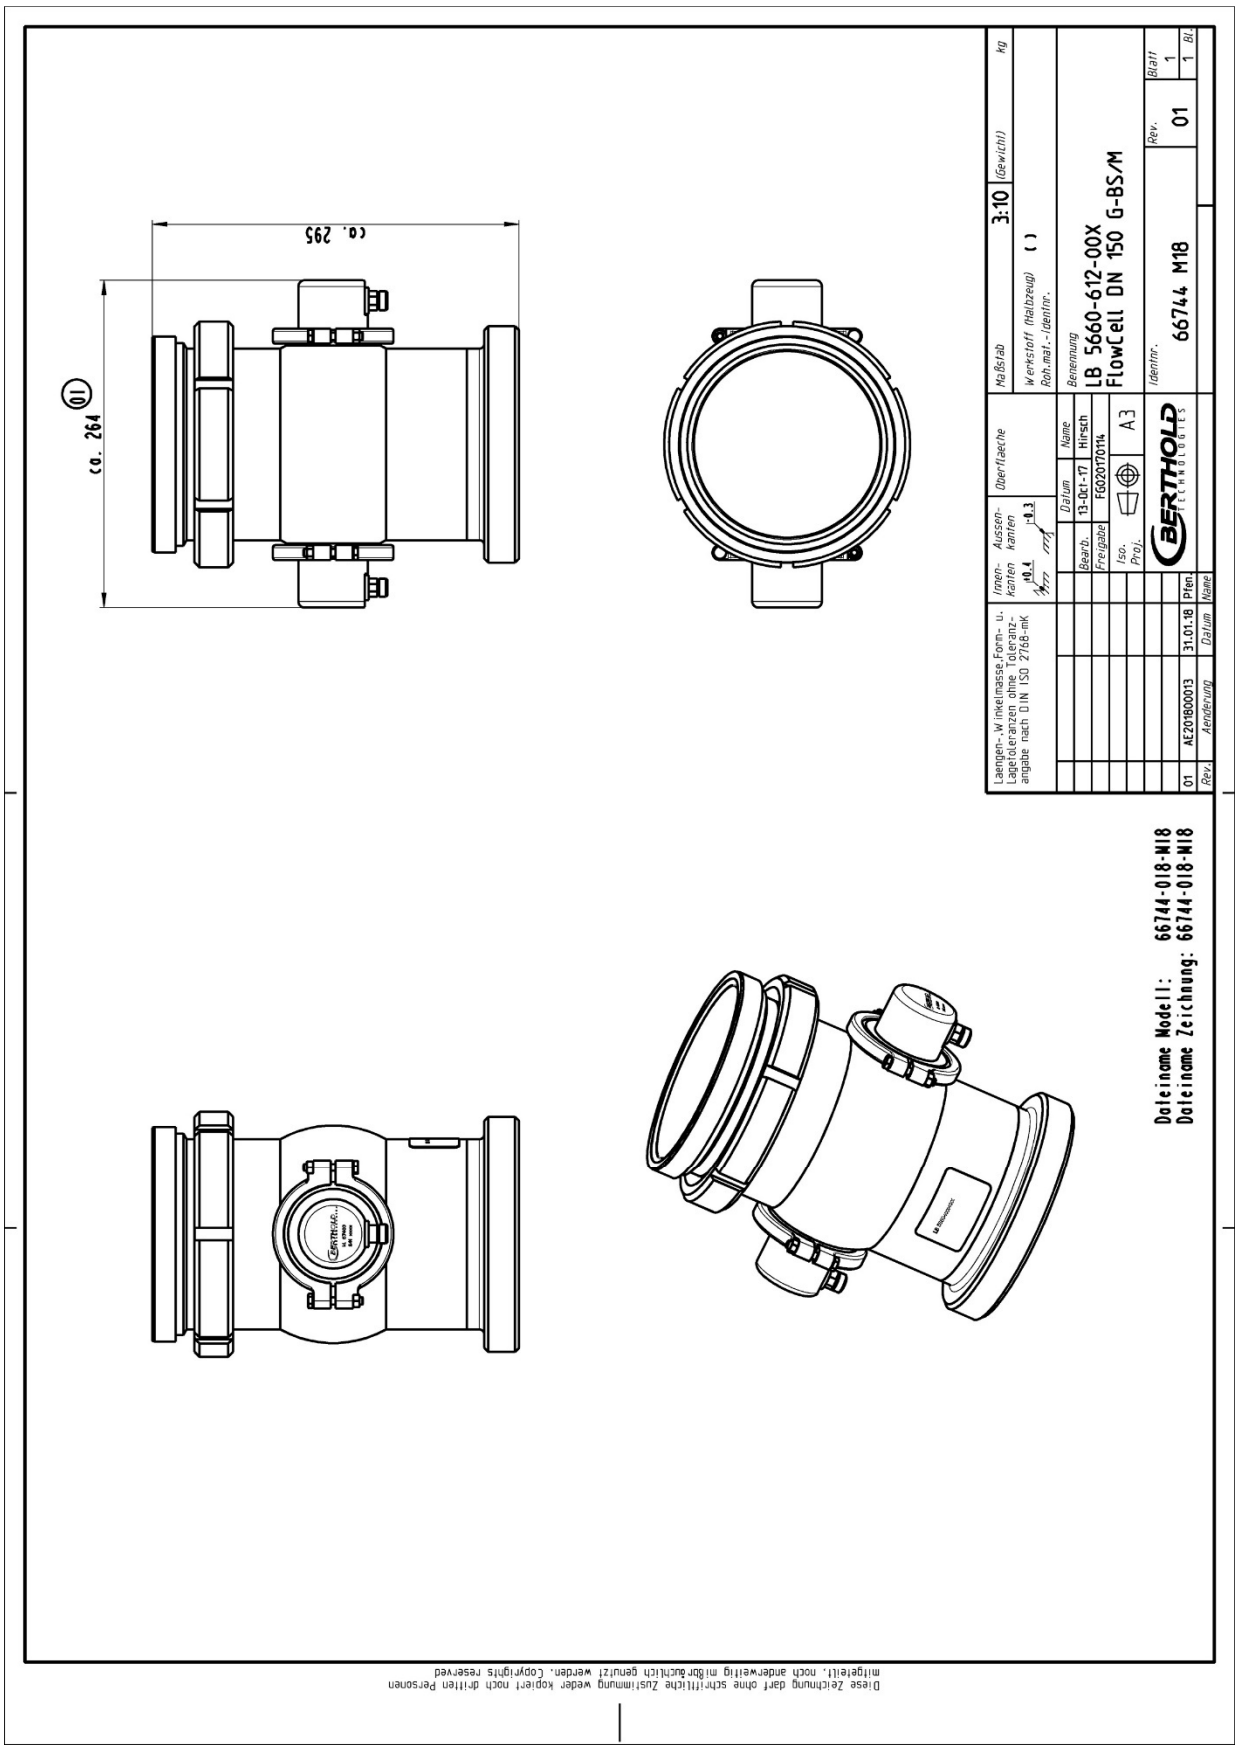

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig missbräuchlich genutzt werden. Copyrights reserved

8.4 Dimensional Drawings Container Probes

8.4.1 Type LB 5650-01

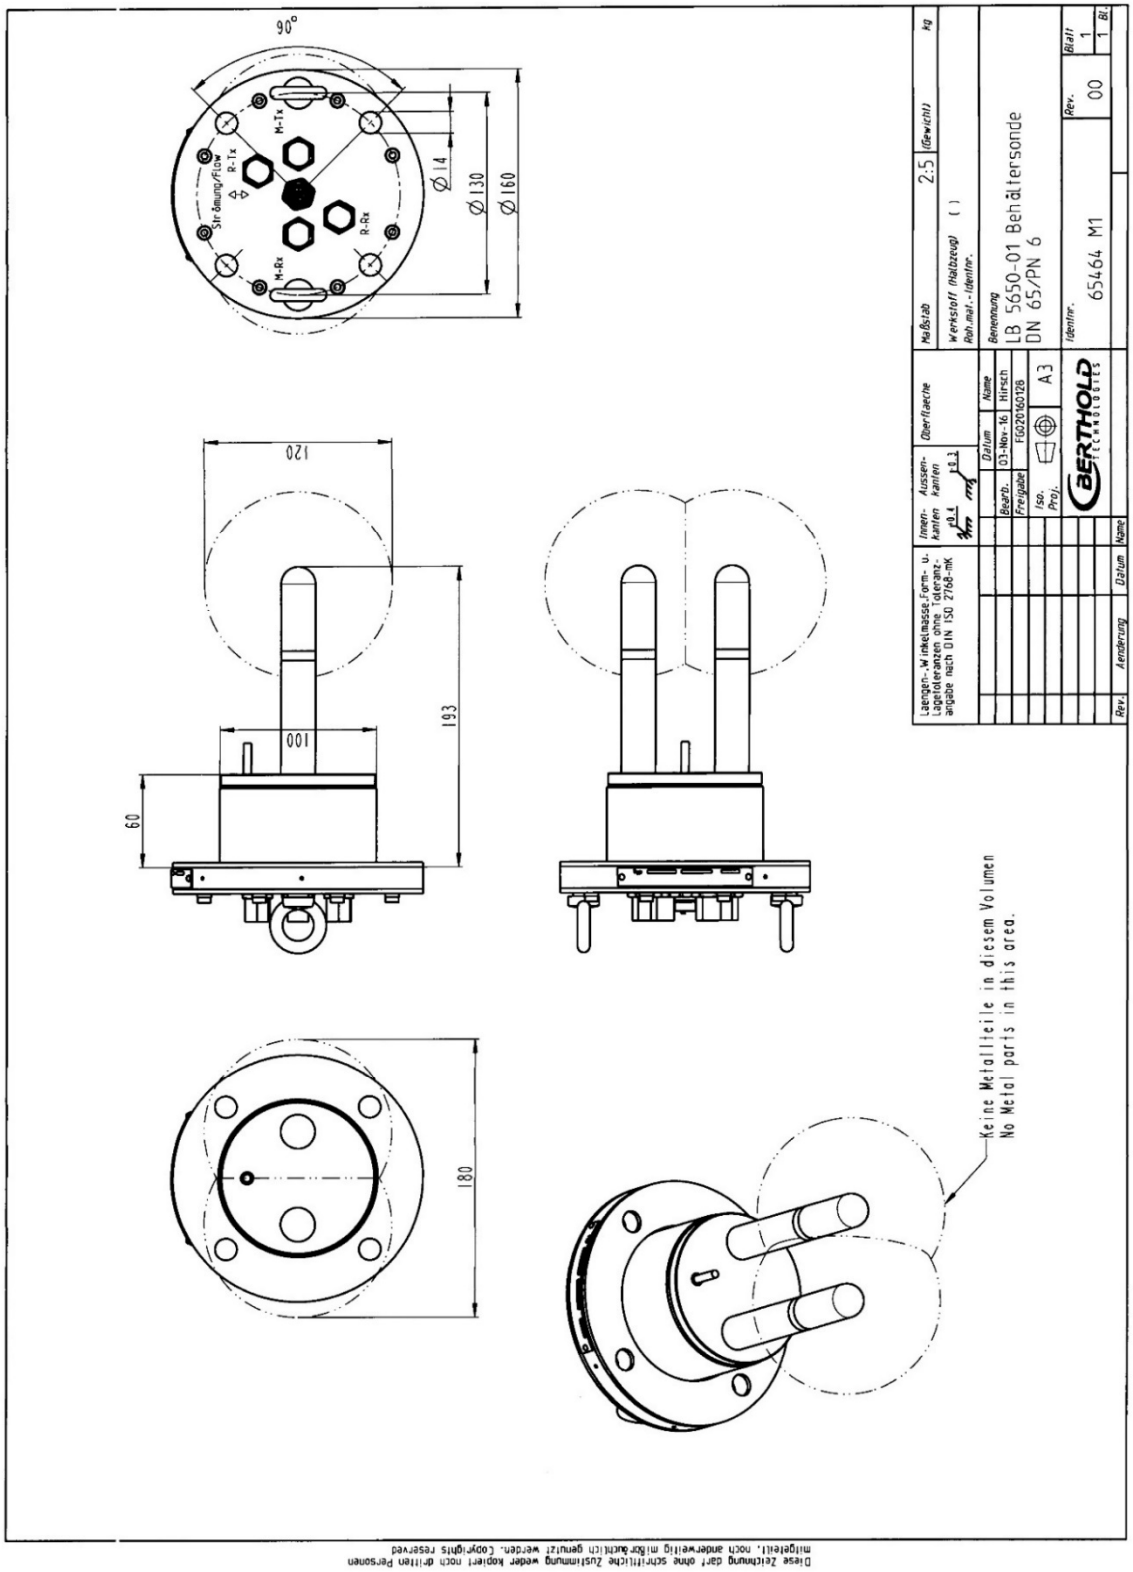

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig missbräuchlich genutzt werden. Copyrights reserved

8.4.2 Typ LB 5650-02

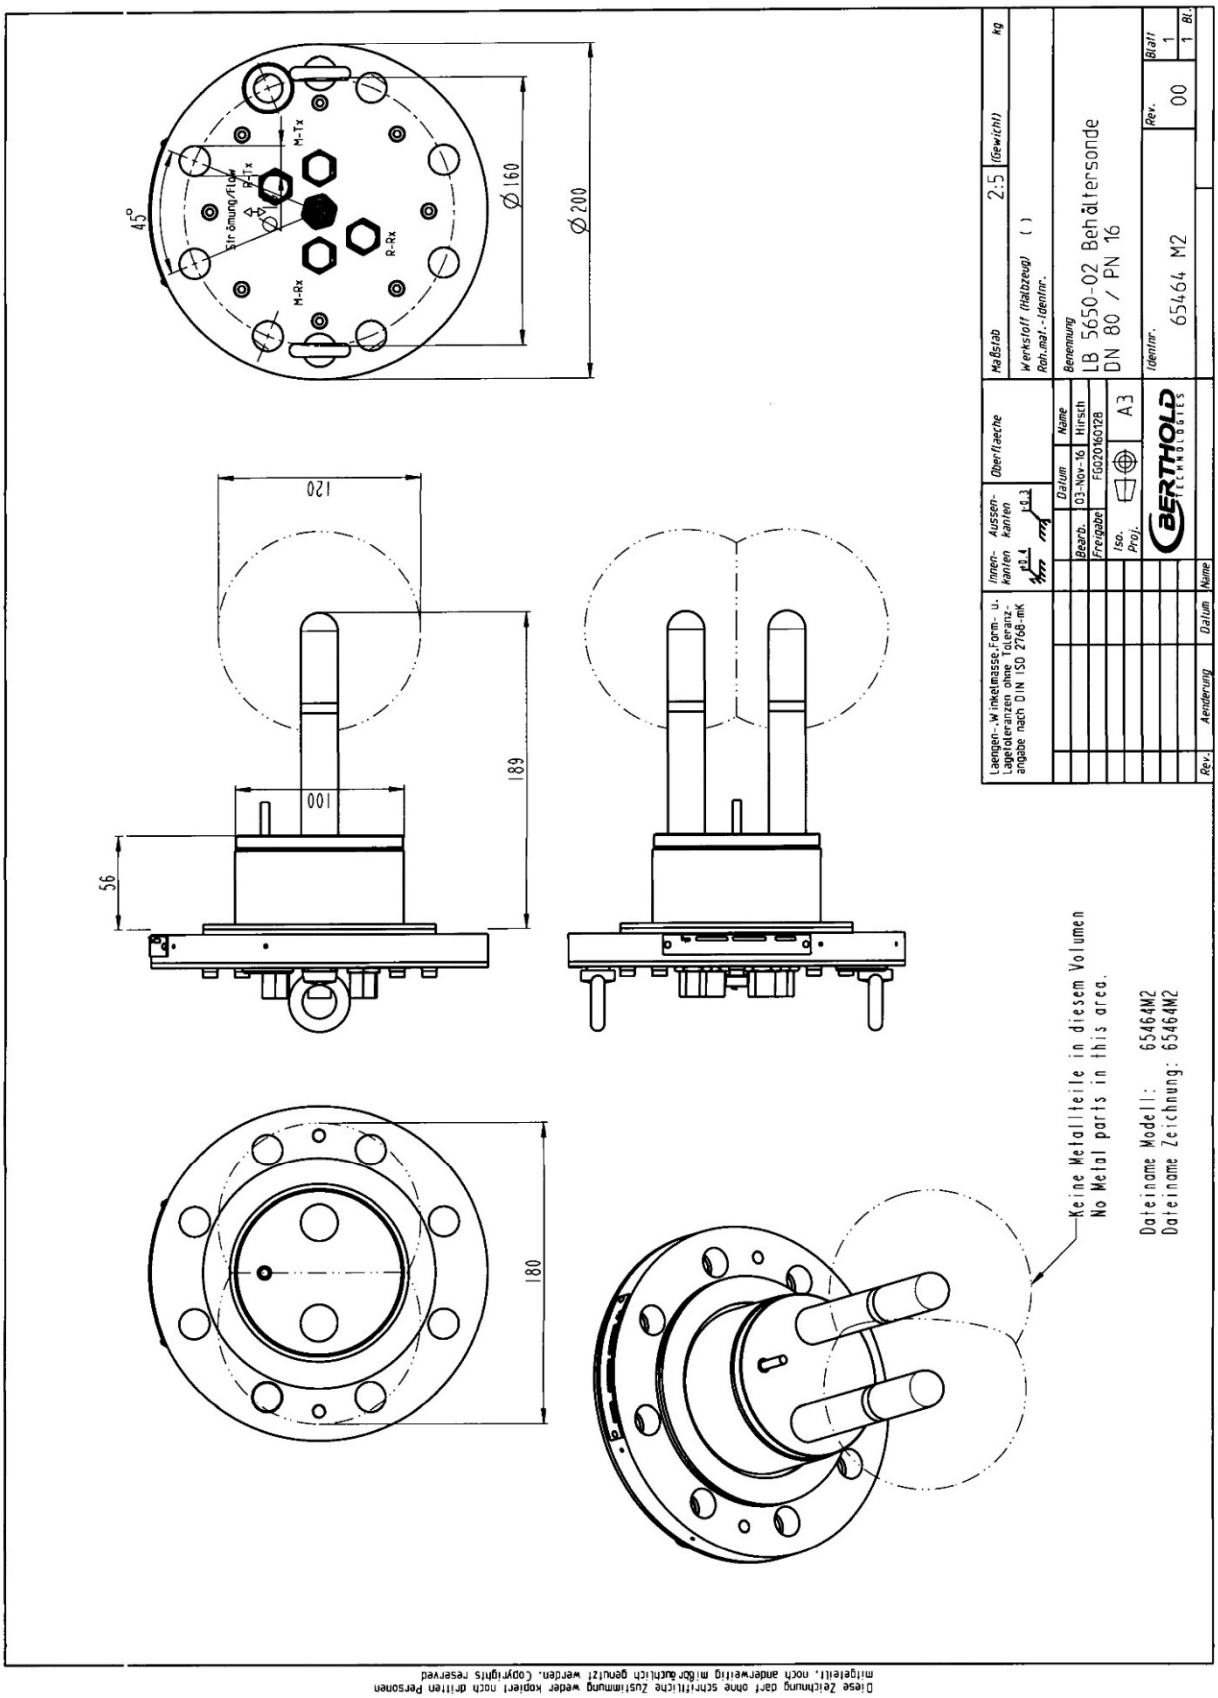

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyright reserved

8.4.3 Type LB 5650-03

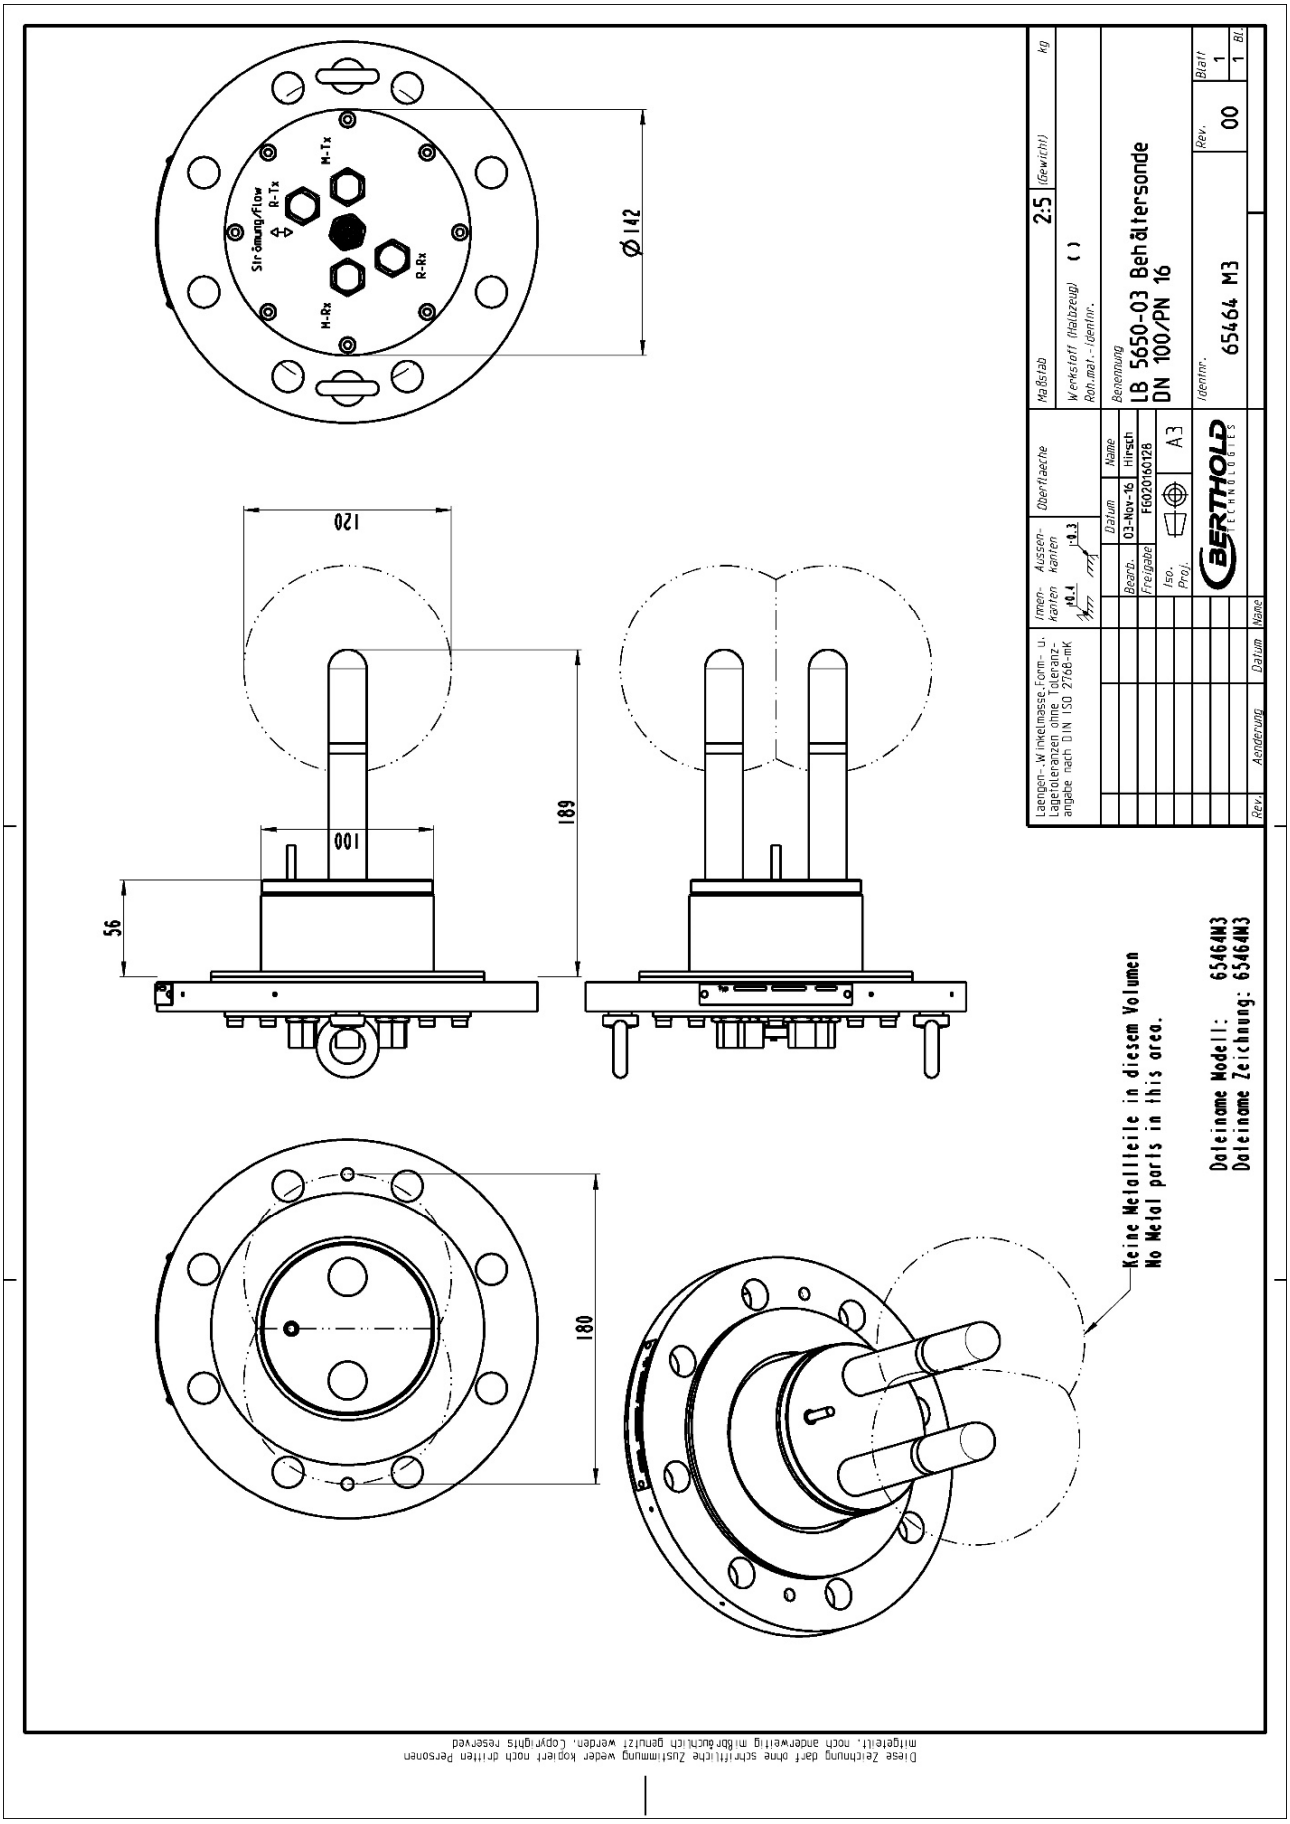

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyrights reserved

8.4.4 Type LB 5650-04

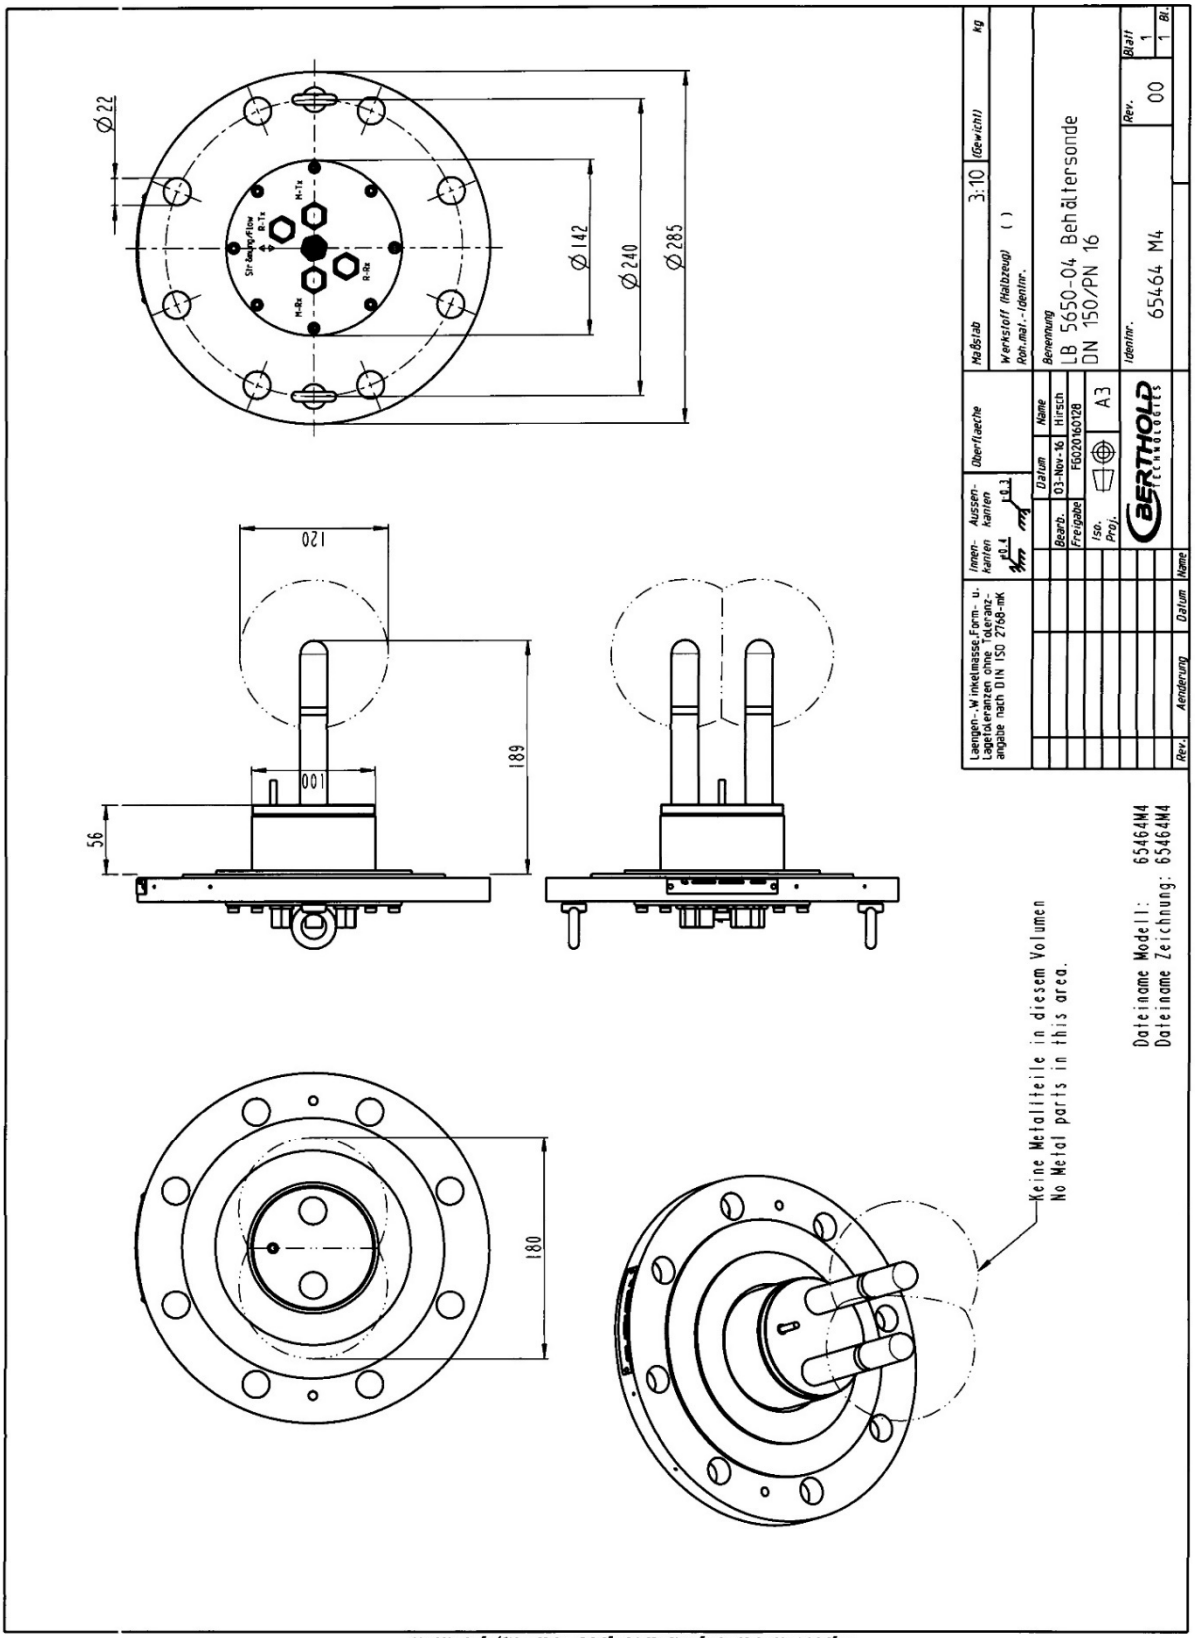

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyrights reserved

8.4.5 Type LB 5650-05

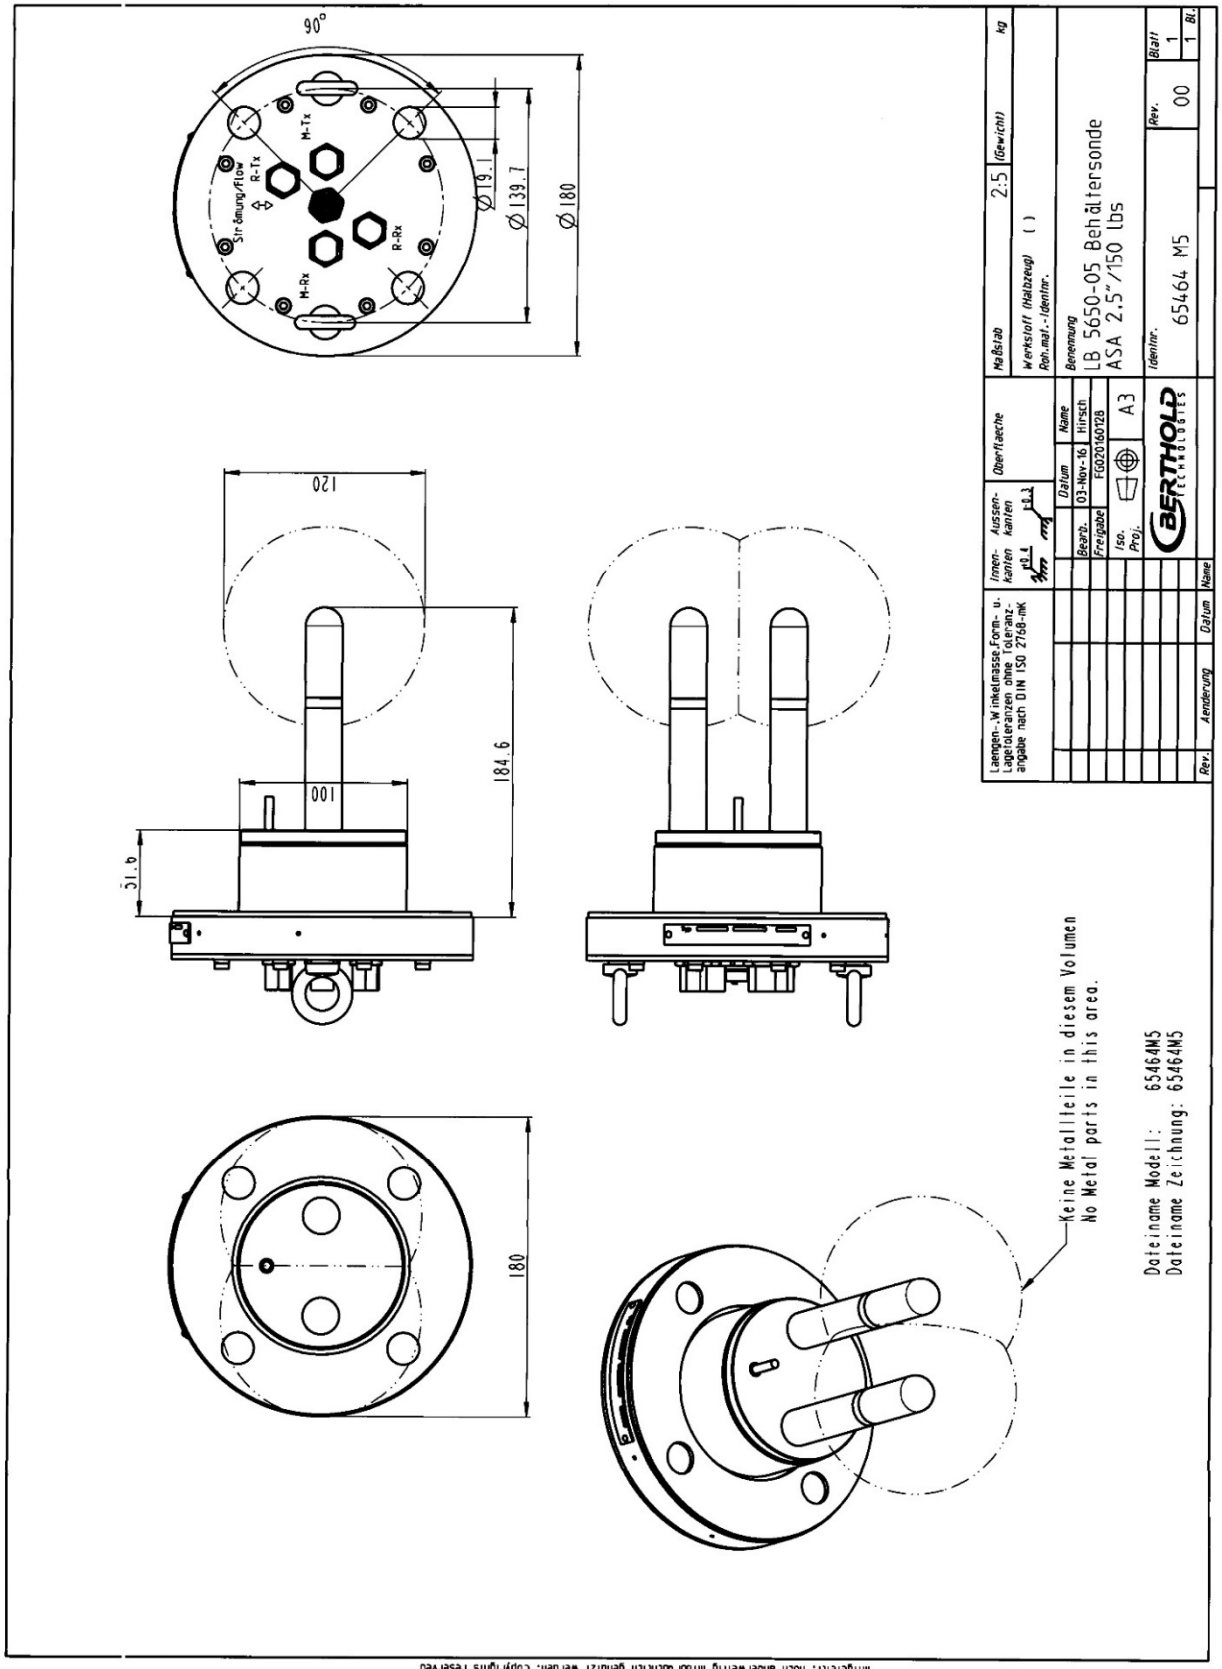

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyrights reserved

8.4.6 Type LB 5650-09

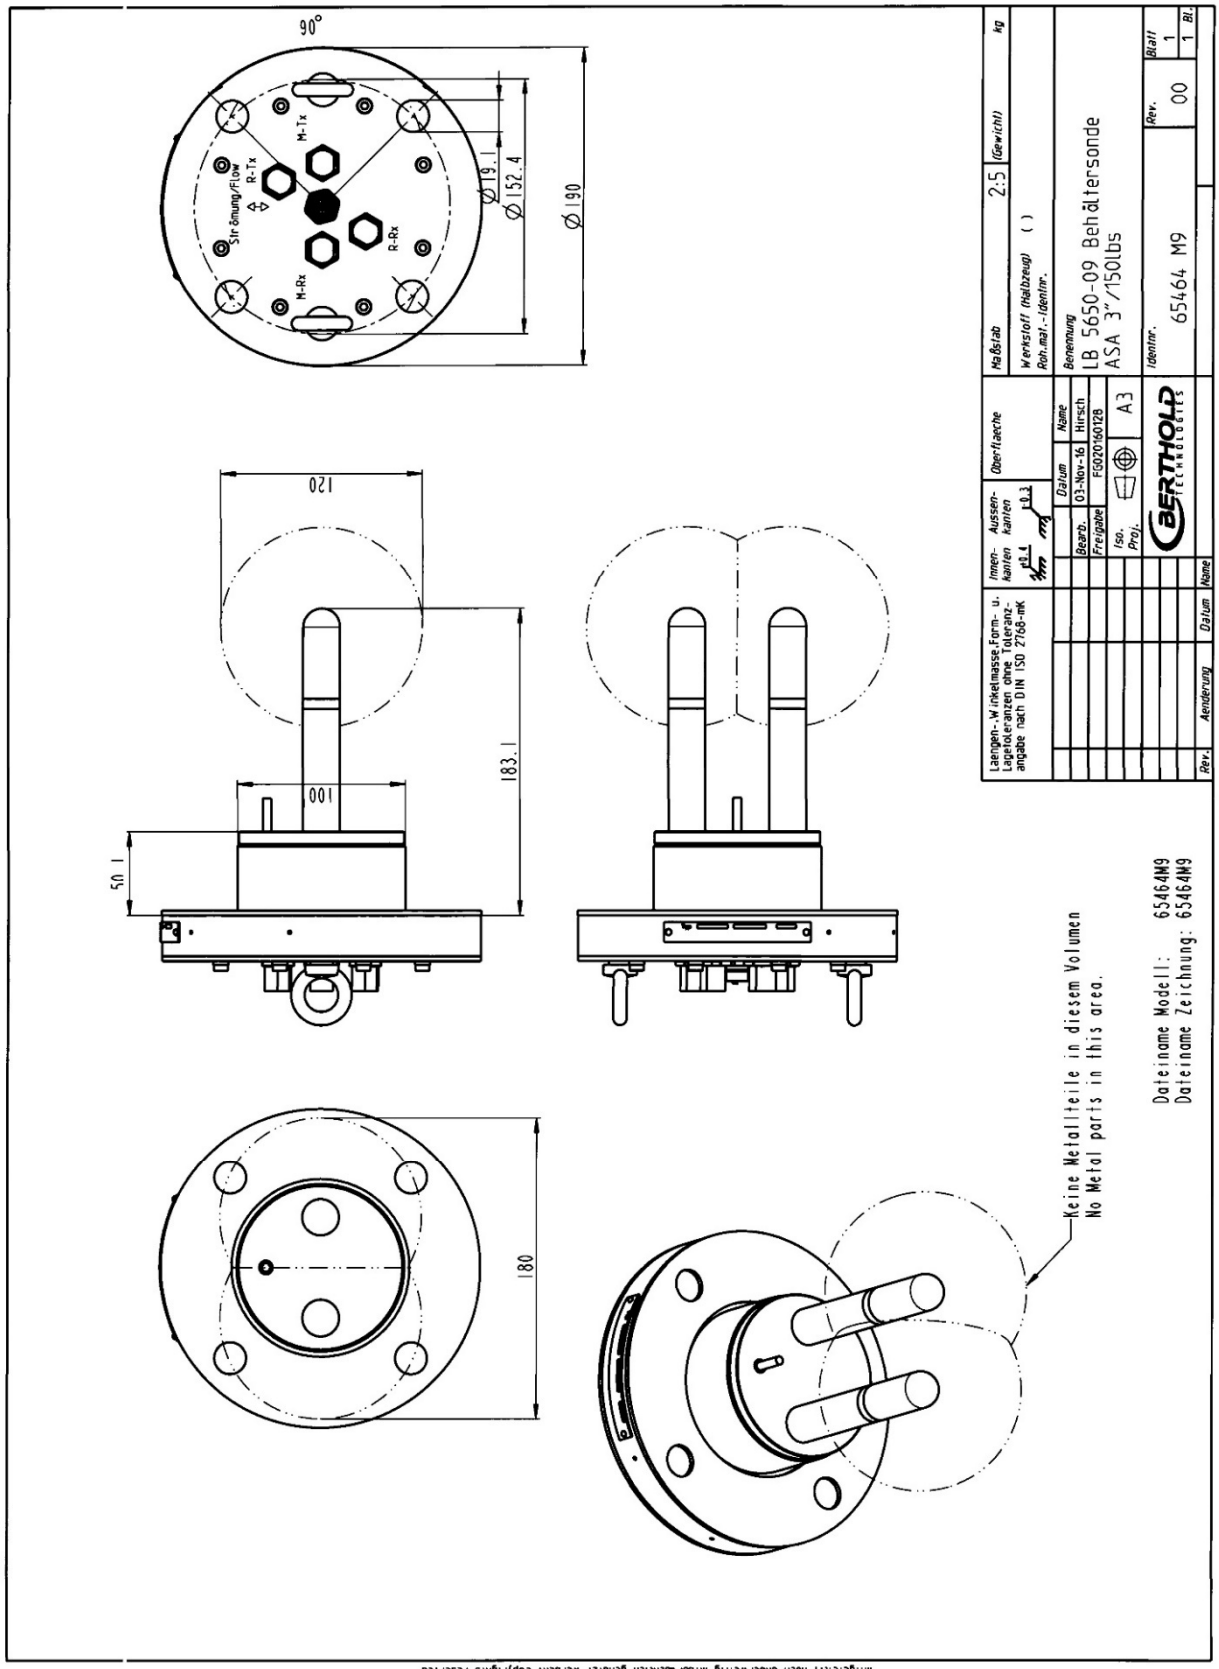

8.4.7 Installation Situation in Pipelines

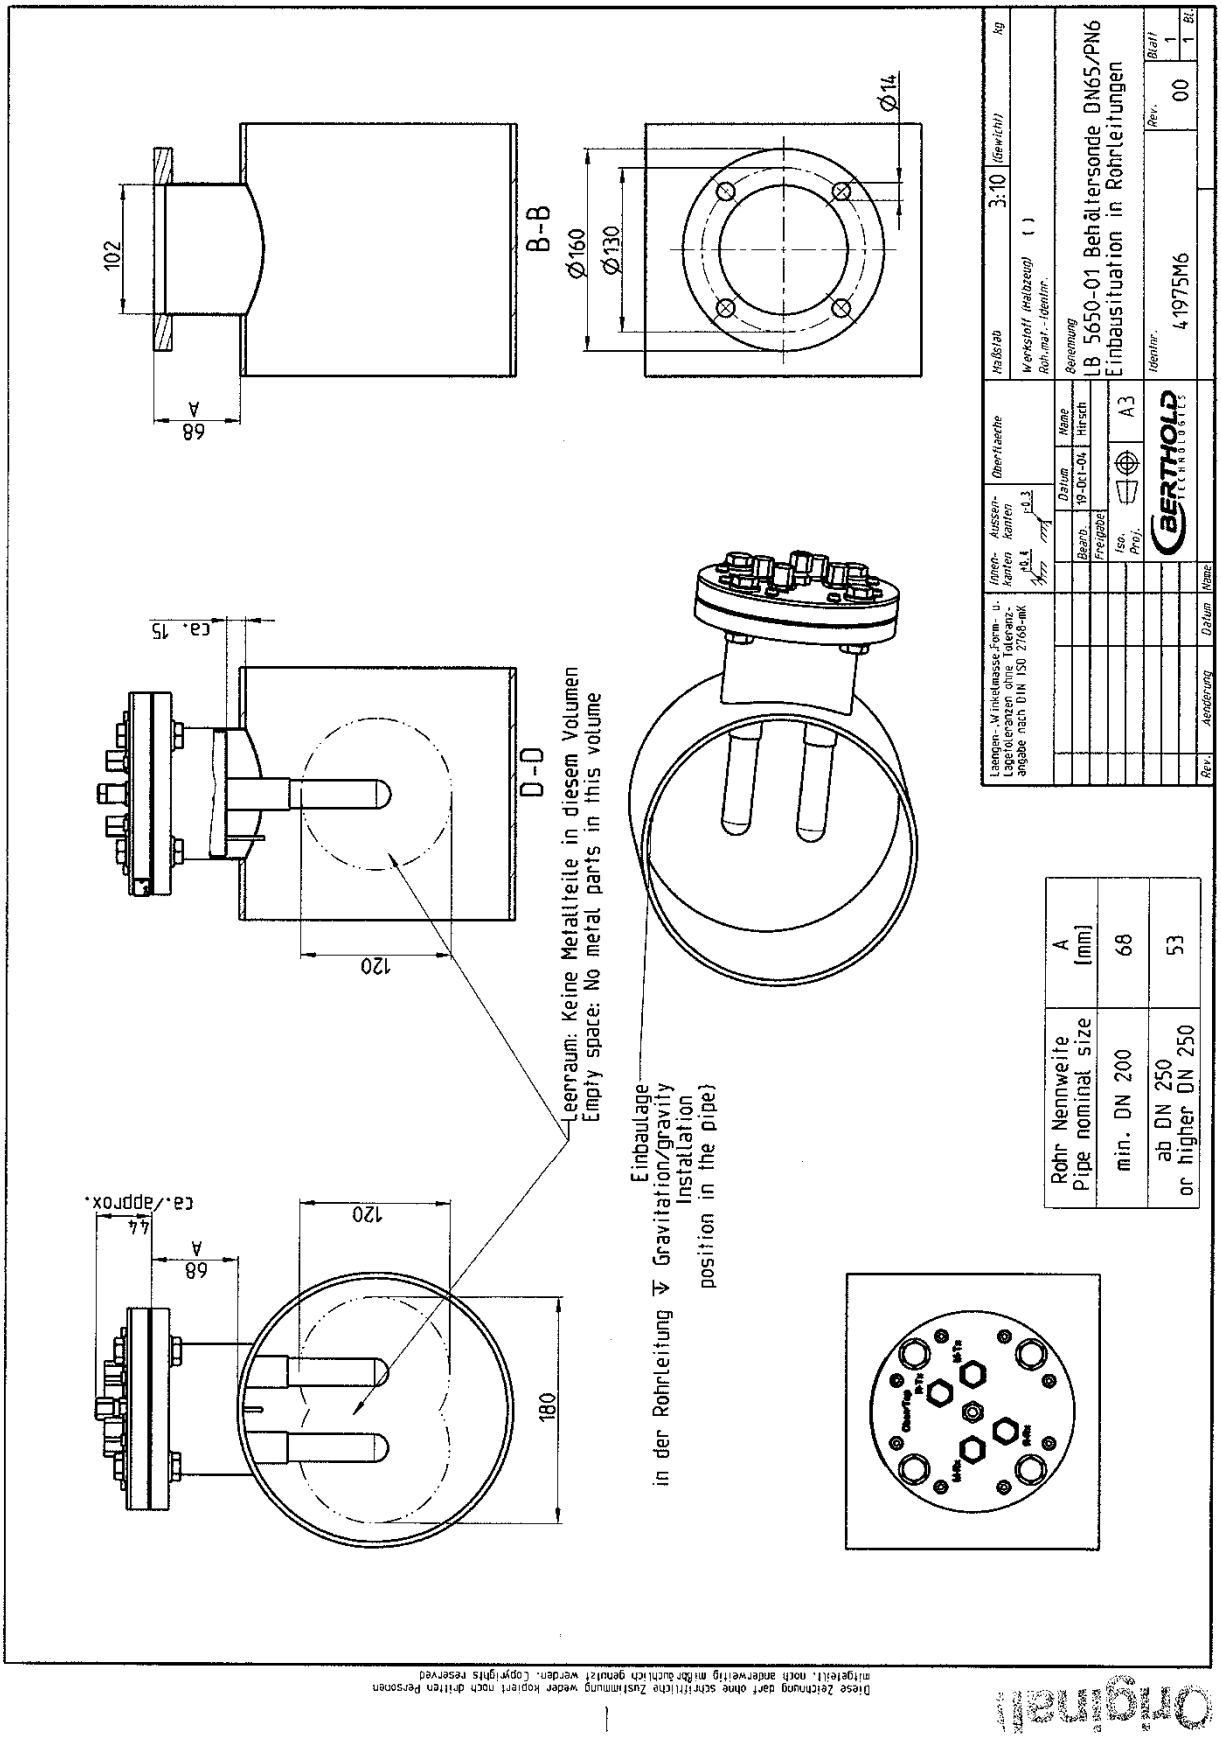

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyrights reserved

8.5 Dimensional Drawings Container Flush Probes

8.5.1 Type LB 5651-01

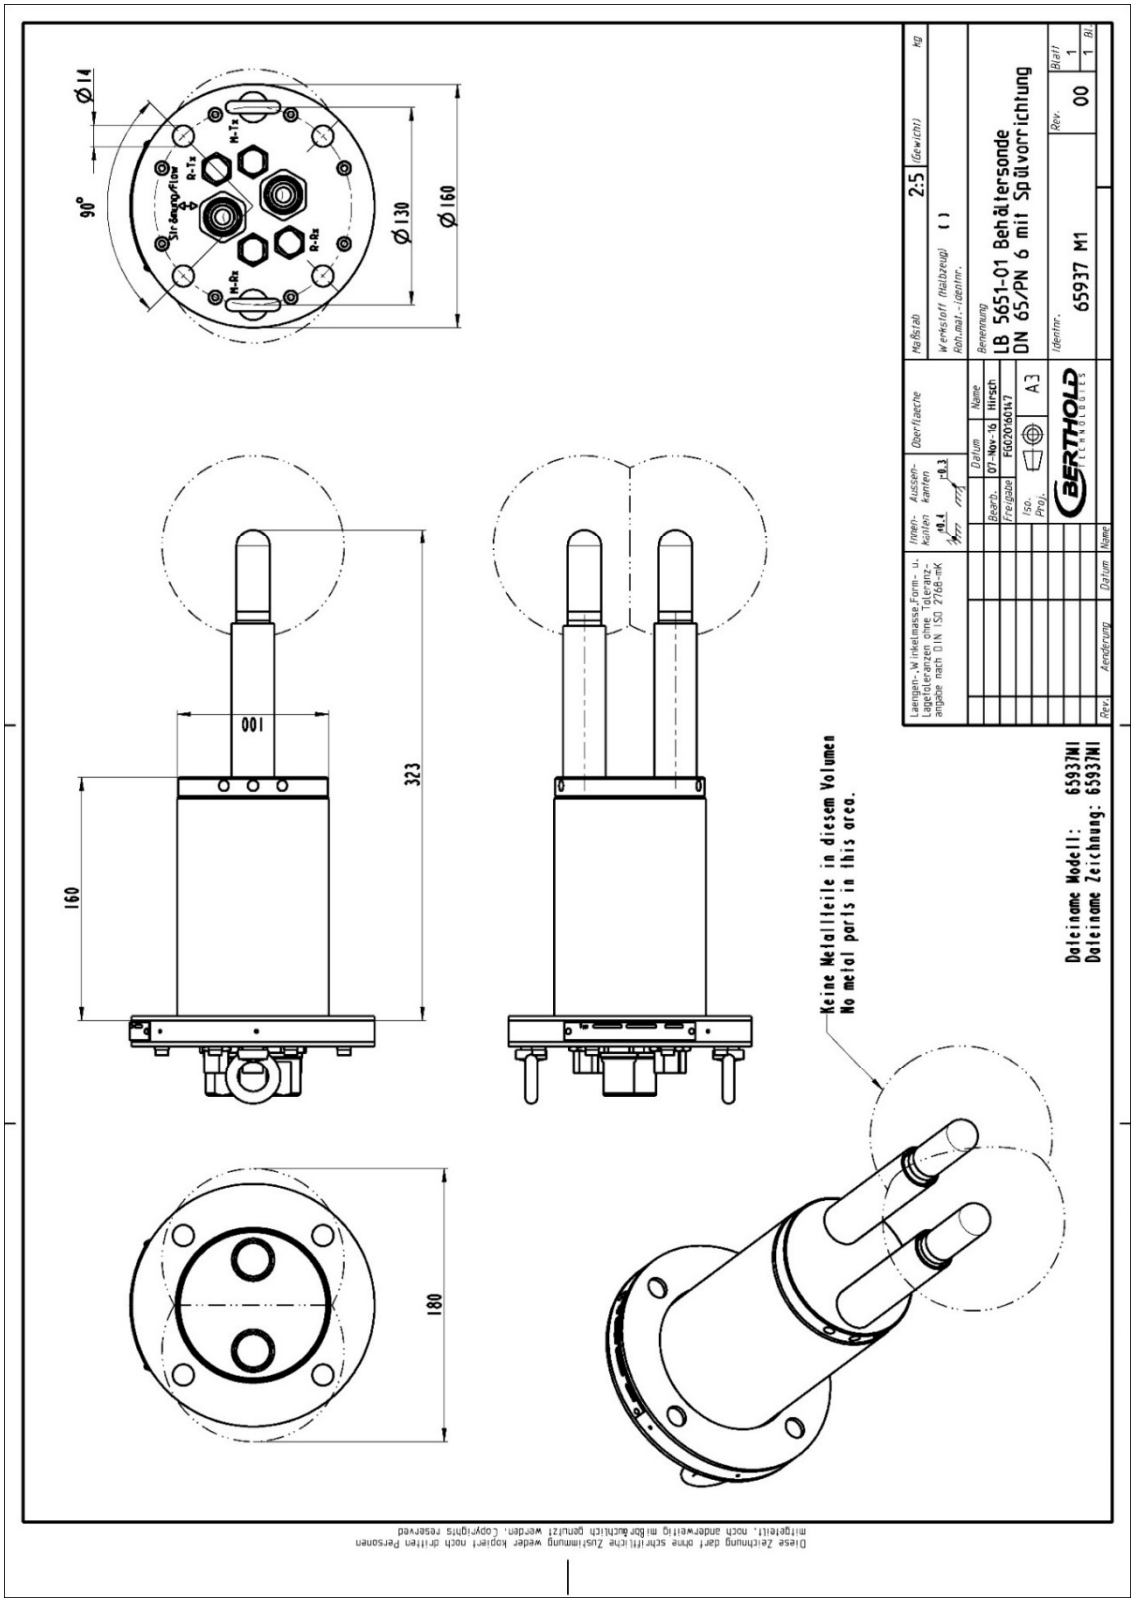

8.5.2 Type LB 5651-02

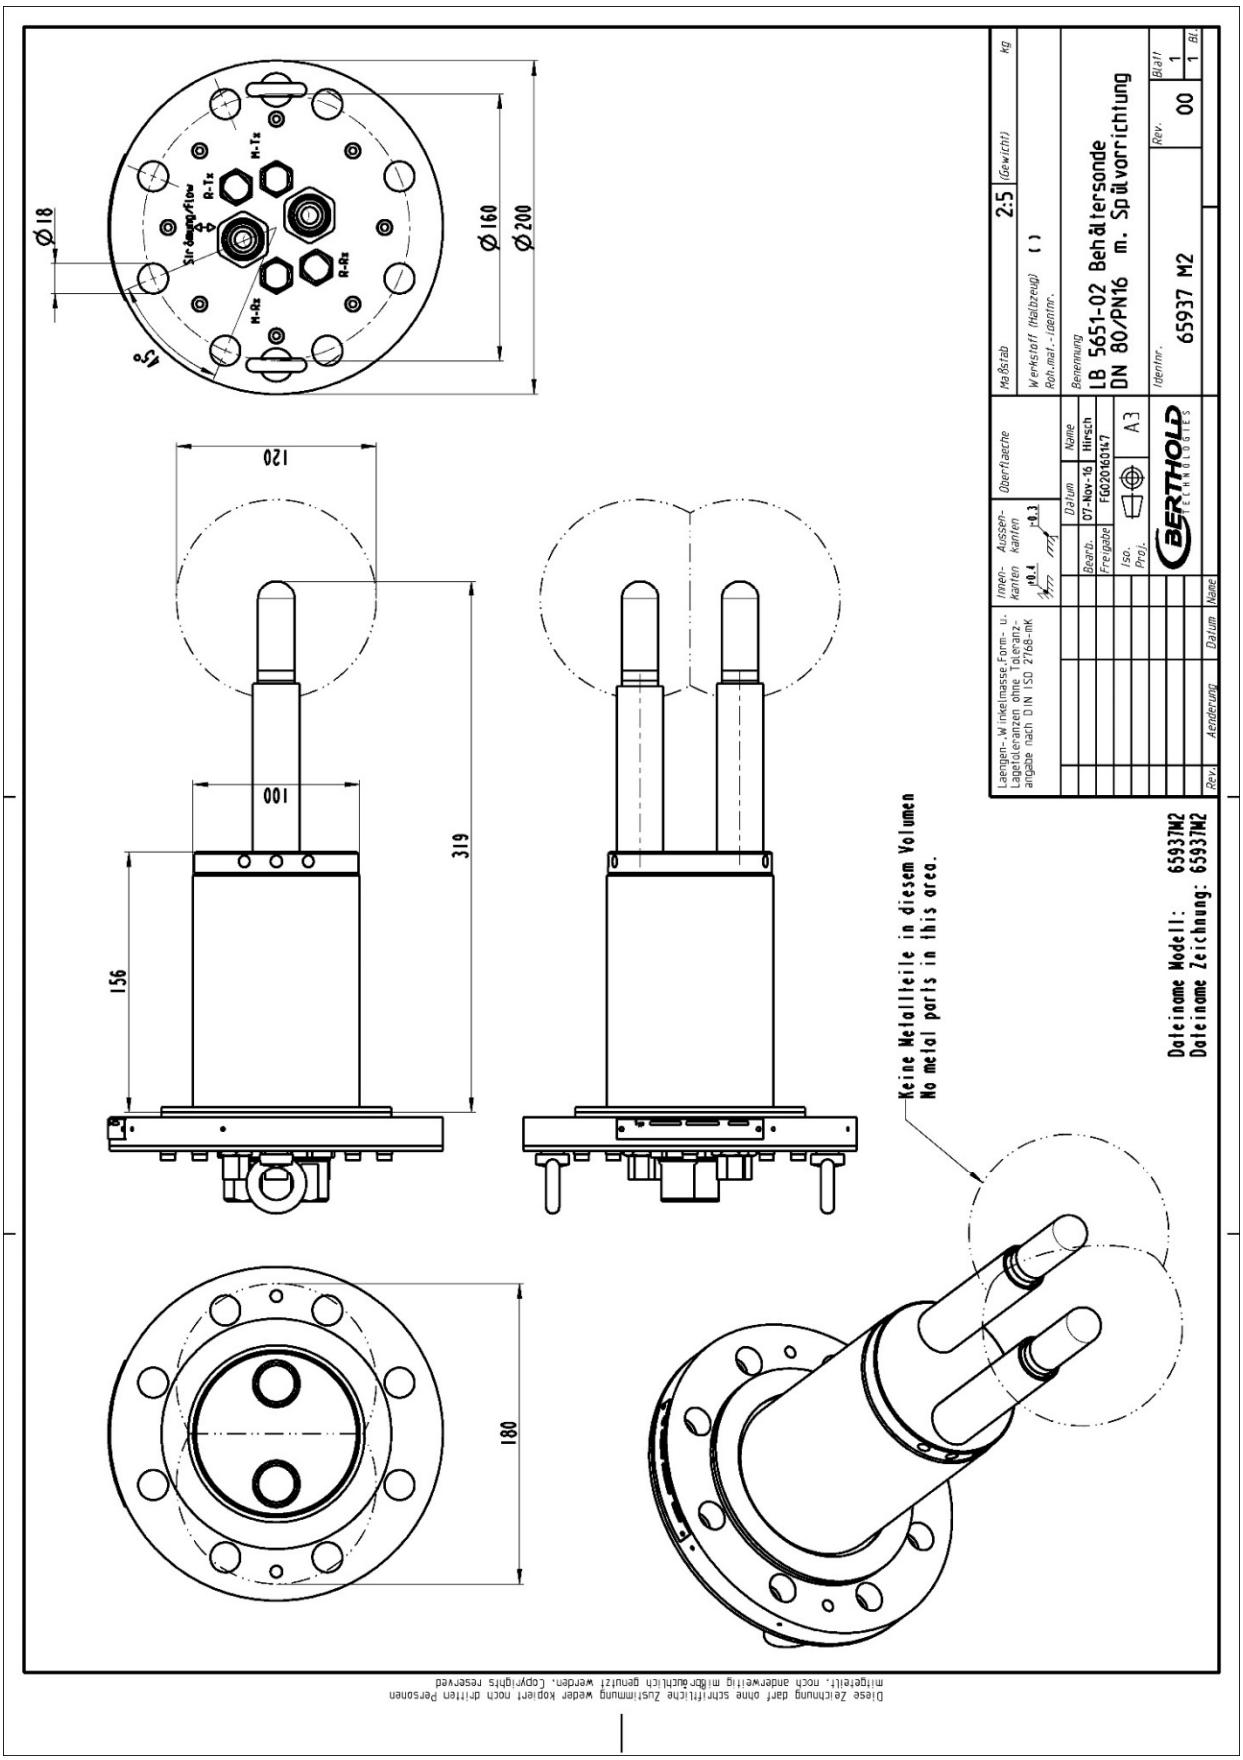

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich benutzt werden. Copyrights reserved

8.5.3 Type LB 5651-03

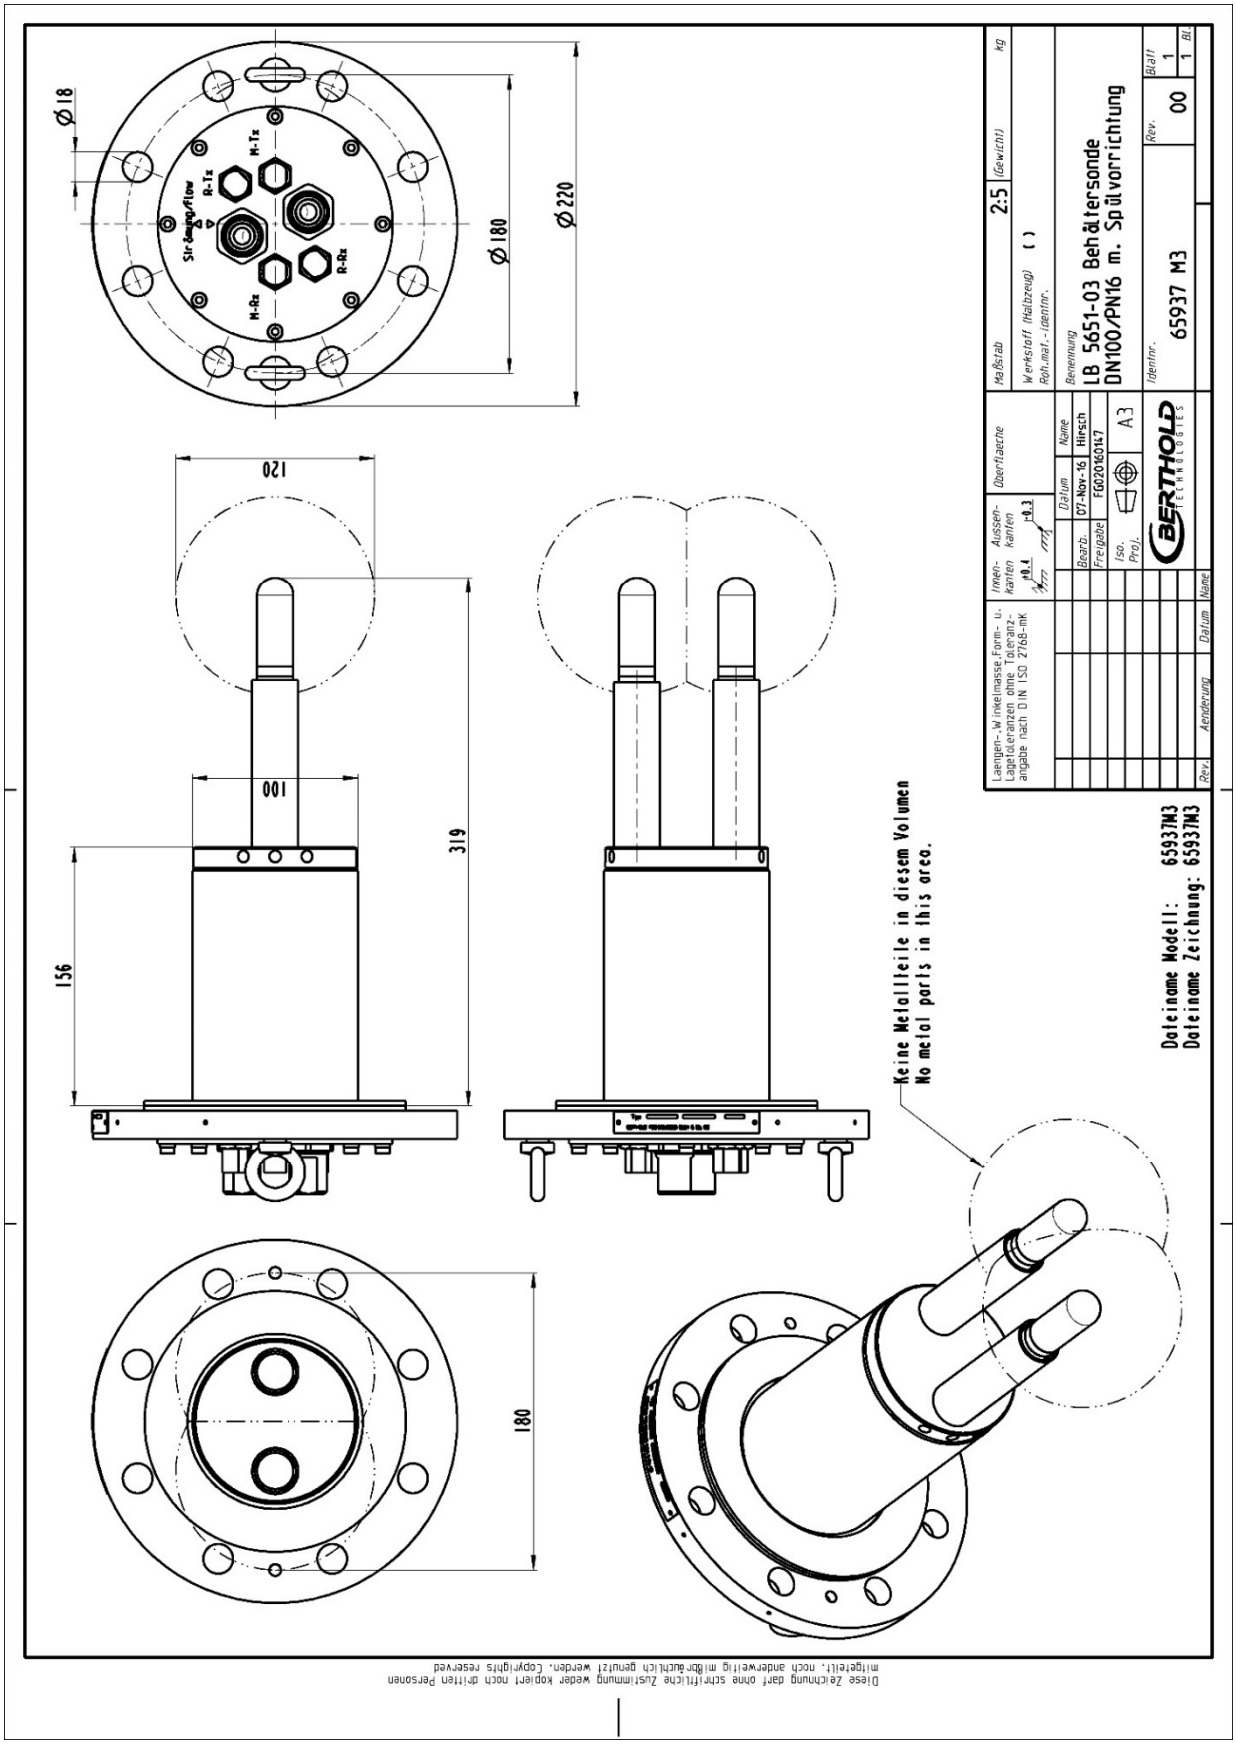

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyright reserved

8.5.4 Type LB 5651-04

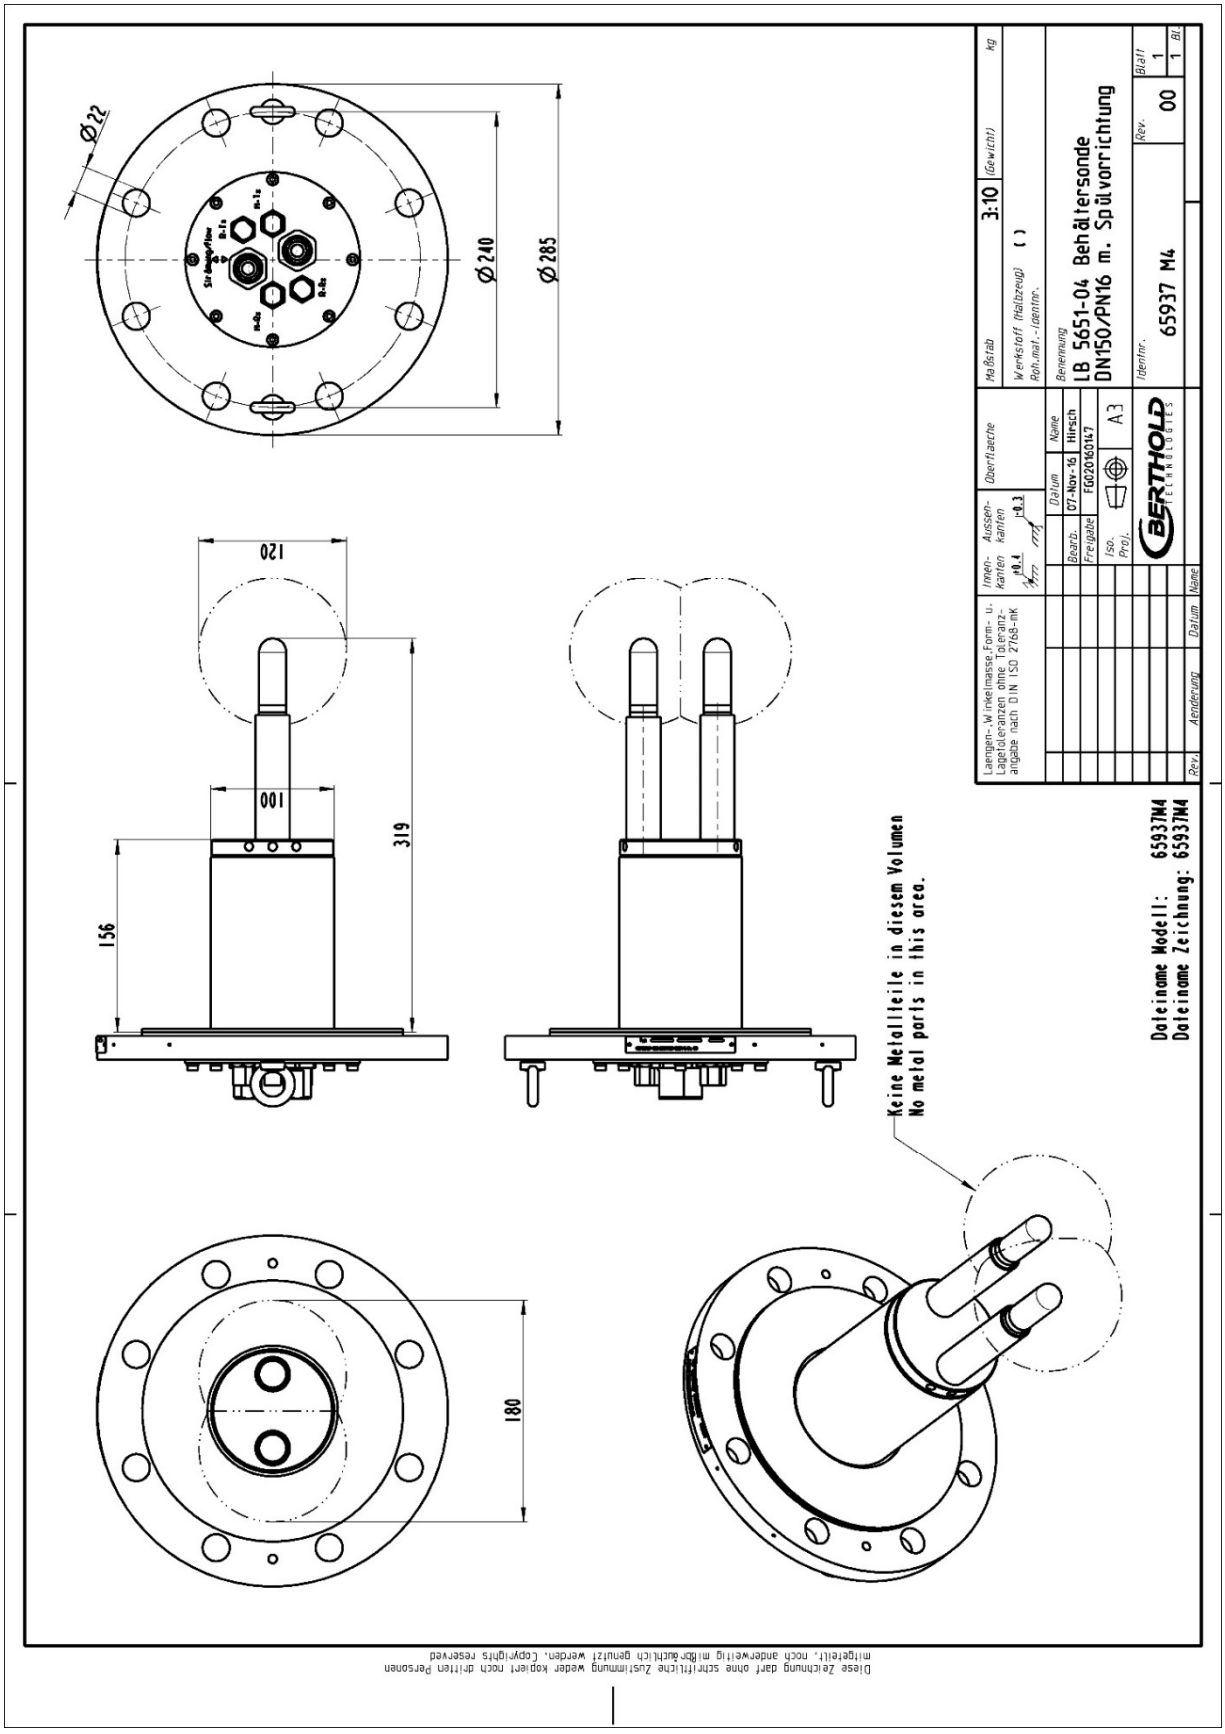

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig missbräuchlich genutzt werden. Copyrights reserved

8.5.5 Type LB 5651-05

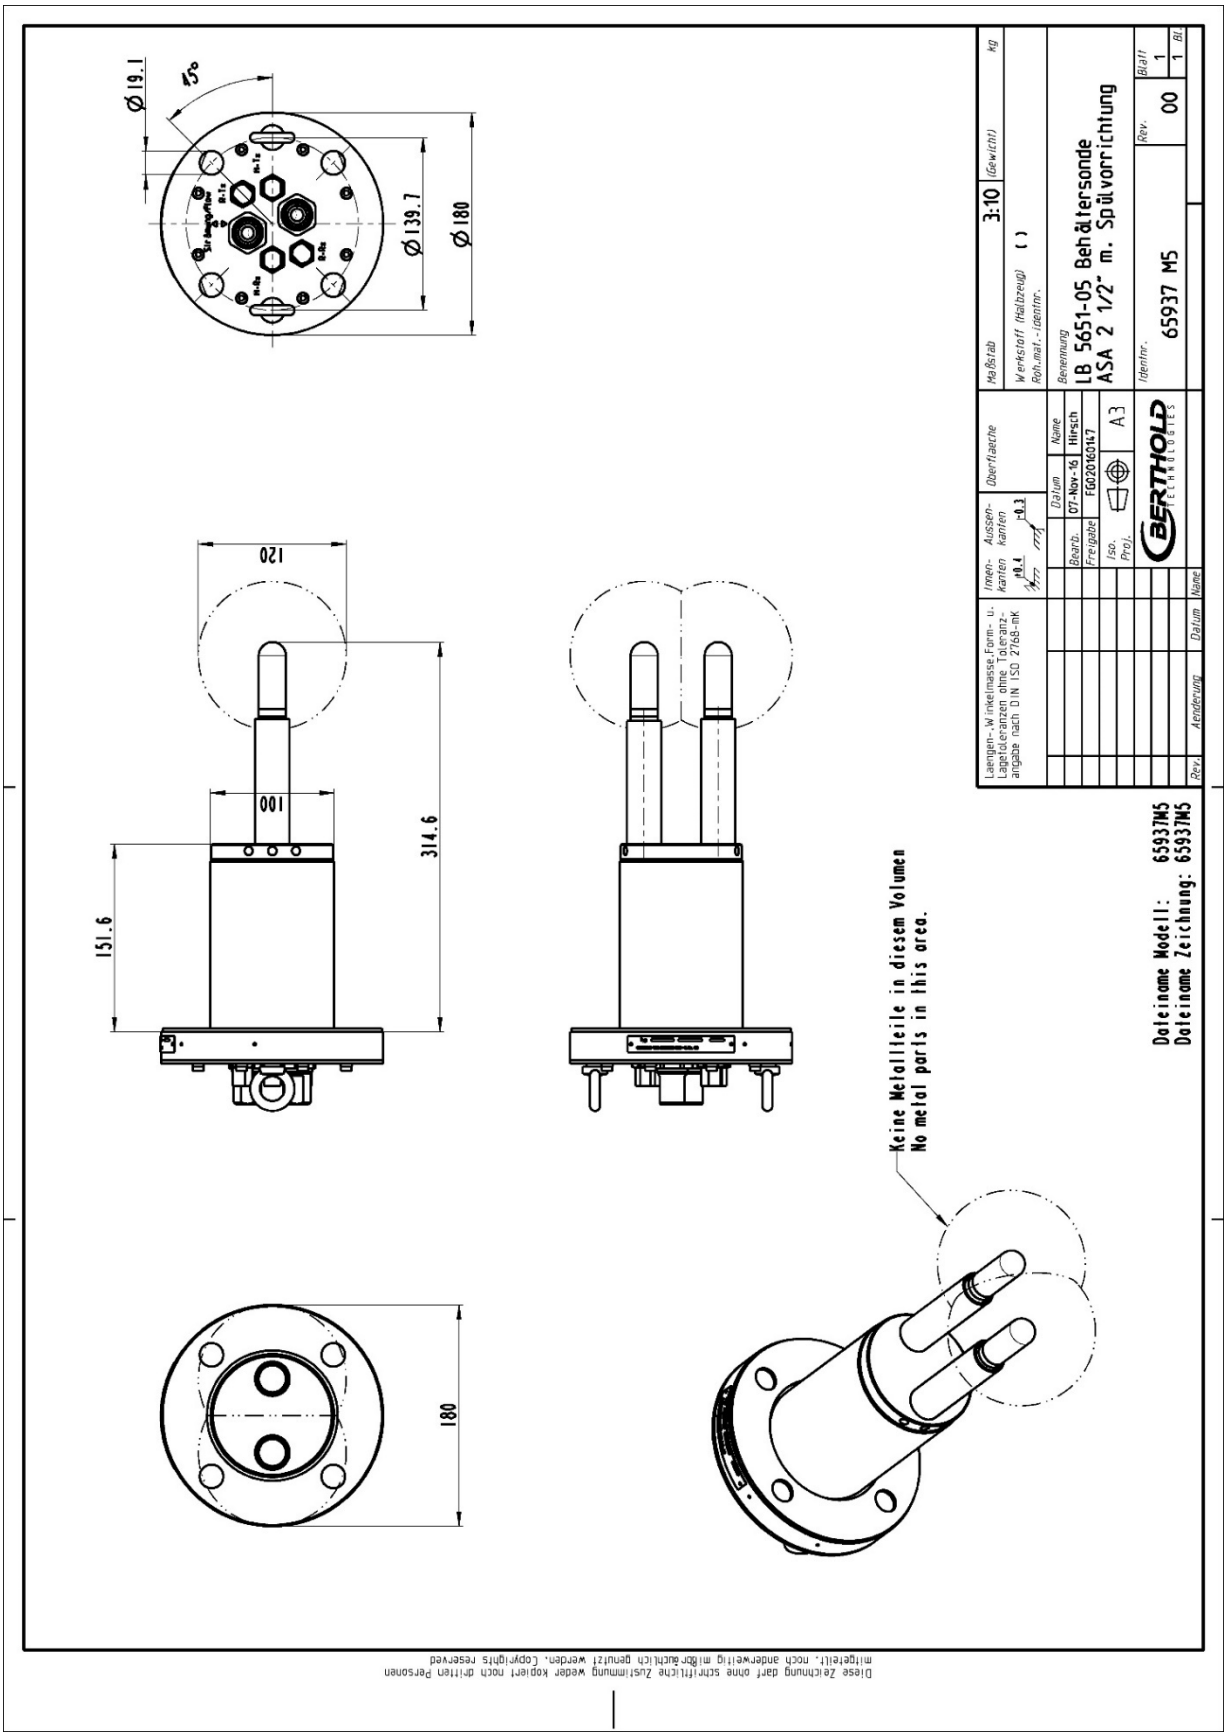

Diese Zeichnung darf ohne schriftliche Zustimmung weder kopiert noch dritten Personen mitgeteilt, noch anderweitig mißbräuchlich genutzt werden. Copyrights reserved

8.5.6 Installation Situation in Pipelines

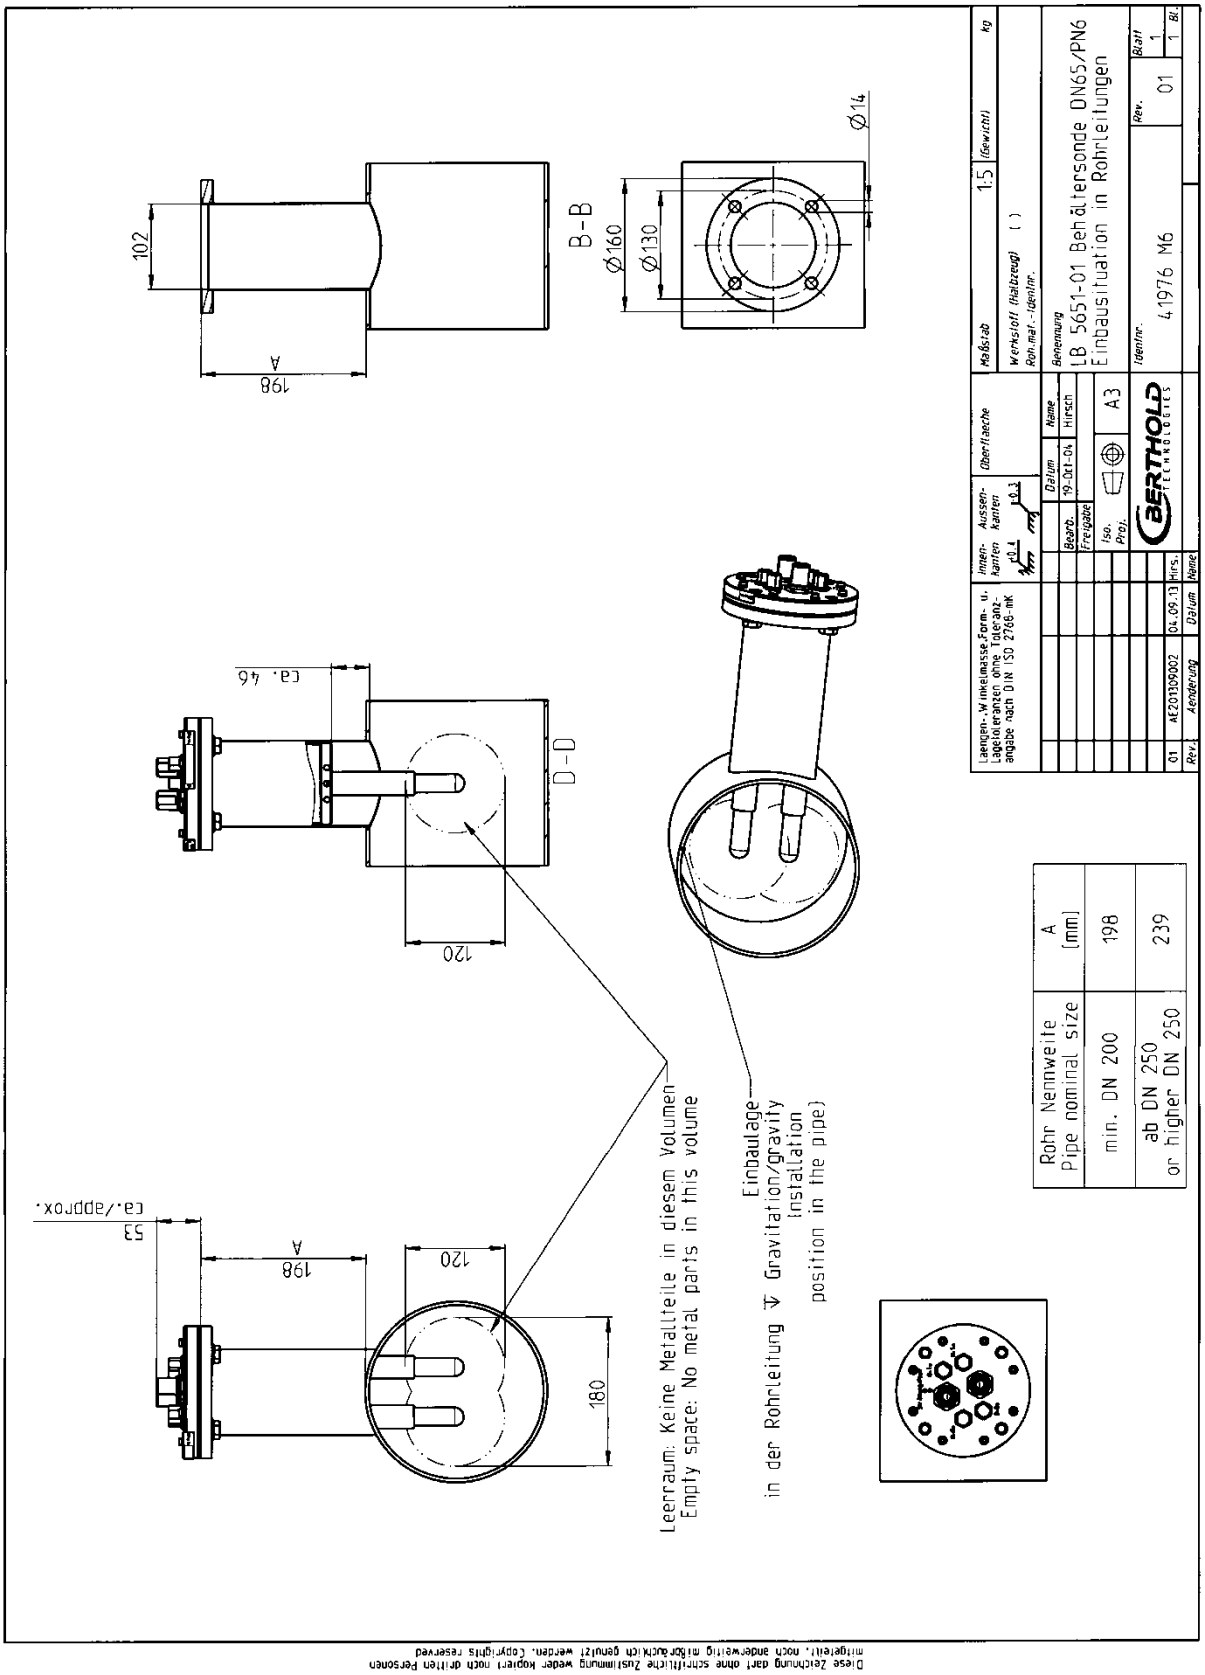

8.6 Installation Sheets for LB 5650 (Container Probe)

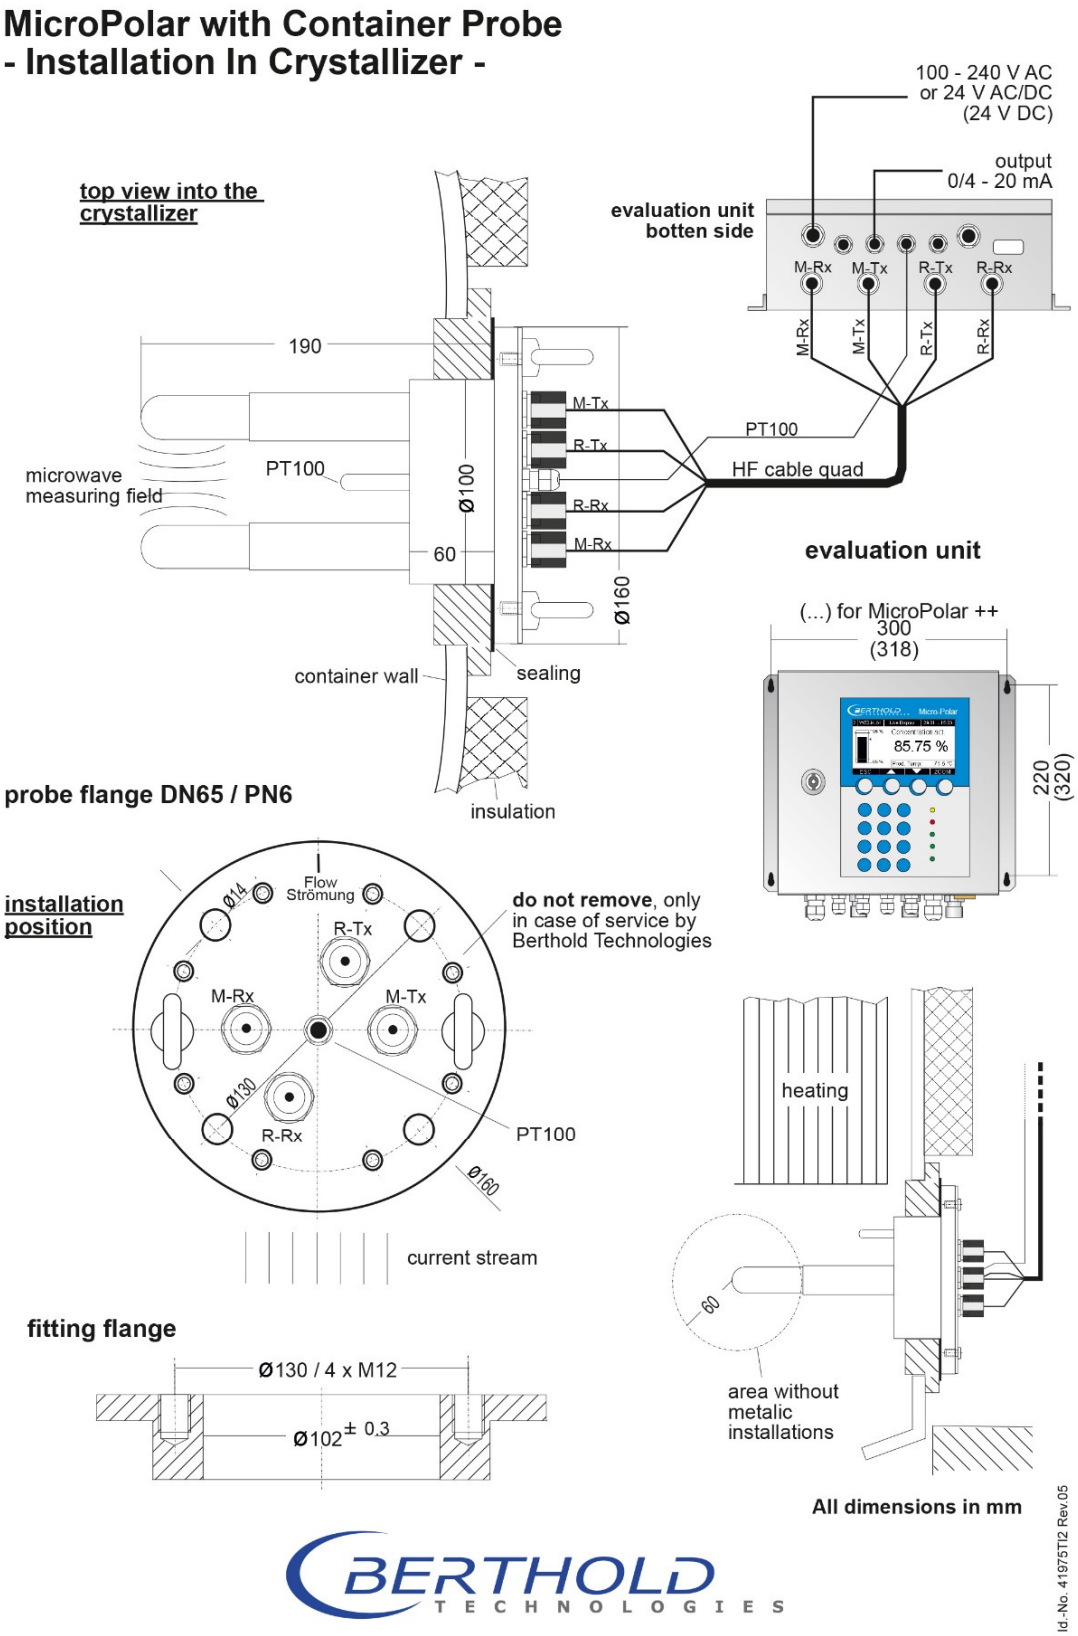

BERTHOLD TECHNOLOGIES GmbH & Co. KG . P.O. Box 100 163 . 75312 Bad Wildbad, Germany
Phone +49 7081 177-0 . Fax +49 7081 177-100 . industry@Berthold.com
www.Berthold.com

MicroPolar with Container Probe
- Installation In Crystallizer -

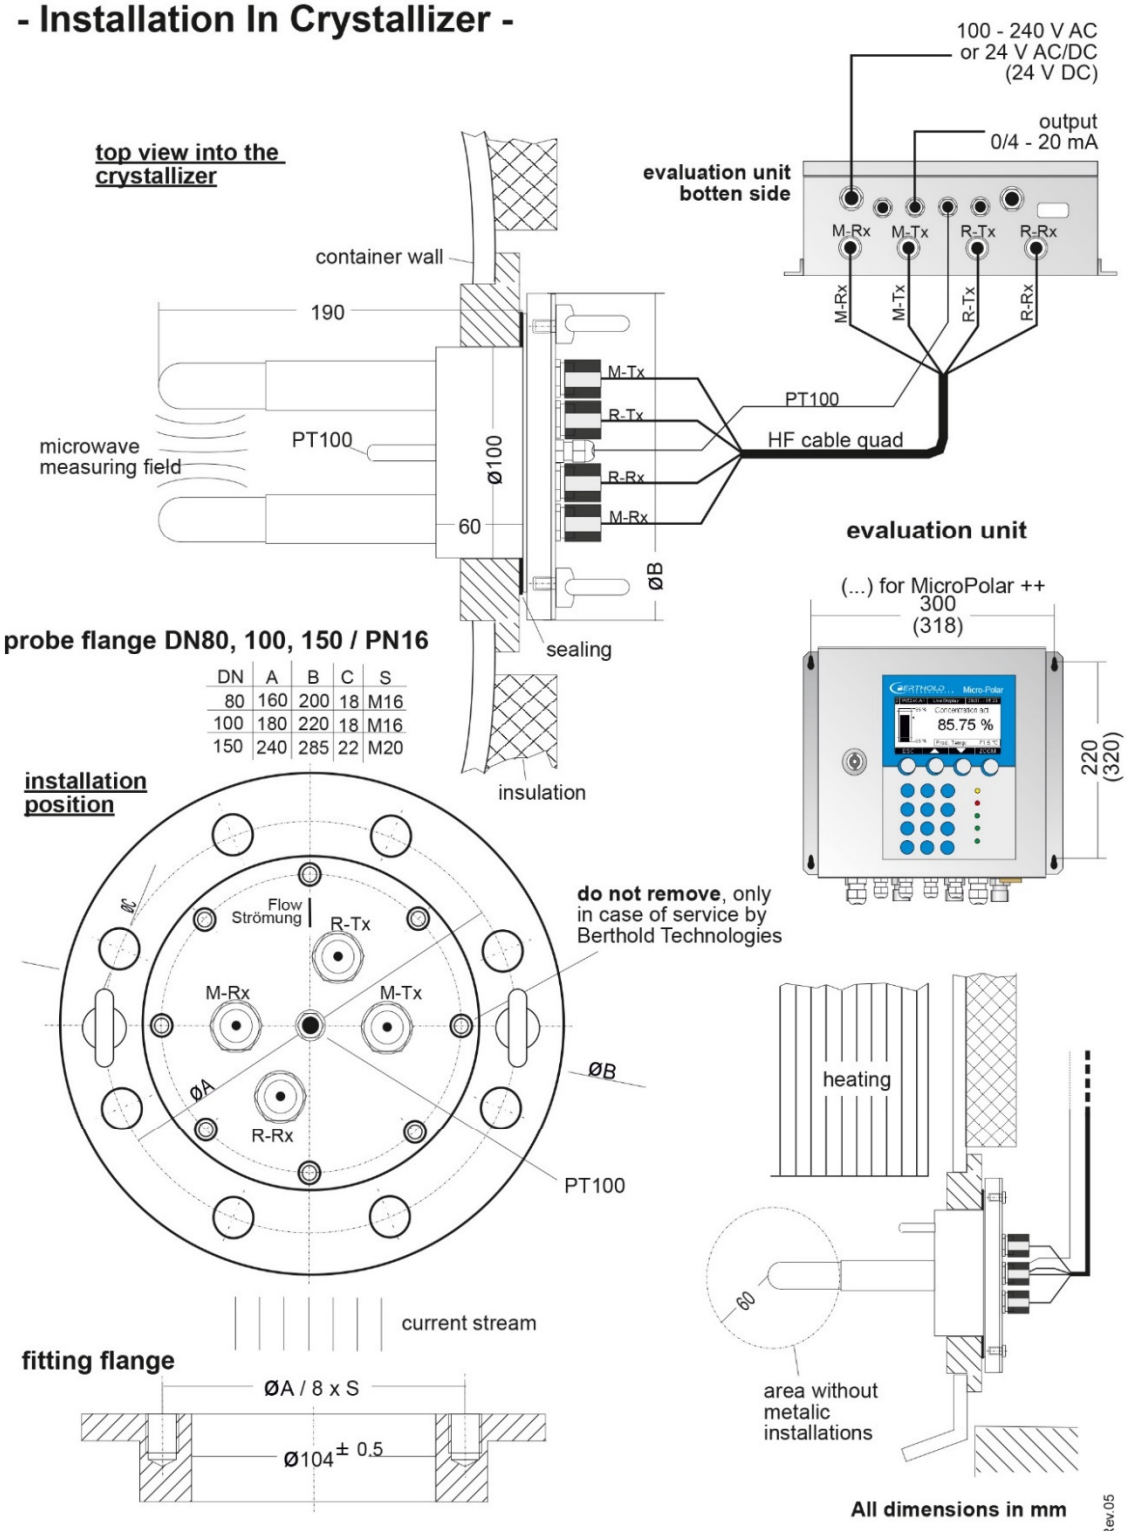

BERTHOLD TECHNOLOGIES GmbH & Co. KG . P.O. Box 100 163 . 75312 Bad Wildbad, Germany
Phone +49 7081 177-0 . Fax +49 7081 177-100 . industry@Berthold.com
www.Berthold.com

8.7 Installation Sheets for LB 5651 (Container Flush Probe)

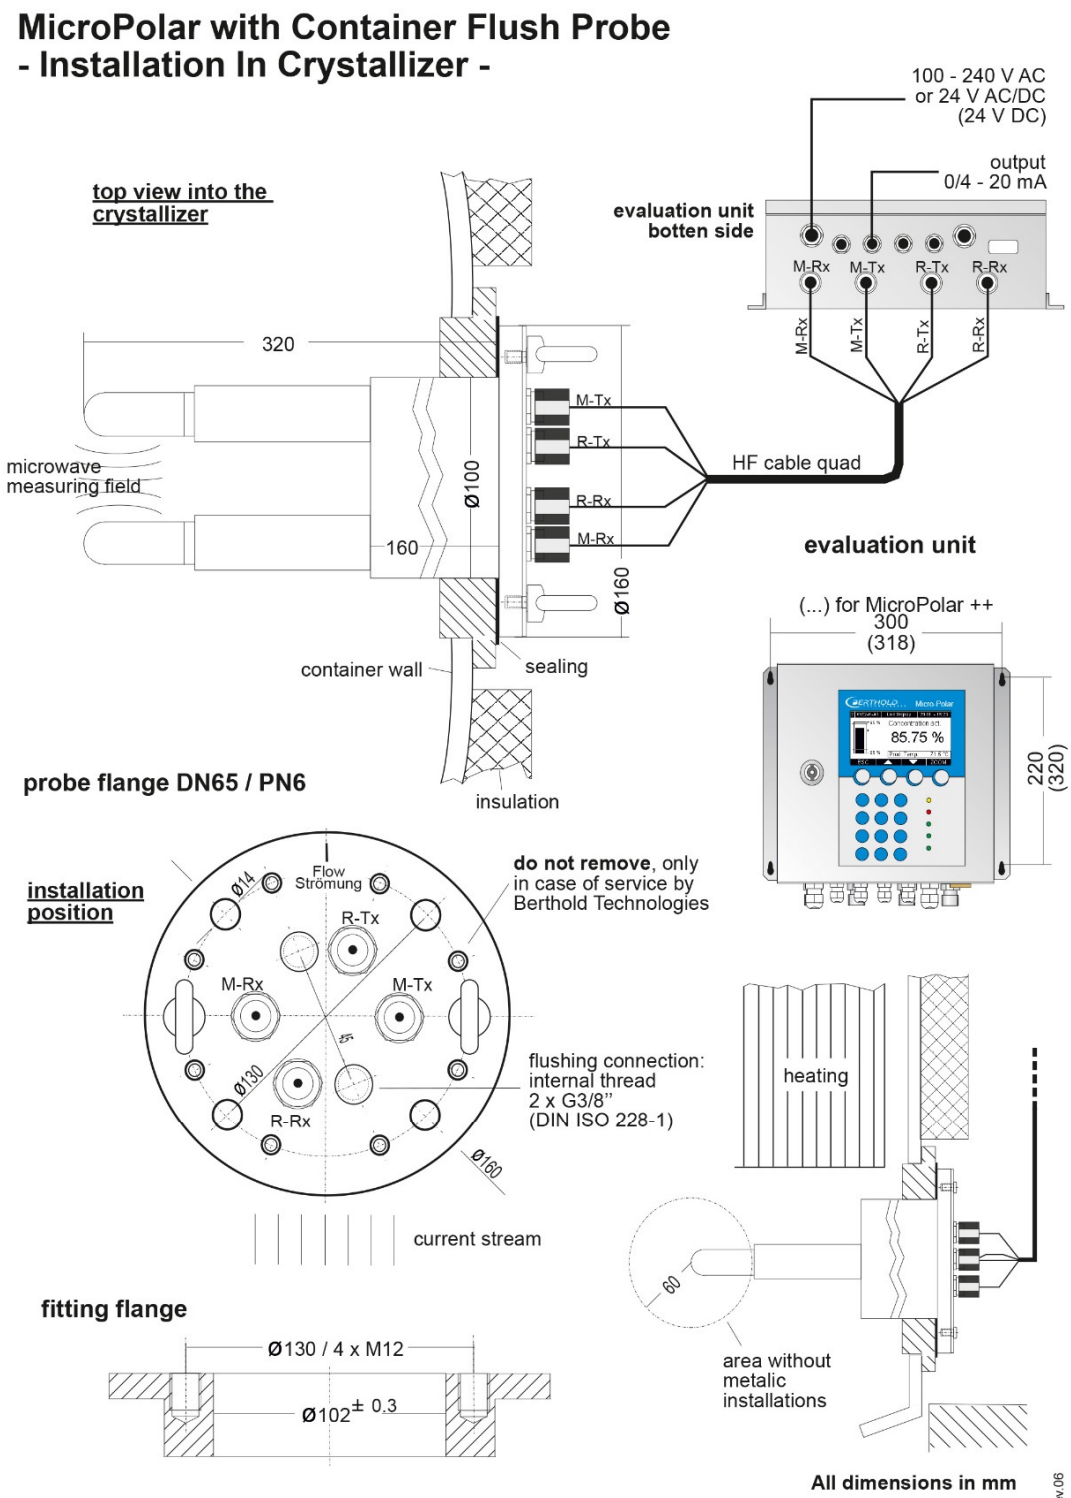

BERTHOLD TECHNOLOGIES GmbH & Co. KG . P.O. Box 100 163 . 75312 Bad Wildbad, Germany
Phone +49 7081 177-0 . Fax +49 7081 177-100 . industry@Berthold.com
www.Berthold.com

MicroPolar with Container Flush Probe
- Installation In Crystallizer -

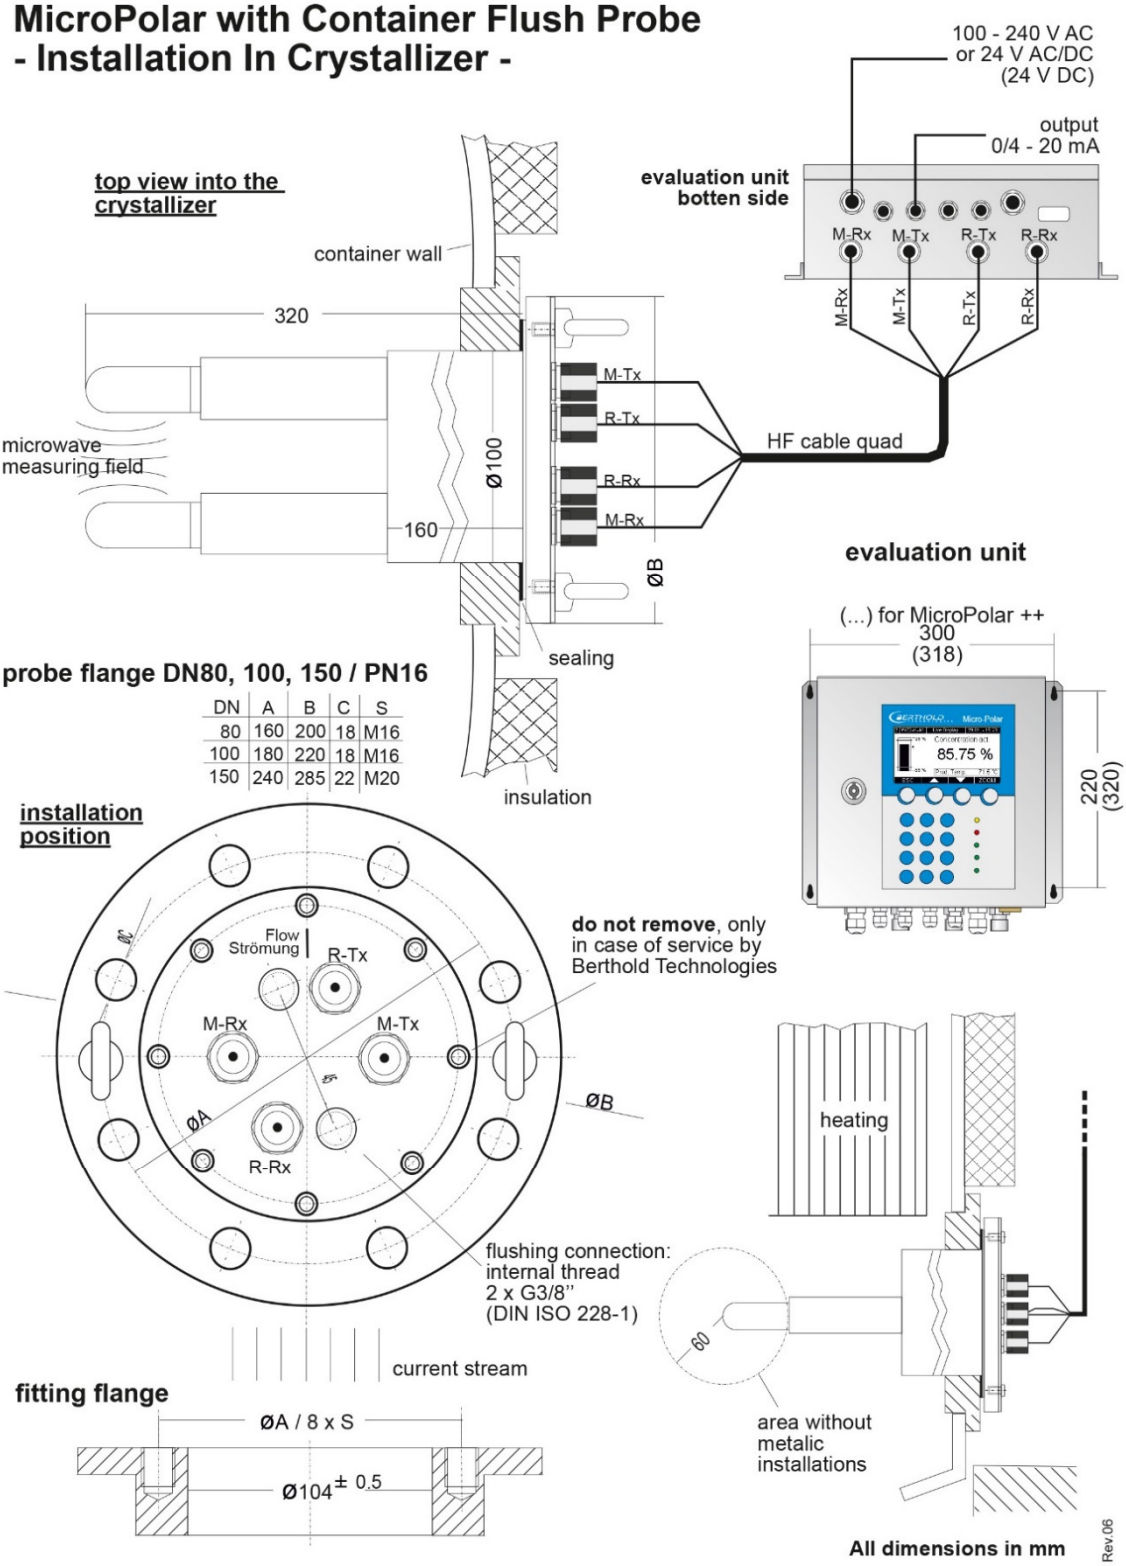

BERTHOLD TECHNOLOGIES GmbH & Co. KG . P.O. Box 100 163 . 75312 Bad Wildbad, Germany
Phone +49 7081 177-0 . Fax +49 7081 177-100 . industry@Berthold.com
www.Berthold.com

Index

A

Accuracy · 55
Adapter flange · 38
ASA flange adapter · 60

B

Battery · 52
Bending radius · 31

C

Cable installation · 41
Cable length · 31
Calculation of measured values · 18
CE mark · 13
Certificates · 67
Clamp connector · 24
Compatible with foodstuffs · 27
Components · 20
Connect PT100 · 44
Connecting container probes · 43
Connecting flow cells · 42
Connector strip · 45
Container probe · 27
Container probe installation · 37

D

Data format RS232 · 65
Data transfer rate · 47
Digital outputs · 48
Dimensional drawing housing EVU · 79
Distance to metal · 37

E

EC Declaration of Conformity · 67
Evaluation unit · 21
EVU · 15

F

Factory setting · 15
Fitting flange · 37
Flat gasket · 37
Flow cell · 24
Flow cell installation · 35
Flush probe · 15, 29
Flushing parameters · 38
Format RS232 · 65
Frequency license · 12, 13, 70
Fuses · 53

G

Gas inclusions · 14, 36

H

HF cable Quad · 31
High-frequency cable · 31

I

Incrustation · 29
Installation depth · 37
Installation Sheets · 107
Installation situation in pipelines · 100, 106
Instrument cleaning · 52

L

LED's · 23, 48

M

Mains fuses · 53
Measurement assembly on a container · 34
Measurement assembly on a pipeline · 33

O

Overview container probes · 62
Overview flow cells · 59
Overview sealing washers · 62

P

Pipeline pressure · 36
Power radiation · 14
Power supply · 45
Principle of measurement · 17

R

Recycling passport · 49
Relay · 48
RS232 interface · 47

S

Safety summary · 7
Salt content · 14
Service instructions · 49
Solid cable · 31
Spacer rail · 40
Symbols · 7

T

Technical data · 55
Technical data sensors · 58
Technical drawings · 79
Temperature compensation · 19
Threaded connector · 24
Tip · 19
Transmission power · 55
Transport · 35

V

Vertical riser · 36

W

Warning · 7
Wear parts · 50
Wiring diagram · 81

Notes

Notes

Concentration Meters
MicroPolar Brix (++)
LB 565

User's Guide
Software Manual
39531BA2

Rev. Nr.: 07, 03/2018

The units supplied should not be repaired by anyone other than Berthold Service engineers or technicians by Berthold.

In case of operation trouble, please address to our central service department (address see below).

The complete user's guide consists of the hardware manual and the software manual.

The **hardware manual** comprises the

- component description
- assembly instructions
- electrical installation description
- technical data
- certificates
- dimensional drawings

The **software manual** comprises the description of the

- operation
- software functions
- calibration
- error messages

The present manual is the software description.

Subject to changes without prior notice.

BERTHOLD TECHNOLOGIES GmbH & Co. KG
Calmbacher Str. 22 · D-75323 Bad Wildbad

Switchboard:	Service:
Phone +49 7081 177 0	Phone +49 7081 177 111
Fax +49 7081 177 100	Fax +79 7081 177 339
industry@Berthold.com	Service@Berthold.com
www.Berthold.com	

Table of Contents

Page

Chapter 1. Safety Summary **7**

Chapter 2. Communication with MicroPolar Brix **9**

Chapter 3. Getting Started **11**

3.1 Quick Guide Evaporative Crystallization 11
3.2 Getting Started Guide 13

Chapter 4. Software Functions **15**

4.1 Information on the Menu Structure 15
4.2 Menu Structure 16
4.2.1 Start Menu 18
4.2.2 Diagnostic 18
4.2.3 Setup 20
4.2.4 Access Level 21
4.2.5 Language 21
4.2.6 Configuration 22
4.2.7 General Data 23
4.2.8 Measurement 23
4.2.9 Plausibility 24
4.2.10 Phase Measurement 25
4.2.11 Pause Detection 26
4.2.12 Calibration 28
4.2.13 System Adjust 28
4.2.14 Calibrate Concentration 29
4.2.15 Sample No. 30
4.2.16 Sample Data (expanded) 31
4.2.17 Advanced 31
4.2.18 Calibration 32
4.2.19 Input / Output 33
4.2.20 Current Output 33
4.2.21 Current Out 1 34
4.2.22 Current Out 2 35
4.2.23 Current Input 35
4.2.24 Current In 1 35
4.2.25 Current In 2 36
4.2.26 PT100 36
4.2.27 Digital Output 36
4.2.28 Digital Input 37
4.2.29 Service 38
4.3 Trend Display 40

Chapter 5. Configuration **41**

5.1 Configuration Setup 41
5.1.1 General Data 41
5.1.2 Measurement 42
5.1.3 Plausibility 42
5.1.4 Microwave 43
5.1.5 Units 43
5.1.6 Marker 44
5.2 Start Calibration Coefficients 45
5.3 Configure Plausibility 46

Chapter 6. Calibration **47**
6.1 System Adjust 47
6.2 Start-up of MicroPolar Brix ++ 49
6.3 Sampling 50
6.3.1 Entering the Lab Values 52
6.4 Calibration 53

Chapter 7. Calibration and Advanced **55**
7.1 Plausibility | Configuring Phi/Att Ratio 55
7.1.1 Phi/att Ratio 55
7.1.2 Process Recording 56
7.2 Adjusting the Calibration 58
7.3 Output of the Start-up Protocol 60
7.4 Calibration 61
7.4.1 Calibration with One Concentration 61
7.4.2 Calibration with Two Concentrations 64
7.4.3 Calibration with Split Value 68
7.5 Typical Calibration Coefficients/Start Values 70

Chapter 8. Password **71**
8.1 Password Forgotten 72

Chapter 9. Error Lists and Device States **73**
9.1 Power failures 73
9.2 Temperature errors 73
9.3 Hardware errors 74
9.4 Sensor errors 75
9.5 Analog input range errors 75
9.6 Measurement range errors 76
9.7 Auxiliary measurement errors 76
9.8 Analog output range errors 77
9.9 Watchdog error 77
9.10 System errors 77
9.11 Density errors 77
9.12 Input Error 78
9.13 Device States 79

Chapter 10. Start-up Protocol **81**
10.1 Example of Start-up Protocol 84
10.2 Sampling 89

Chapter 1. **Safety Summary**

Please observe all safety instructions in the *Hardware Manual*, especially those in *chapter 1. Safety Summary*.

NOTICE

Parameter settings
Never change the installation and the parameter settings without a full knowledge of these operating instructions, as well as a full knowledge of the behavior of the connected controller and the possible influence on the operating process to be controlled.

Chapter 2. **Communication with MicroPolar Brix**

The communication with MicroPolar Brix and MicroPolar Brix ++ is carried out via 4 softkey buttons. The function of the individual buttons changes relative to the position in the menu. Values and texts are entered via an alphanumeric keyboard. The instrument status is indicated by 5 LEDs.

TIP

Click on the help button ? in the display footer to view useful information.

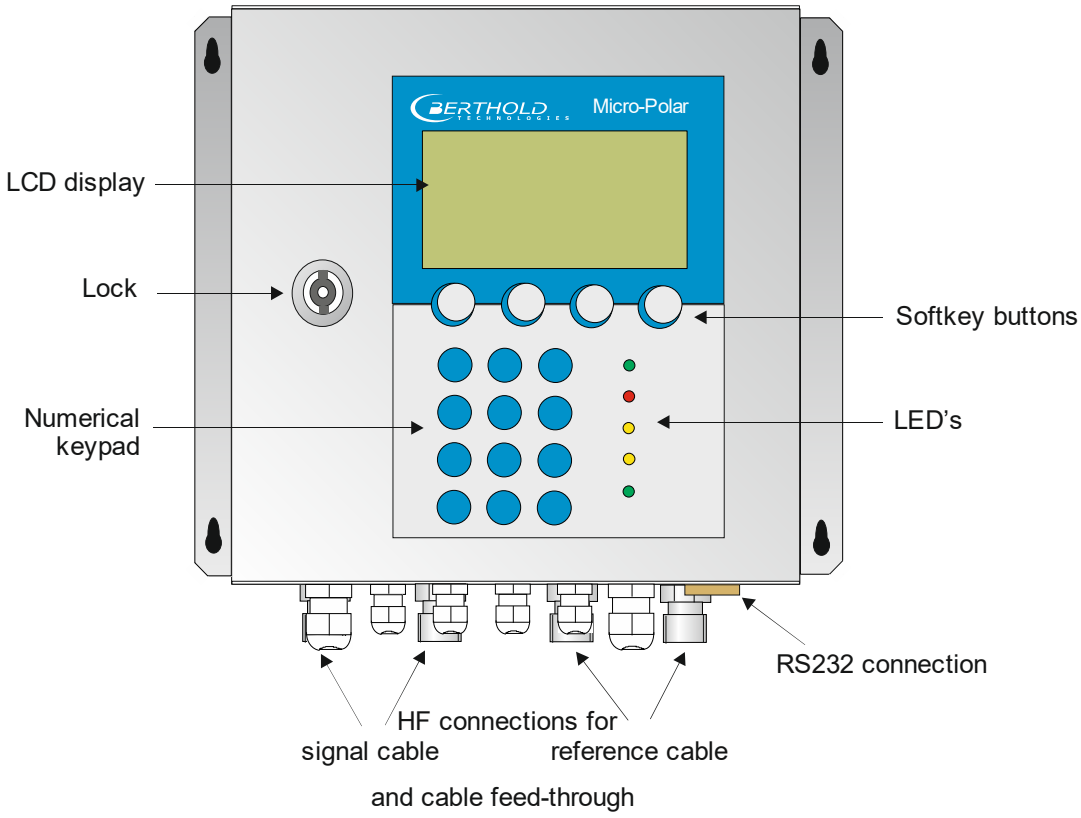

Chapter 3. **Getting Started**

To get started, please carry out the steps described below one after the other.
Please read *chapter 6.2 Start-up of MicroPolar Brix ++* before you take the high dynamics version into operation.

Chapter 4. Software Functions describes all software functions and also serves as a reference guide.

3.1 Quick Guide Evaporative Crystallization

Comment: In the evaporative crystallization, the product temperature is not usually compensated; therefore, we will not discuss it at this point.

Prerequisite:

- All system components have been installed properly as described in the operating manual.
- The device was turn on for at least 45 minutes (warm-up).
- The evaluation unit is in the factory setting mode, i.e. all the settings correspond to the state as supplied from the factory or after a general reset.

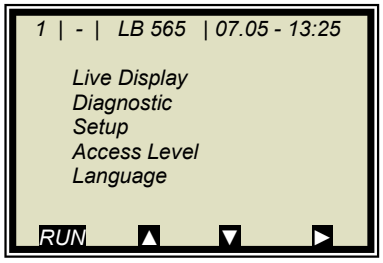

From the main menu (see figure on the left) you have access to all other menus.

1. Step: Configuring I/O's

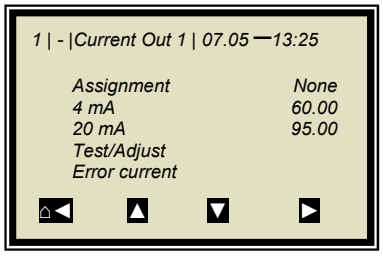

Configure the **current output** for the measuring signal (Brix/concentration). Go to
| Setup | Input / Output | Current output | Current Out 1 | (see figure on the left) and enter the limit values for 4 and 20 mA.

If a PT100 is connected, the **PT100 input** should be enabled.

Go to the menu | Setup | Input / Output | PT100 |.

2. Step: Performing system calibration

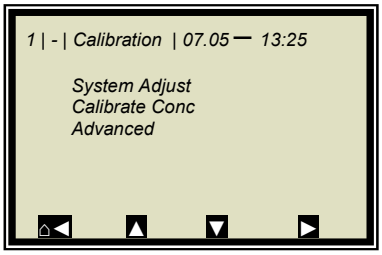

Perform the **system calibration (reference measurement)** in the solution phase, just before the inoculation point. Go to | Setup | Calibration | System Adjust | Adjust | (see figure on the left) and perform the calibration.

Start measurement now by pressing RUN in the main menu.

If no laboratory is available for sampling, the concentration value at the time of system calibration can alternatively be entered as calibration coefficient C (e.g. determined by means of a hand-held refractometer).

3. Step: Sampling

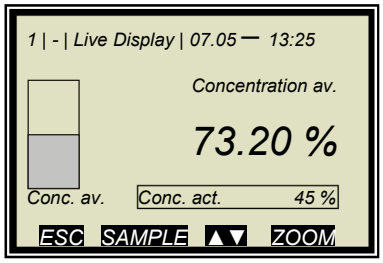

Take as many **samples** over the entire crystallization process.
Push "SAMPLE" on the Live Display (see figure on the left) and save the sampling after a few seconds, see display message.

4. Step: Calibration

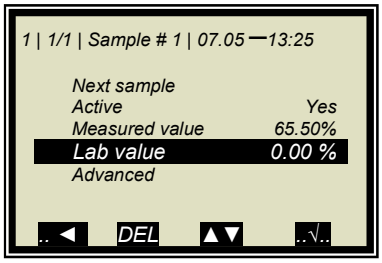

Once the lab has determined the concentration of the sample, you have to enter the **laboratory values** in the evaluation unit. Go to | Setup | Calibration | Calibrate Conc | Sampling | (see figure on the left) and enter the lab value under "Lab Value". Go to the next sample with "Next".

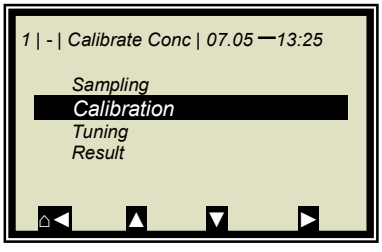

In the last step, the calibration parameters must be calculated, which is done automatically. Start the calculation in the menu
| Setup | Calibration | Calibrate Conc | Calibration | Start calibration | (see figure on the left). The calibration result can then be viewed on the | View | menu. If samples are implausible, disable these samples in the sample table and perform the automatic calculation once more.

3.2 Getting Started Guide

1. Step
Configure the analog inputs as needed: Current inputs 1, 2 and PT100. *See chapter 4.2.19 Input / Output.*

TIP
All analog inputs and outputs have already been set in the factory. Therefore, no adjustment work is required during commissioning.

2. Step
Review and edit the software parameters of the application. Some parameters have already been set in the factory. Carry out the steps described in *chapter 5. Configuration*.

3. Step
Carry out the calibration with sampling, *chapter 6. Calibration*.

Temperature compensation is required only if the phase/attenuation will be clearly influenced by the product temperature; this is dependent on the product and water content.

4. Step
Configure the current outputs, digital in- and outputs as needed.

Chapter 4. **Software Functions**

4.1 Information on the Menu Structure

The menu structure on the following pages provides an overview of all functions of the LB 565. Using the **page numbers** indicated you can look up the functions of the depicted windows.

You have to enter a password to change from the **Read only** level to **User Mode**. The **Service level** is not accessible due to licensing regulations.

4.2 Menu Structure

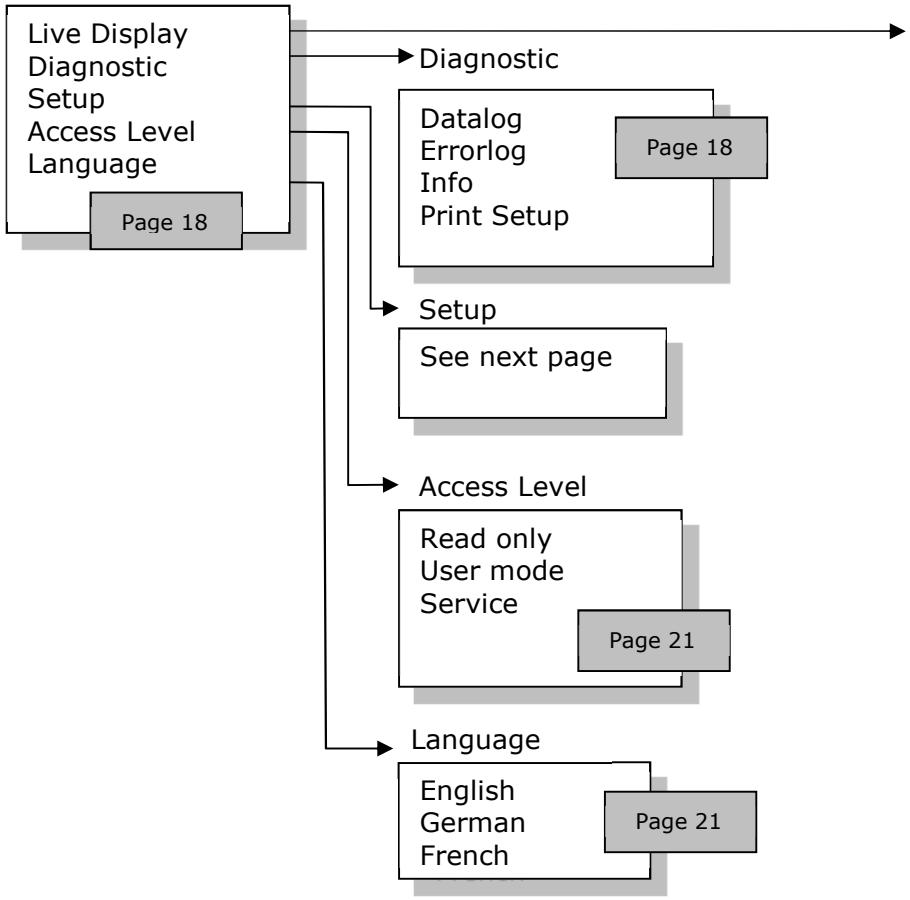

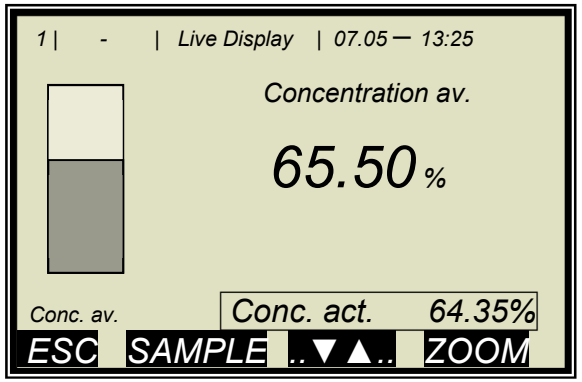

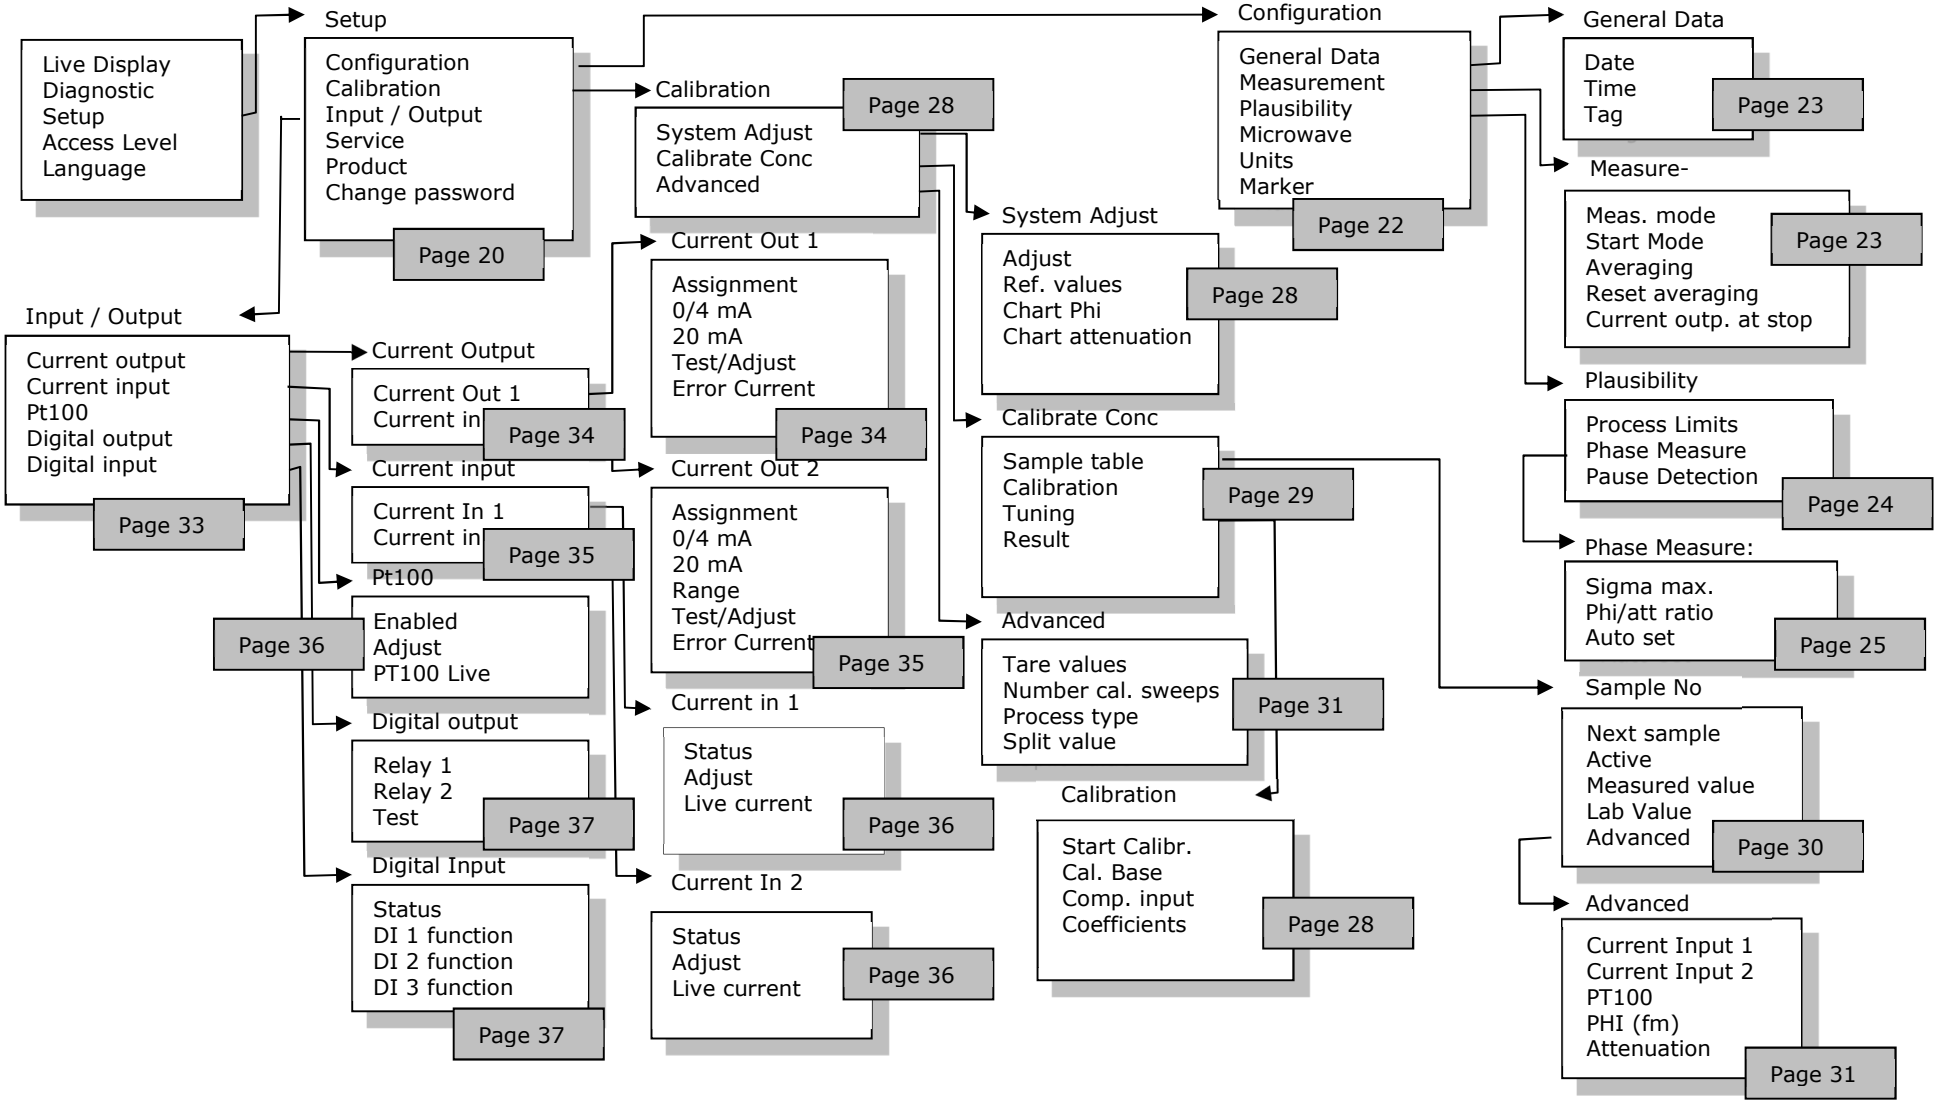
Live Display
Diagnostic
Setup
Access Level
Language
Setup
Configuration
Calibration
Input / Output
Service
Product
Change password
Page 20
Configuration
General Data
Measurement
Plausibility
Microwave
Units
Marker
Page 22
General Data
Date
Time
Tag
Page 23
Calibration
Page 28
System Adjust
Calibrate Conc
Advanced
Measure-
Meas. mode
Start Mode
Averaging
Reset averaging
Current outp. at stop
Page 23
System Adjust
Adjust
Ref. values
Chart Phi
Chart attenuation
Page 28
Input / Output
Current output
Current input
Pt100
Digital output
Digital input
Page 33
Current Output
Current Out 1
Current in
Page 34
Current Out 1
Assignment
0/4 mA
20 mA
Test/Adjust
Error Current
Page 34
Plausibility
Process Limits
Phase Measure
Pause Detection
Page 24
Calibrate Conc
Sample table
Calibration
Tuning
Result
Page 29
Current input
Current In 1
Current in
Page 35
Current Out 2
Assignment
0/4 mA
20 mA
Range
Test/Adjust
Error Current
Page 35
Phase Measure:
Sigma max.
Phi/att ratio
Auto set
Page 25
Pt100
Enabled
Adjust
PT100 Live
Page 36
Advanced
Tare values
Number cal. sweeps
Process type
Split value
Page 31
Sample No
Next sample
Active
Measured value
Lab Value
Advanced
Page 30
Digital output
Relay 1
Relay 2
Test
Page 37
Current in 1
Status
Adjust
Live current
Page 36
Calibration
Start Calibr.
Cal. Base
Comp. input
Coefficients
Page 28
Digital Input
Status
DI 1 function
DI 2 function
DI 3 function
Page 37
Current In 2
Status
Adjust
Live current
Page 36
Advanced
Current Input 1
Current Input 2
PT100
PHI (fm)
Attenuation
Page 31

4.2.1 Start Menu

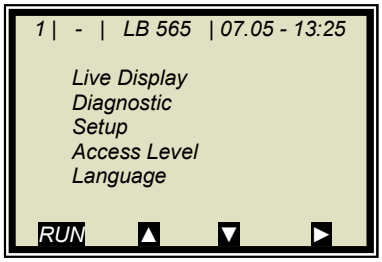

Live display:
Shows the live display.

Diagnostic:
This menu item contains the submenu items data logger, error log, device information and print setup.

Setup:
All necessary inputs for operation of the measuring system can be entered here.

Access level:
Select the access level.
Areas protected by passwords can be unlocked.

Language:
Select the dialog language.

4.2.2 Diagnostic

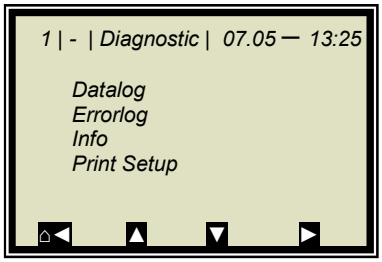

Datalog:
Datalog records the data corresponding to the contents of the serial data output RS232 and RS485 (see *Hardware Manual, chapter 6.4*).
All measured data of a measurement (sweep) are averaged over the averaging time (see below) and stored. This time is dependent on the selected log time. The contents of the datalog can be displayed on the live display, see *chapter 4.3 Trend Display*. Output as a text file is also possible by using RS232 and RS485, or the Memory Tool (optional accessory).

- Log type — Disable
single
continuous
stop at error
- Log time — Logging period
15 minutes to 3 days
- Restart log — Clears the datalog and starts with the above setting
- Averaging time — Obtained from log time
- Print log — Printout of tables, output via RS232 and RS485, format see *chapter 6.4 Hardware Manual*

Change datalog settings:
If you change the log type from any to "single", the datalog will be cleared and you start again with the current setting.
If you change all other log types and log times, the datalog will not be cleared and you continue with the new settings.

Behavior with stopped measurement:
If the measurement is stopped for some time during the datalog, then the measurement pause will be interpreted as log time in the log type "single". For all other log types, the measurement pause will be added to the log time.

Error log:
Shows the logged error The last 20 error messages will be stored with date and time.

Info:
- Tag :...
- Device type : LB 565
- Supplier : Berthold Technologies
- Manufacturer : Berthold Technologies
- Device no. : ...
- Production no. : ...-...
- Software Ver. : V...
- SW rev. date : ...

Print Setup:
Printout of the start-up protocol via RS232 and RS485.
Format, contents and example see *chapter 10. Start-up Protocol.*

4.2.3 Setup

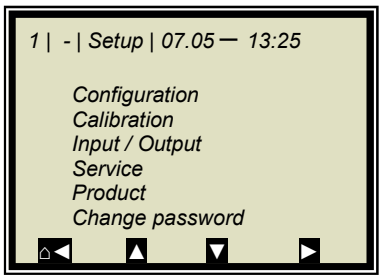

Configuration:

Setup of

- General data
- Measurement-specific data
- Plausibility data
- Microwave data
- Units
- Marker

Calibration:

- System Adjust
- Calibrate Conc
- Advanced

Input / Output:

- Current output
- Current input
- PT100
- Digital output
- Digital input

Service:

- Factory Setting
- General Reset
- Memory Tool (operation of the memory tool, optional accessory)
- Data Output (via RS232 and RS485, data contents can be selected)

Product:

Product selection (1-4); if you select another product, the product-specific data will be loaded: outputs, inputs and calibration.

When you select the products 2 to 4 for the first time, all settings and contents (e.g. system calibration, sampling table, datalog and calibration) of the current product will be copied to the new product.

Change password:

The password for the User Mode access level can be changed here.

For more information see *chapter 8. Password*.

4.2.4 Access Level

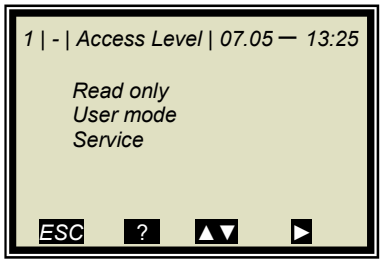

Read only:

In this mode, the measuring system can be protected against unauthorized access. You can exit this level only by entering a password. The measuring system cannot be started and stopped. You can go to Diagnostic and to Access Level only in the main menu.

User Mode:

- The user mode is the default mode and provides access to all user-relevant parameters.
- On the *Read only* level you have to enter a password.
- The password can be changed.

Service:

- This level is reserved for the service personnel.

4.2.5 Language

Language:

- Select the dialog language

4.2.6 Configuration

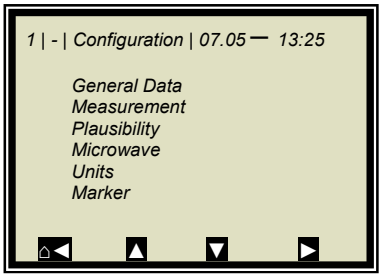

General Data:

- Enter date, time and tag

Measurement:

- Meas. Mode (batch/continuous)
- Start Mode (keyboard/external)
- Averaging (number of measured values used for averaging)
- Reset averaging (yes/no)
- Current output at stop

For more information please see *chapter 4.2.8 Measurement*

Plausibility:

- The process limits define the permissible range within which the actual concentration must be.
- The phase measurement is subject to a plausibility analysis, which can be set here.
- Enable and define the pause function

For more information please see *chapter 4.2.9 Plausibility*

Microwave:

Cable (enter the reference and signal cable length) For example, for 4 m HF cable quad, you have to enter 8 m for both lengths.

Units:

Depending on the configuration, different units can be selected for concentrations, current inputs and temperature.
For the concentration (1 and 2) you can select:
none, specific, %, %TS, °BX, g/L, g/cm^3, °Be

For current input 1 and 2 you can select:
none, specific, °C, °F

For the PT100 input you can select:
none, °C, °F

Markers:

Enter a value and a name (up to 5 characters) for the marker here. The presentation takes place in the live display and refers to the bar chart. To disable the marker, select a marker value outside of the chart limits or the current output limits.

4.2.7 General Data

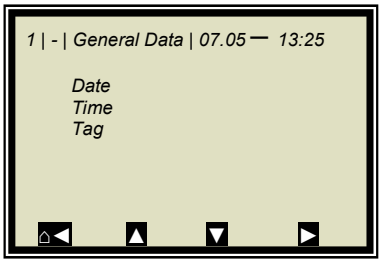

Date:
- Enter the current date

Time:
- Enter the current time

Tag:
- Enter the name of the measuring point. The tag (max. 8 characters) is displayed in the header on the display.

4.2.8 Measurement

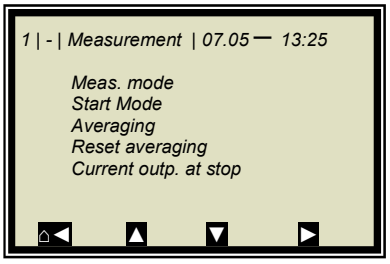

Meas. Mode:
Select continuous or batch. In Batch mode, an average value is calculated between start and stop. In Continuous mode, a moving averaging is calculated depending on the adjusted averaging number.

Start Mode:
The measurement device can be started or stopped via external terminals (digital input) or via keyboard.

Averaging:
Enter the number of averaging processes. This number indicates over how many measurements the concentration value is to be averaged (moving average). This is true only for the measuring mode Continuous.

Reset Averaging:
Reset averaging (yes/no) This refers to Batch and Continuous.

Current output at stop:
Select "0/4 mA" or "Hold". The selection defines how the current outputs behave with stopped measurement. This is true only for the measuring mode Continuous.

4.2.9 Plausibility

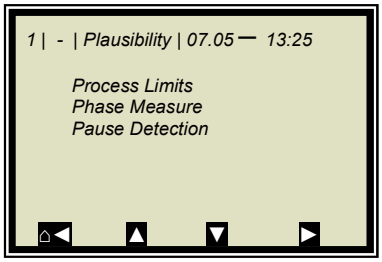

Process Limits:

Enter a permissible measuring range exceeding. If the concentration exceeds the range, the concentration average is put on hold and an error message is displayed (error state). The process limits are independent of the current output limits.

Phase Measure:

The phase is subject to a plausibility analysis. For more information please see *chapter 2.2.10 Phase Measurement*.

Pause Detection:

Can be enabled or disabled. Switching variable is the attenuation; if the entered min. attenuation is not reached, the evaluation unit switches to the pause mode:

- Current output drops to the lower current output limit (0/4 mA)
- Message on display
- RUN LED is flashing

For details regarding the pause function see *chapter 4.2.11 Pause Detection.*

4.2.10 Phase Measurement

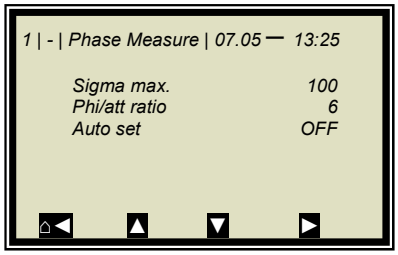

Sigma max.:

Here you set the maximum sigma of the regression Phase vs. Frequency.
During normal measurement operation, sigma lies between 0 and 100.
Default: Sigma = 100.
With Sigma = 0 the plausibility is turned off.

Phi/att ratio:

The correlation between Phase and Attenuation is another plausibility criterion. Enter a fixed ratio value Phi/att. If you do not know it, you have to record it once, see description below "Auto set". The exact procedure is described in *chapter 7.1.*

Phi/att ratios, see *chapter 5.3 Configuring Plausibility*.

Auto set

The automatic measurement Phi/att ratio is turned on and off here. For more information about the function, *see* chapter *7.1.*

4.2.11 Pause Detection

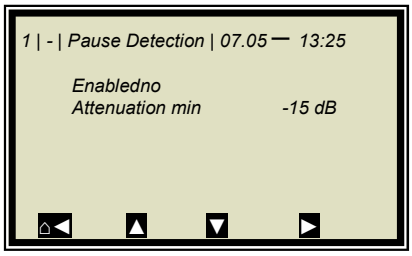

Enabled:

The pause detection is turned on and off. Consider the measuring conditions for using the pause detection; see below.

Attenuation min:

Enter the minimum attenuation, when falling below that value the measurement goes into pause mode.

Requirements and description:

The pause detection function is a software feature for pause detection between two sequential discontinuous crystallization processes. This is of interest because during the cleaning phase, the sensor indicates the lower current output value. The sensor should show the current dry substance content (Brix content) after product entry only after restart of a crystallization process.

Prerequisite: Phase calibration (corresponds to the default setting).

For example: typical signal pattern of two crystallization processes:

Current output [mA]

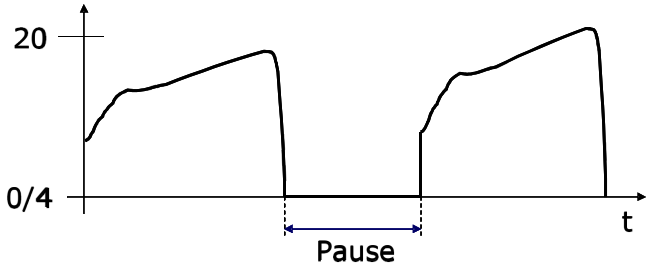

Required software setting:

On the menu SETUP **|** CONFIGURATION **|** PLAUSIBILITY, enter the following values:

- Under PROCESS LIMITS:
  Min. Conc. and Max. Conc.
  Enter the process limits: ± 5%TS to the real process limits. Example: real process limits 70-90% TS, therefore enter 65 to 95% TS.
- Under PAUSE DETECTION:
  The pause function can be enabled here.
  Switching variable is the attenuation; if the entered minimum attenuation is not reached, then the evaluation unit switches to the pause mode.

Adjust these settings as necessary to the conditions for "Quitting the pause mode", see below.

Determination of minimum attenuation as a switching variable:

For this, the attenuation process must be observed at the end of a crystallization process, including cleaning phase. You may use the datalog *(see* chapter *4.2.2 Diagnostic)* if you need any help.

For example, typical attenuation curve:

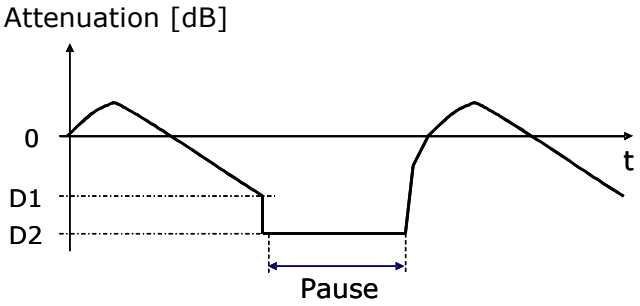

D1 = smallest attenuation value in the product
D2 = attenuation value for an empty container
D (min) = switching value = average attenuation between D1 and D2

Typical values (beet sugar):
D1: -15 to -10 dB
D2: -25 to -20 dB
D (min): -20 to -15 dB

Quitting the pause mode (switch to measurement mode):

Two conditions have to be met before changing the mode:

1. The attenuation has to be higher than the attenuation threshold.
2. The recent concentration (Conc act.) has to be in the following range:
   Conc act. > min. process limit
   Conc act. < min. process limit – A·factor·146

Min process limit: See menu PLAUSIBILITY.
A: Calibration coefficient of the phase.
Factor: From the adjustment, see *chapter 4.2.14 Calibrate Conc* (default = 1).

4.2.12 Calibration

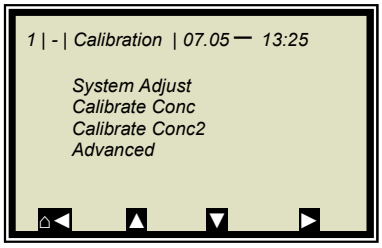

System Adjust:
System calibration is started here.
For details see *chapter 4.2.13 System Adjust*.

Calibrate Conc:
Opens the calibration menu of concentration 1.

Calibrate Conc2:
Opens the calibration menu of concentration 2.
The second concentration is displayed only if a second concentration is selected in the menu | ADVANCED | PROCESS TYPE |.

Advanced:
Here you set the tare values, the number of sweeps when recording samples, the process type and the split value. For more details see *chapter 4.2.17 Advanced*.

4.2.13 System Adjust

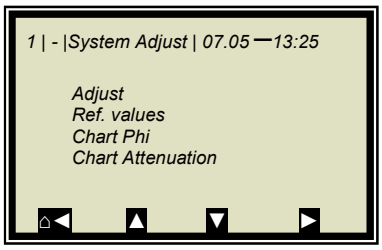

Adjust:
System adjustment is started. Phase and attenuation are set to zero, and thus, for example, all cable parameters are considered. This adjustment also forms the reference for the measurement.
The system adjustment (= reference measurement) must be carried out once.

Ref. values:
Upon completion of the reference measurement, the reference values for phase, attenuation, slope and Sigma can be output.

Chart Phi:
Shows the phase versus the frequency.

Chart Atten.:
Shows the attenuation versus the frequency.

A system adjustment will not delete the datalog (see *chapter 4.2.2 Diagnostic*).

4.2.14 Calibrate Concentration

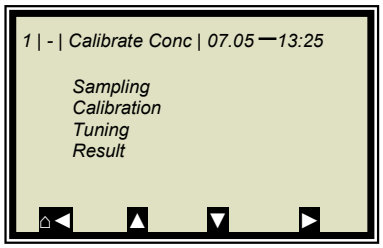

Sampling:
Shows all measured samples and entered lab values.

Calibration:
Here
- you select the calibration parameters and the temperature compensation
- the calibration coefficients are calculated automatically
- the calibration coefficients are displayed

For more information see *chapter 4.2.18 Calibration*.

Tuning:
Subsequent correction of the reading is possible by entering a factor and an offset.
Calculation is carried out according to the following formula:

Eq. 4-1:

Corrected display = Display * Factor + Offset

View:
Presentation of calibration curve, display of correlation and coefficients.

4.2.15 Sample No.

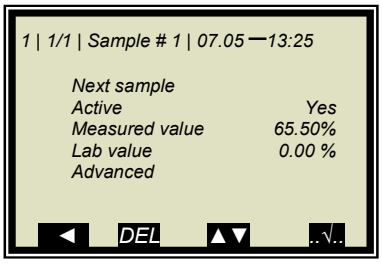

The header includes the following information (from left to right):

- Product no.
- Current table position / Total number of entries
- Sample no. of current table position
- Date and time of sampling

Up to 30 sample entries are possible. The sample can be assigned to the lab value either via the sample no. or through data/time. The sample no. is assigned on a continuous basis. If a sample is deleted, the sample no. will not be assigned a second time. Up to 999 sample numbers are available. Only if all numbers have been assigned, you may assign a number for the second time; you will be alerted accordingly by a message on the display.

Next sample:
Continue with the next sample.

Active:
You can choose if this sample should be taken into account in the calibration.

Measured value:
Display of the measured values, calculated with the actual coefficient.

Lab value:
Entry position for the lab value.

Advanced:
Switches to the next data page.

Delete:
Briefly push the softkey to delete the indicated sample entry. Push this key for a longer time to delete all sample entries.

4.2.16 Sample Data (expanded)

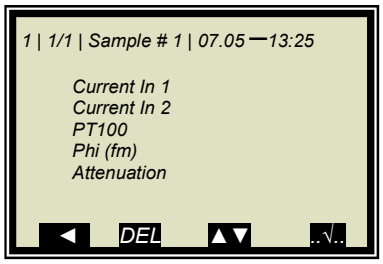

Current In 1:
Editable display of the first compensation input.

Current In 2:
Editable display of the second compensation input.

PT100:
Editable display of the PT100 input.

Phi (fm):
Not editable display of the measured phase.

Attenuation:
Not editable display of the measured attenuation.

4.2.17 Advanced

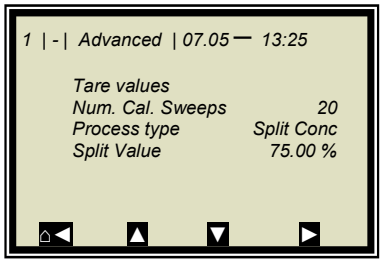

Tare values:
Option to enter tare values for phase and attenuation. The tare values are added to the phase and/or the attenuation prior to calibration. The calculation is carried out as follows:

Eq. 4-2 and 4-3

Phase = $Phase_{meas}$ - Phi Tara
Attenuation = $Attenuation_{meas}$ - Attenuation Tare

Number of Calibration Sweeps:
Freely adjustable number of sweeps over which a calibration point (in the course of automatic sample measurement) will be averaged.

Process Type:
Select the operation mode:
- one concentration [1 measuring range]
- two concentrations [2 measuring ranges]
- split concentration [1 measuring range with switching point (split value) for coefficient switchover].

Split Value:
Setting of the switching point on a value basis.

4.2.18 Calibration

Calibration is performed using the following formula:

Eq. 4-4

Measured value = A · Phase + B · Attenuation + C
+ D · PT100 + E · In1 + F · In2

where:

Meas. value	Concentration / Moisture / Dry mass / Density
A	Phase coefficient
B	Attenuation coefficient
C	Offset
D	Compensation coefficient for PT100 input
E	Compensation coefficient for current input 1
F	Compensation coefficient for current input 2

The coefficients can be entered manually or calculated automatically from the entries of the sample table.

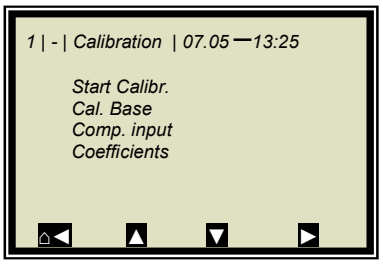

Start Calibr.

Starts the calibration using the parameters set and the coefficients are calculated automatically from the entries of the sample table.

Cal. Base

Selection of microwave signals, which are taken into account for the calibration. The following parameters can be set:

- Phase
- Attenuation
- Phase and attenuation

Default: Phase

Comp. input

Here the analog inputs (PT100, current input 1 and 2) required for compensation can be selected. Depending on the enabled analog inputs, the following options can be selected:

- None
- PT100
- PT100 + In1
- PT100 + In1 + In2
- PT100 + In2
- In1
- In2
- In1 + In2

Coefficients:
Here all coefficients can be entered directly, e.g. start coefficient.

The automatically calculated coefficients are also stored here. Coefficients that are not used are set to zero.

4.2.19 Input / Output

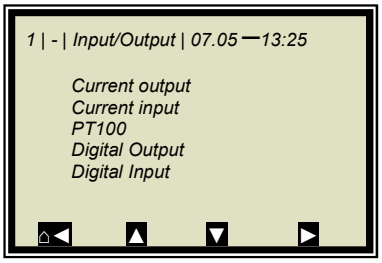

Current Output:
Both outputs can be adjusted, assigned and set up on the selected level.

Current Input:
Activation level of current input, calibration and display of the live current signal.

PT100:
Here you can enable and adjust a connected PT100. Display of the actual temperature signal.

Digital Output:
Allocation of relays 1 and 2 and test function.

Digital Input:
Status control and assignment of the digital inputs.

4.2.20 Current Output

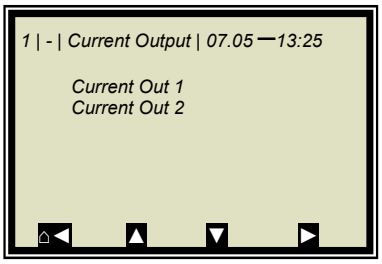

IMPORTANT
If a measurement is running, enabling a current input which is not used or not adjusted may cause an error.

4.2.21 Current Out 1

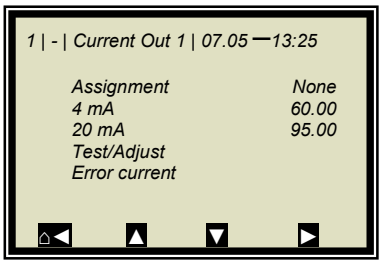

Assignment:

The following signals can be assigned to the current output:

- None
- Concentration
- Concentration 2 (if active)
- Current in 1 or 2 (if active)
- PT100 (if active)

4 mA:

Display value assigned to the 4 mA value.

20 mA:

Display value assigned to the 20 mA value.

TIP

Current output 1 only 4 – 20mA possible

If the current output limit is exceeded, the measurement switches to the warning state, *see chapter* 9.4 *Device States.*

Test/Adjust:

Current test, calibration and display of live current.

IMPORTANT

The measurement should be stopped for test function.

To check the current loop and possibly connected remote displays, you can set a current between 4 and 20 mA via the test function. If you quit the test function, the system automatically switches back to the live current.

Error current:

If the measurement switches to the fault state, a fault current is output via the current output; this can be set here.

- 22 mA
- 3.5mA
- Hold
- Value (selectable)

4.2.22 Current Out 2

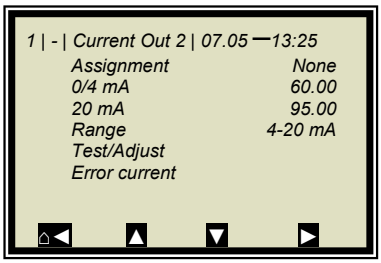

All functions same as current output 1

TIP
Current output 2 can either be set to 0/4 or to 20 mA.

Range:
Change the current output
- 0 – 20mA
- 4 – 20mA

4.2.23 Current Input

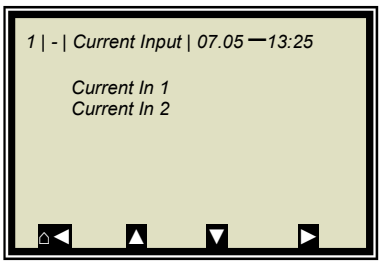

Current In 1:
When selected, change to the activation and calibration menu.

Current In 2:
As described above.

4.2.24 Current In 1

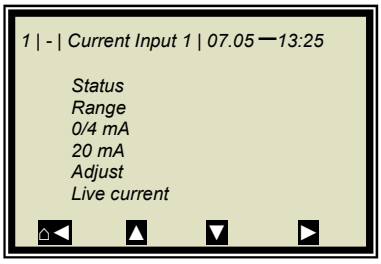

Status:
Select yes/no to enable or disable the current input.

Range:
Change the current output
- 0 – 20mA
- 4 – 20mA

0/4 mA:
Display value assigned to 0/4 mA value.

20 mA:
Display value assigned to the 20 mA value.

Adjust:
Follow the instructions on the display.

Live current:
Display of the live current signal.

4.2.25 Current In 2

Settings correspond to current input 1.

4.2.26 PT100

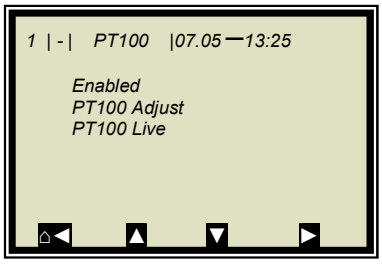

Enabled:
If a PT100 is connected, the input has to be enabled first.

IMPORTANT
If a measurement is running, enabling a PT100 input which is not used or not adjusted may cause an error.

PT100 Adjust:
You need a 100 Ohm and a 138.5 Ohm resistance. Follow the instructions on the display.

PT100 Live:
Display of the live temperature.

Set and enabled same as input 1.

4.2.27 Digital Output

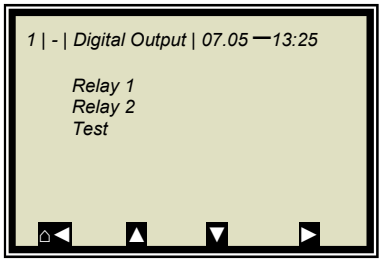

The meter has two relays. Relay 1 is linked with LED signal 1 and relay 2 with LED signal 2.

Relay 1:
Different functions can be assigned to relay 1:

- None
- Error
- Hold
- No product
- Alarm min
- Alarm max

Function	Description
None	Relay and LED function disabled
Error	In case of error, relay and LED will be set.
Hold	If Hold function is enabled, relay and LED will be set.
No product	If Pause detection is enabled, this will be signaled via relay and LED.
Alarm min.	The relay switches if the value falls below the limit value to be set.
Alarm max.	The relay switches if the value exceeds the limit value to be set.

Relay 2:
Same assignments possible as above.

Test:
The switching status of the relays can be set here and checked at the respective terminals.

4.2.28 Digital Input

The meter has 3 digital inputs to which different functions can be assigned.

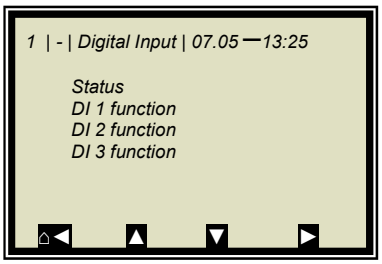

Status:
Shows the status of the input circuit
- open/closed

DI 1 Function
The following functions can be assigned to DI 1:
- None
- Start (external start)

DI 2 Function
The following functions can be assigned to DI 2:
- None
- Hold (averaging is stopped)
- Product (external product selection)

DI 3 Function
Assignments for DI 3:
- None
- Sample (external control of sampling)
- Product (external product selection)

For external start function, the start function has to be set to ***External*** in the ***Measurement*** menu window.

Hold means that averaging is stopped, but the measurement continues to run.

Sample means that sampling is started by closing the contact.

Product means that another product is selected by closing the contact (product 1 to 4).

TIP

If you select a product for the first time (product 2 to 4), all settings and contents of the current product will be copied to the new product, including:
- Configuration data
- System adjust
- Calibration data (including sampling table)
- Input/Output definitions

To switch over all 4 products, DI 3 also has to be set to product. Please take the terminal configuration from the table below.

Terminals	DI 2 13 / 25	DI 3 14 / 26
Product 1	open	open
Product 2	closed	open
Product 3	open	closed
Product 4	closed	closed

4.2.29 Service

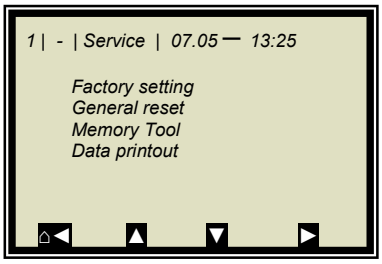

Factory setting and General reset:
See table on the next side.

Memory Tool:
Refers to the communication with the external memory tool (optional accessory). Data transfer takes place via the 9-pole SubD-connector on the bottom of the instrument.
- Save parameters: All instrument parameters for all products will be saved to the memory tool.
- Load parameters: All instrument parameters stored on the memory tool will be loaded onto the evaluation unit. All operating parameters in the evaluation unit will be deleted.
- Save datalog: The datalog will be saved to the memory tool.
- Save log: The start-up log will be saved to the memory tool.

NOTICE

The concentration average value is put on hold during communication with the memory tool. Thus, the measured value via current output is also put on hold!

Data printout:

All measured values are output for each measurement via the serial data interfaces RS232 and RS485. The output can be set as follows:

- None (disabled)
- Row (data transfer, see *Hardware Manual, chapter 6.4*)
- Table (microwave data for each frequency point)
- Row and table

"Row" is defaulted.

	Factory setting	General reset
Language selection	unchanged	unchanged
Access level	unchanged	default: User mode
Measurement	stopped	stopped
Password	unchanged	default: PASS1
Product selection	unchanged	all products deleted
Error log	not deleted	deleted
Data log	not deleted, default settings	deleted, default set-tings
System adjust	not deleted	deleted
Cable length	unchanged	default
Sampling	not deleted	deleted
TAG label	default	default
All parameters on menu: Measurement Plausibility Marker Units	default	default
Calibration coefficients	default	default
All settings for the analog and digital inputs and out-puts	default	default
Adjustment of the analog inputs and outputs	unchanged	unchanged
Comment:	affects only the cur-rent product	affects all products (P1 to P4)
-		

*Default: Default values, *see chapter 10.1 Example Start-up Protocol*

4.3 Trend Display

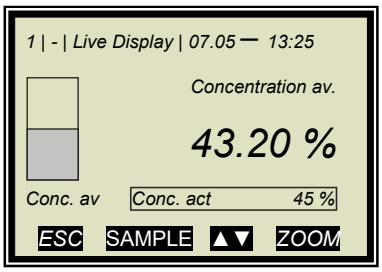

Push the ZOOM button to enlarge the measurement value which is surrounded by a frame.

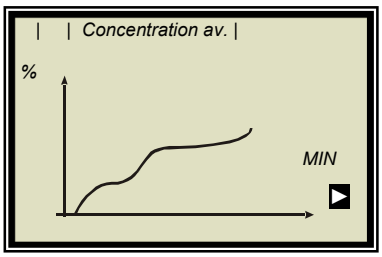

By pushing the ZOOM button for a longer time, the enlarged measurement value will be displayed as trend over the entire display.

The trend display corresponds to the contents of the datalog. The datalog has to be enabled for the trend display.

NOTICE

As long as the trend builds up, the measured value and/or the current output are put on hold!

Chapter 5. **Configuration**

Before doing any calibration work, you have to enable and configure the required analog inputs and check and, if necessary, correct the configuration parameters.

If the required inputs are not enabled, some menus are not displayed and a proper configuration and calibration is not possible under certain circumstances. The current outputs, digital outputs can be enabled and configured after the calibration.

The measuring system includes two separate floating current outputs.

5.1 Configuration Setup

Starting from the main menu, got to the display shown on the left via | SETUP |

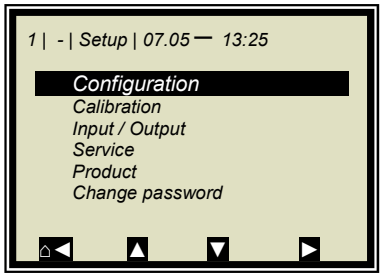

➢ CONFIGURATION

5.1.1 General Data

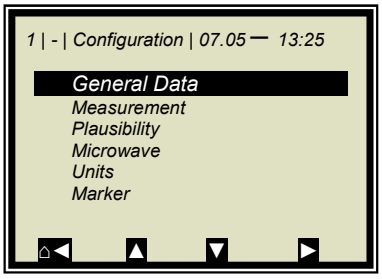

➢ GENERAL DATA

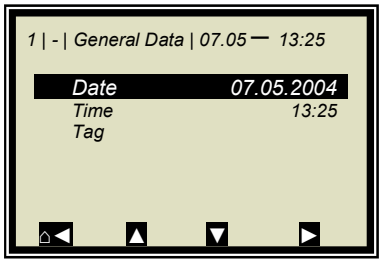

Example:
Select the respective entry, edit and store it.

- DATE

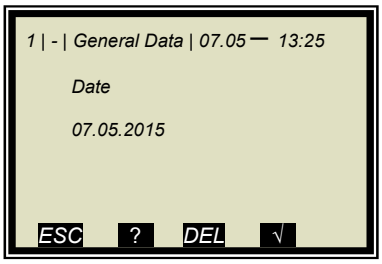

Push DEL to delete the entry and then enter the new date.
Push √ to confirm and store the changed date.

TIP
The colon for the time input (e.g. 13:25) is invoked by pushing the button [**.**].

5.1.2 Measurement

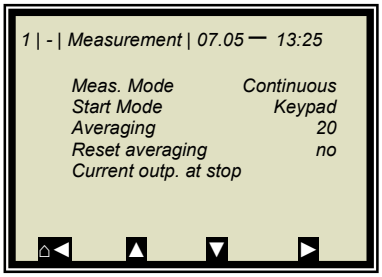

You have to check the settings on this display and adapt them to the measurement conditions.

Averaging over 20 measurements is a good choice as a rule.

5.1.3 Plausibility

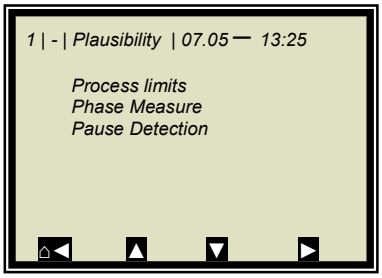

The **process limits** need to be adjusted. Allow exceeding of the measuring by ± 5% absolute.
Example: The measuring range is 65-95% TS. Enter 60-100% TS as process limit.

The process limits are independent of the current output limits.

For setup of the **phase measurement**, see *chapter 5.3 Configuring Plausibility*.

The **pause detection** is disabled by default. Take the pause detection into operation, when necessary, only when the measuring system was put into operation without errors. Refer to the description in *chapter 4.2.11 Pause Detection*.

5.1.4 Microwave

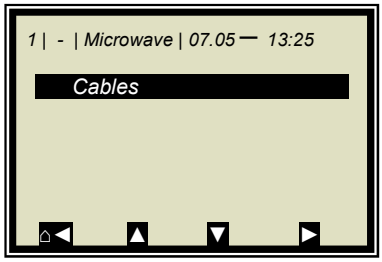

➢ CABLES

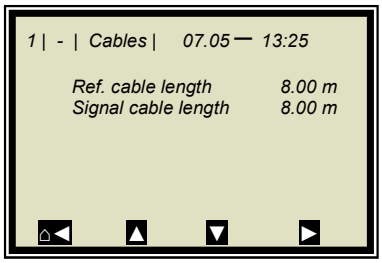

If the factory-set cable lengths do not match the actual geometry conditions, you have to correct the values.

Example: For a 4 m long HF quad cable, enter 8 m for the reference and signal cable length. The input value corresponds to twice the quad cable length.

5.1.5 Units

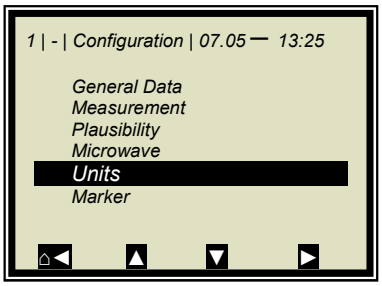

Set the units to the desired dimension.

➢ UNITS

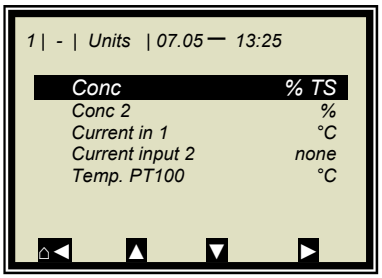

The units of the concentrations (conc 1 and 2) and those of the enabled analog inputs can be selected.

➢ CONC / CONC 2

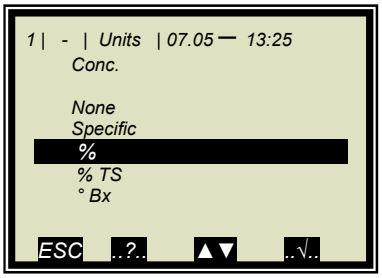

Different units can be set for both concentrations.

➢ %

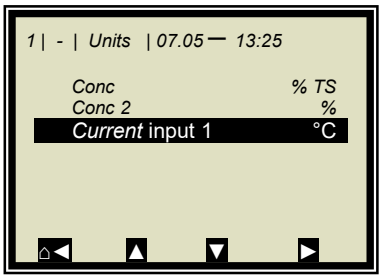

➢ CURRENT IN 1

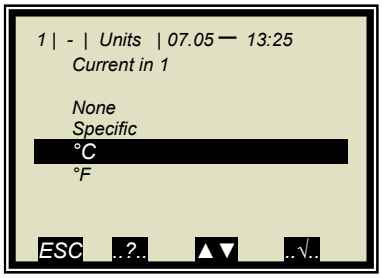

➢ °C

The temperature input can be set to °C, °F, none or specific.

5.1.6 Marker

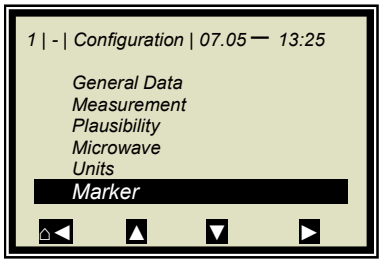

You can set a marker comprising max. 5 characters which identify the value set in the live display.

➢ MARKERS

5.2 Start Calibration Coefficients

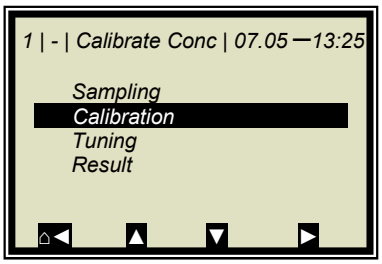

Starting from the main menu, got to the display shown on the left via:
ESC | SETUP | CALIBRATION | CALIBRATE CONC |

- CALIBRATION

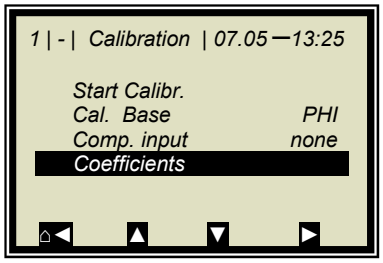

- COEFFICIENTS

For the default setting, the concentration is calculated as follows:

Measured value = A · Phase + C **Eq. 5-1**

where:
A, C: Calibration coefficients

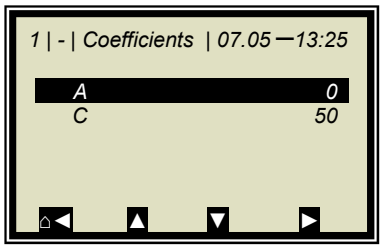

Check the coefficients A and C and correct them, if necessary, as follows:

C = average measuring range value (concentration value)
A = 0

All coefficients that are not needed are automatically set to zero.

Note: With these calibration coefficients the concentration average value and thus the current output is put on hold during start-up.

5.3 Configure Plausibility

Starting from the main menu, got to the display shown on the left via:
| SETUP | CONFIGURATION | PLAUSIBILITY | PHASE MEASURE |

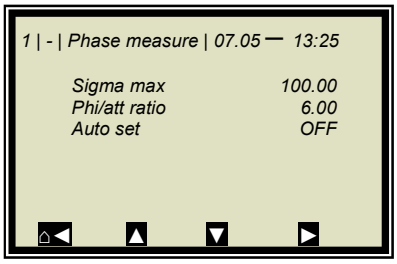

The display on the left shows the default settings, which may have to be entered.

During normal measurement operation, **Sigma** lies between 0 to 100. Therefore, $Sigma_{max}$ = 100 is a good choice for most applications. However, if you constantly get sigma values up to 300 during the measurement, you may increase the limit up to 500. Higher sigma values than that usually indicate a fault, such as continuous air bubbles which have to be eliminated.

The **Phi/att ratio** is known for most applications. Depending on your application, choose from the following table:

Application	Phi/att ratio
Container probe in crystallization	6
Milk of lime measurement	13
Container probe in the juice segment, in pipelines and tanks	-8

If you do not know the Phi/att ratio, you have to determine it once. For this, you need the Auto setting, which otherwise must always be set to OFF.
The exact procedure is described in *chapter 7.1.*

Chapter 6. **Calibration**

Note: The measuring system should have reached normal operating temperature (approx. 45 min. warm-up).

The flow cell must be completely filled with product or the container probe is completely surrounded by product.

Prerequisite: The steps described in chapter 5. Configuration have been completed.

6.1 System Adjust

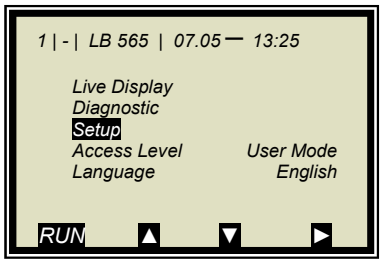

Starting from the main menu:

- SETUP

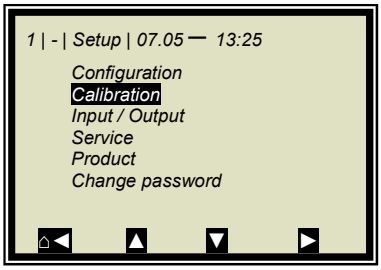

- CALIBRATION

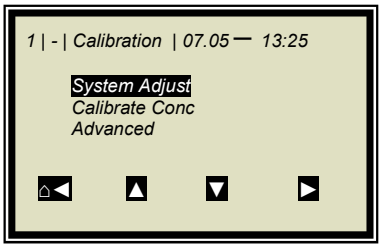

- SYSTEM ADJUST

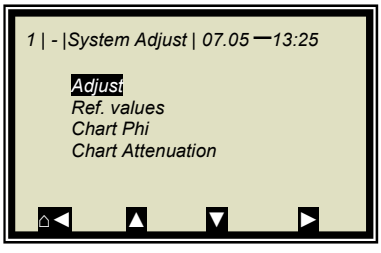

- ADJUST

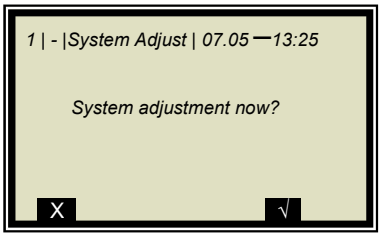

Confirm

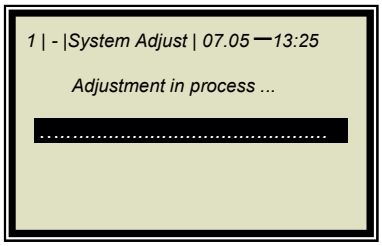

System adjustment is in process.

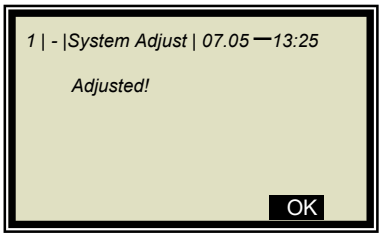

Push **OK** to confirm and push ⌂◀ three times to return to the main menu.

6.2 Start-up of MicroPolar Brix ++

System adjustment and calibration are carried out in just the same way for Micro-Polar ++, as they are for the standard system Micro-Polar Brix. However, please keep in mind that the ++ unit requires a minimum attenuation of 40 dB over the entire concentration range and during system adjustment. When falling below, the measurement is not precise anymore.

The total attenuation is calculated as follows:

$dB_{total} = dB_{adjust} + dB_{live} + 0.4 \times$ signal cable length **Eq. 6-2**

where:

dB_{total}:	Total attenuation
$dB_{adjustment}$:	Attenuation during system calibration
dB_{live}:	Current attenuation in the measurement mode
Signal cable length:	e.g. 4 m HF-cable quad results in 8 m signal cable length (to and from)

The evaluation unit monitors the entire attenuation automatically and reports a falling below by an error message (error no. 55).

Remedy when falling short of the attenuation:

If the required overall attenuation is not reached, you have the option to install a 10 dB fixed attenuator into the transmitting branch (see Fig. 6-1). The standard model MicroPolar Brix should be used if the attenuation is clearly below the required value.

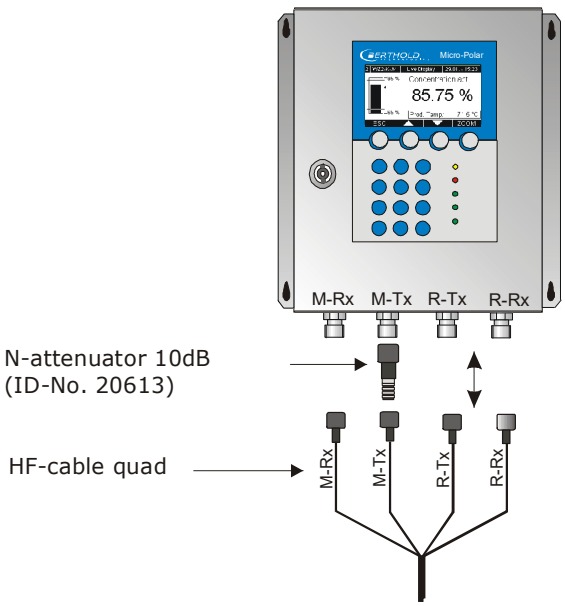

Figure 6-1: Assembly of the 10 dB attenuator

6.3 Sampling

For temperature compensation, the product temperature must be entered via one of the analog inputs and in addition the corresponding input has to be enabled. If not, the product temperature is not stored in the device during sampling.

If the measuring system is not yet in the measurement mode, start the measurement now.

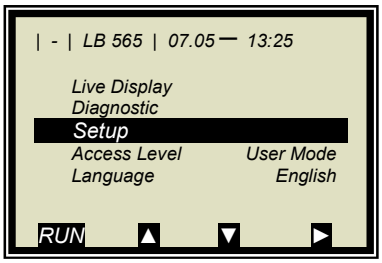

Push *RUN* to start the measuring system.

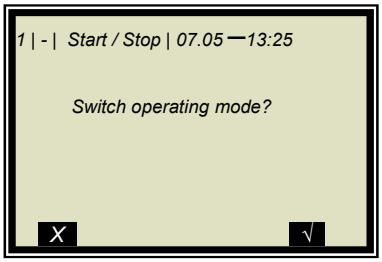

Push √ to confirm the safety prompt and the device switches to the measurement mode.

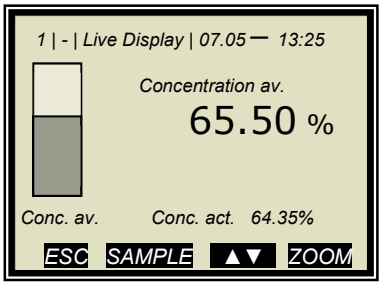

The display to the left appears if you push *RUN*.

Note: Push the *SAMPLE* button to start measurement of the raw data. At the same time, the laboratory sample has to be taken and marked. The analysis may be performed later, provided the product is not changed by this.

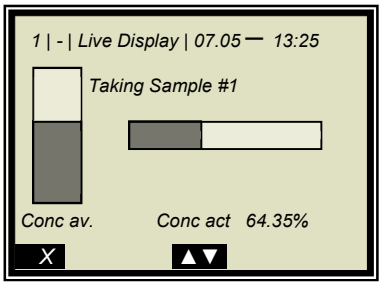

Sampling is in process.....

Push the X button to stop the sampling process any time.

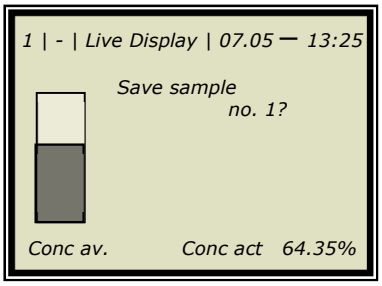

If the sampling process has been completed without any problem, push the √ button to save the sample in the table and the measurement continues.

The process previously described must be repeated for each additional sample.

The moisture/concentration of the samples should be distributed over the entire measuring range. For additional temperature compensation, the temperature of the samples should be distributed over the entire temperature range.

The minimum number of samples required is dependent on the selected calibration modes. If the sample size is too low, an error message is displayed after you have attempted to run a calibration.

About six samples suffice for a rough calculation of the calibration coefficients, provided the concentration differs by at least 5%. At least 15 samples are required for fine calibration and temperature compensation.

6.3.1 Entering the Lab Values

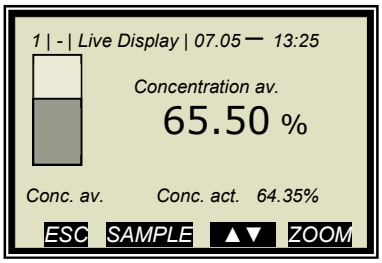

Push ESC to go to the main menu. A measurement can be stopped only in the main menu.

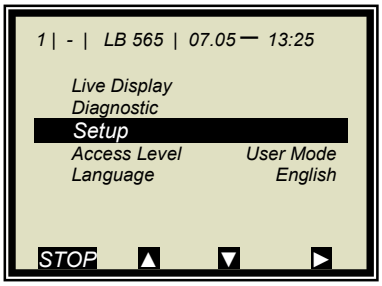

Push *STOP* to stop the measuring system.

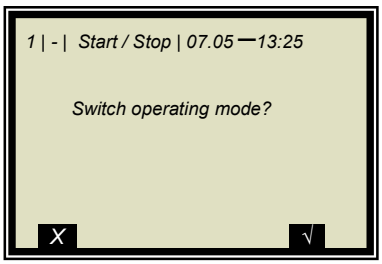

Push √ to confirm the prompt and the measurement switches to the *STOP* mode.

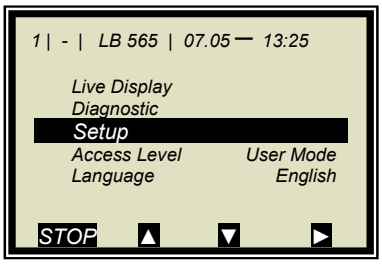

- SETUP

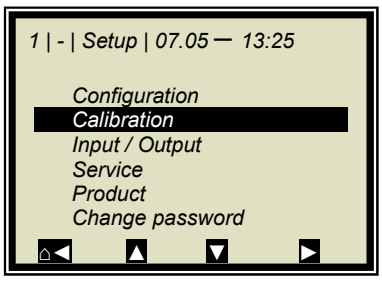

- CALIBRATION

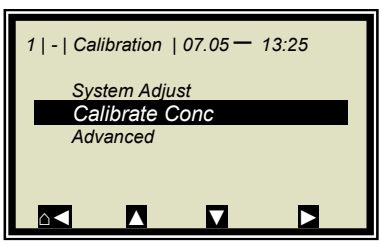

- CALIBRATE CONC

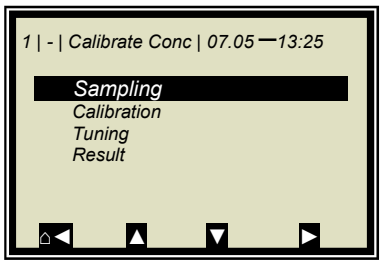

- SAMPLING

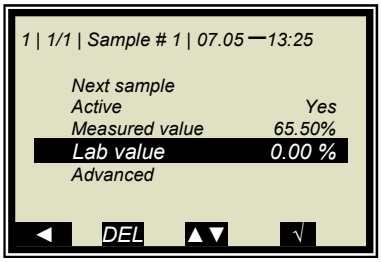

- LAB VALUE

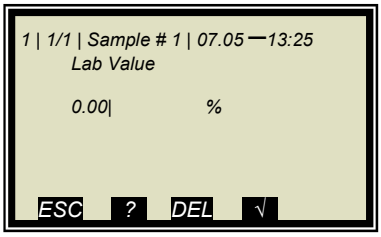

Delete default value with DEL and enter new value and confirm with √.

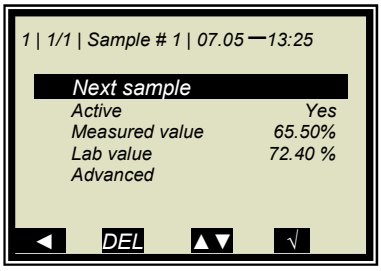

- NEXT SAMPLE

and repeat the step described above with the next sample.

After you have entered the last sample, push the ◀ button to return to the calibration menu. (Short push – one page, longer push of the button – you get back to the Calibration menu immediately)

6.4 Calibration

Proceed as described in *chapter 7.4.*

Chapter 7. **Calibration and Advanced**

7.1 Plausibility | Configuring Phi/Att Ratio

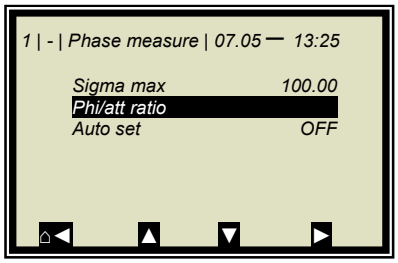

Starting from the main menu, got to the display shown on the left via | SETUP | CONFIGURATION | PLAUSIBILITY | PHASE MEASURE |

Check or correct corresponding to the settings shown on the left.

- PHI/ATT RATIO

If you know the ratio value, enter it here; go to *chapter 7.1.1 Phi/att Ratio*.

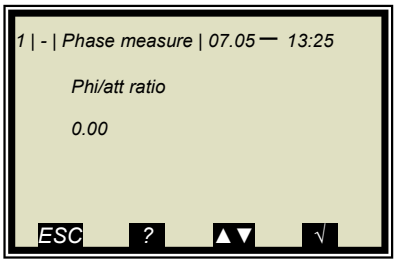

Delete default value with DEL and enter new value and confirm with √.

7.1.1 Phi/att Ratio

If you do not know the ratio value, proceed as follows:

1. Perform a process recording, see *chapter 7.1.2 Process Recording*. A prerequisite is that the process covers the entire concentration range during the recording.
2. If the process recording is currently not possible or if the concentration range is small anyway (< ± 5%), then enter **Phi/att = 1** as start value.

Subsequent adjustment of the process recording is possible.

7.1.2 Process Recording

Prerequisite:
The steps described in chapters
5. Configuration
6.1 System Calibration
have been completed.

The process recording is used to determine the ratio of phase and attenuation (Phi/att), a parameter of the plausibility analysis for correct determination of the phase.

If you already know the ratio from other measurements, you may enter it directly on the PLAUSIBILITY menu (see *chapter 4.2.10 Phase Measurement*); in this case, that process need not be recorded.

IMPORTANT
The measurement takes place automatically; you only have to start and stop it again. During measurement, please keep in mind:
- Do not stop the measurement
- Do not change the concentration erratically (max. 1 %).
- Cover the entire measuring range, if possible

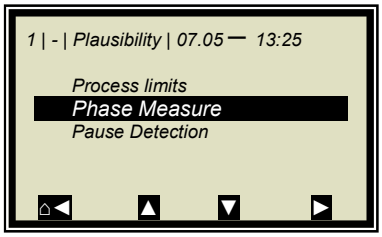

Starting from the main menu, go to the display shown on the left via:
| SETUP | CONFIGURATION | PLAUSIBILITY | PHASE MEASURE |

- PHASE MEASUREMENT

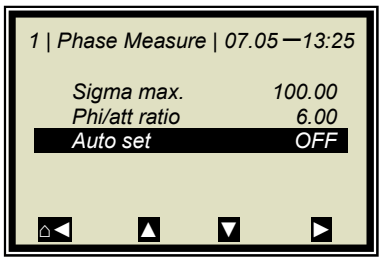

- AUTO SET

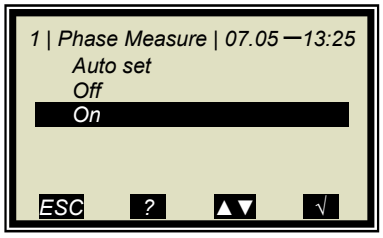

➢ ON

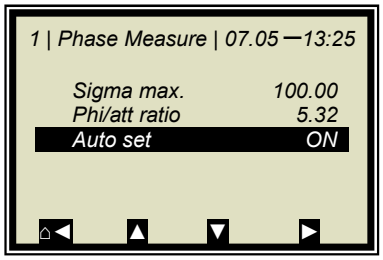

Pause recording:
You have the option to pause recording by turning the recording off. The recording is paused and starts again only after it is turned on again.

Start new recording:
Prerequisite: Recording is turned off. Stop and start the measurement before you start a new recording. The result of older recordings will be deleted.

Stop recording:
After recording, simply turn off the automatic recording; the recorded Phi/att is stored automatically.

Carry out sampling while the process recording is running.

Do not forget to enable the process recording again as described above!

7.2 Adjusting the Calibration

A correction factor and an offset may be entered later to obtain a subsequent adjustment of the calibration (fine tuning).

Below please find an example for an offset adjustment.

The display to the left appears if you push *RUN*.

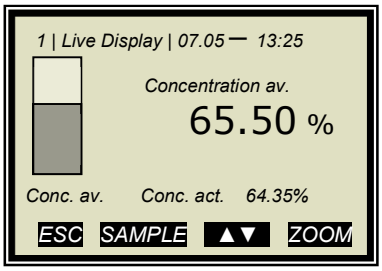

The display reading is now compared with the analysis value of the lab sample. The difference has to be entered as offset with the correct algebraic sign.

Calculation:

Analysis value – Display = Offset **Eq. 7-1**

Push *ESC* to return to the main menu.

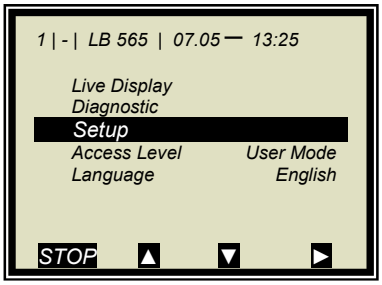

➢ SETUP

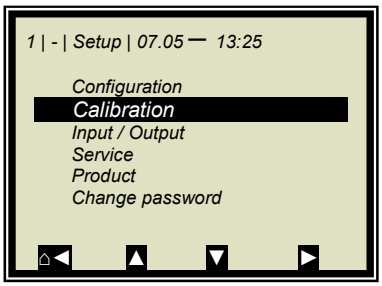

➢ CALIBRATION

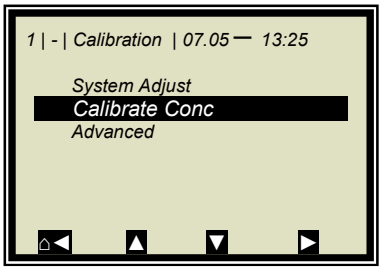

➢ CALIBRATE CONC

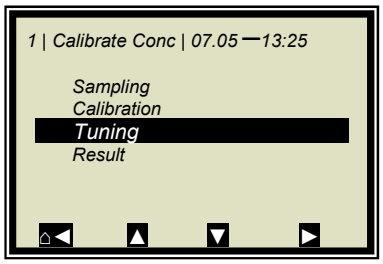

- TUNING

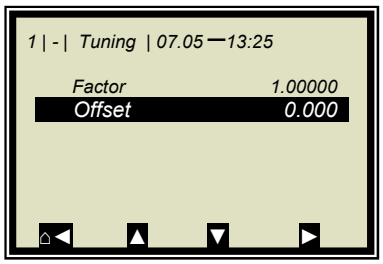

- OFFSET

Calculation formulas see *chapter 4.2.14 Calibrate Concentration*.

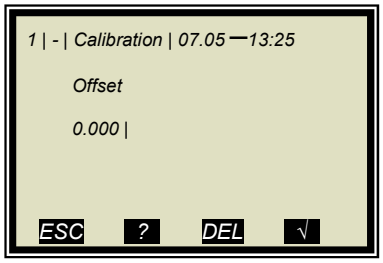

Enter the calculated offset value, confirm with √ button and push the Home button ⌂◀ four times to return to the main menu.

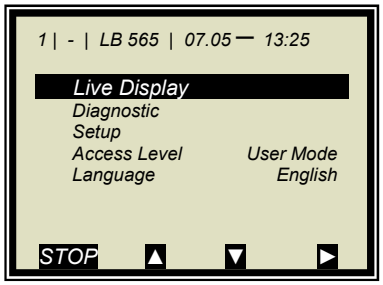

Select

- LIVE DISPLAY

to get back to the display.

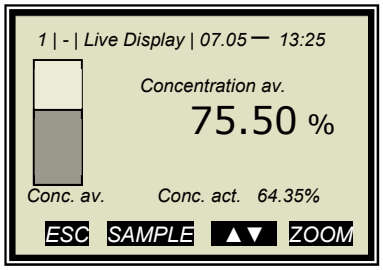

The reading value should now correspond to the actual value.

7.3 Output of the Start-up Protocol

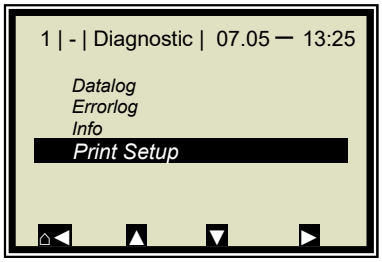

Starting from the main menu, go to the display on the left by selecting | DIAGNOSTIC |

- PRINT SETUP

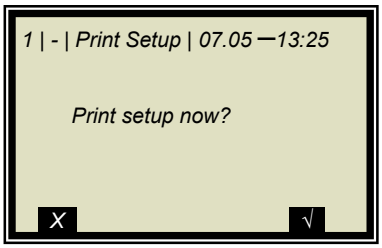

Push √ to print the setup via RS232 and RS485. Push X to go back one page without printout.

The start-up protocol includes all parameters, system adjustment data, calibration data and entries in the sample table.

For further information on the start-up protocol see *chapter 10. Start-up Protocol*

7.4 Calibration

There are several setup options for calibration; for details see *chapter 4.2.18 Calibration.* Furthermore, the default settings are displayed, which, as a rule, are the best choice.

Prerequisite:
The steps described in chapters
5. Configuration
6.2 System Calibration
6.3 Sampling
have been completed.

7.4.1 Calibration with One Concentration

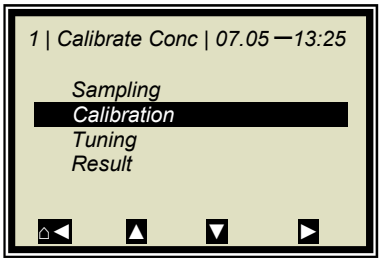

Starting from the main menu, go to the display shown on the left via:
| SETUP | CALIBRATION | CALIBRATE CONC |

- CALIBRATION

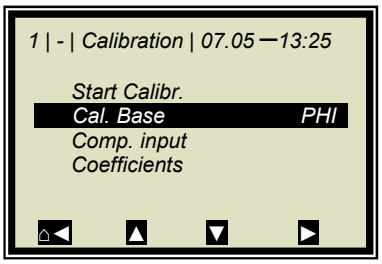

- CAL. BASE

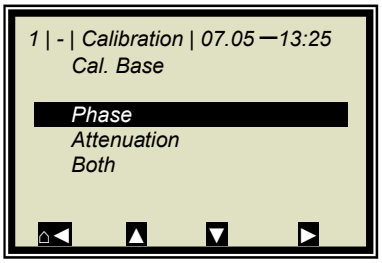

- PHASE (Phase measurement)

Standard for all applications: Phase

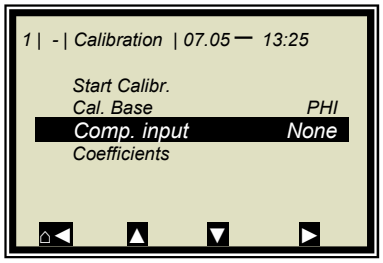

➢ COMPENSATION

Here you can select the analog inputs (PT100, current input 1 and 2) required for compensation. You can select:

- None
- PT100
- PT100 + In1
- PT100 + In1 + In2
- PT100 + In2
- In1
- In1 + In2
- In2

Select "None" if no temperature compensation is required.

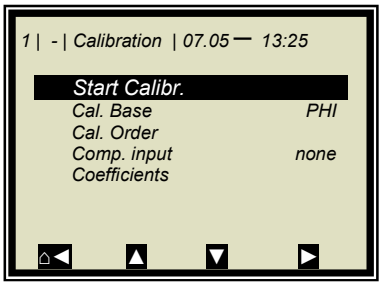

➢ START CALIBRATION

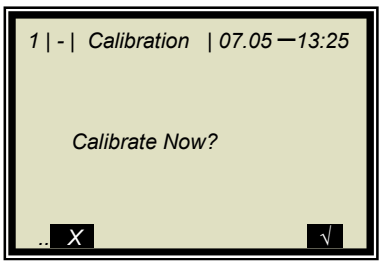

Push √ to start the calibration; push X to go back one page without calibration.

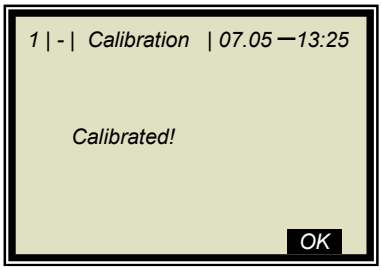

OK takes over the calibration and changes to the next display.

When calculating the new coefficient set, the Factor will be reset to 1 and the Offset to 0.

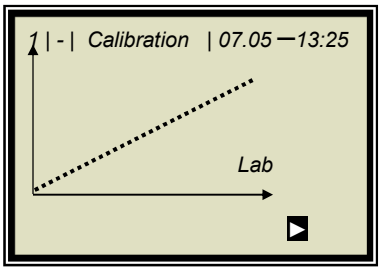

The graph on the left shows the measured value versus the lab value.

▶

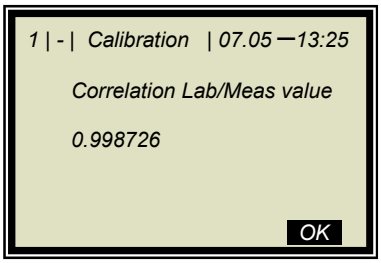

Output of the correlation between measured value and lab value.

OK

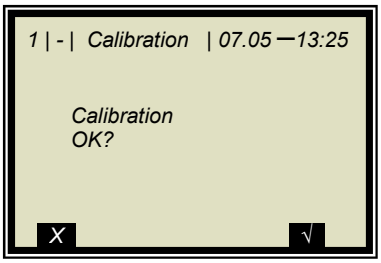

As soon as you confirm this prompt, the calibration display appears again; from there you get back to the main menu by pushing ⌂◀ four times.

7.4.2 Calibration with Two Concentrations

Calibration for two concentrations starts by changing the process type as described below.

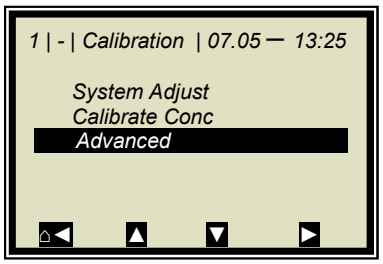

Starting from the main menu, go to the display shown on the left via | SETUP | CALIBRATION |

- ADVANCED

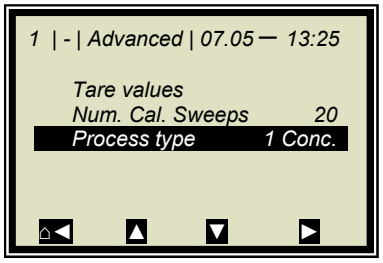

- PROCESS TYPE

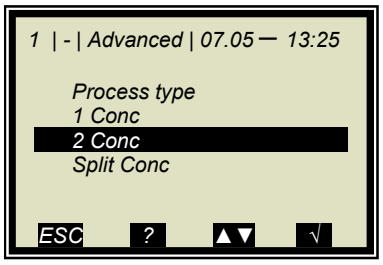

- 2 CONC

Push √ to accept the selected process type and push ⌂◀ once to go to the display depicted below.

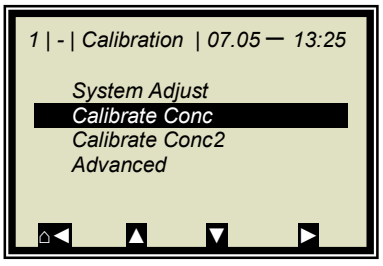

- CALIBRATE CONC (corresponding to concentration 1)

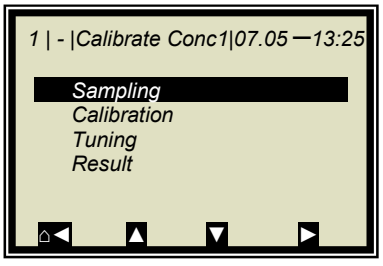

- SAMPLING

There is only one sample table for both calibrations.

The lab values have to be entered for all samples used for calibration of concentration 1. All other samples have to be disabled (Active.... Yes/No).

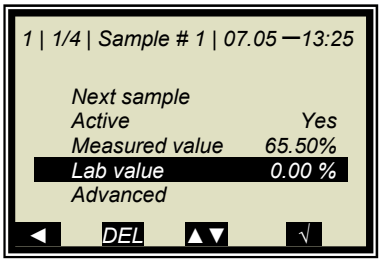

➢ LAB VALUE

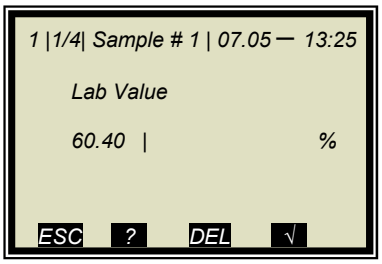

Delete default value with DEL and enter new value and confirm with √.

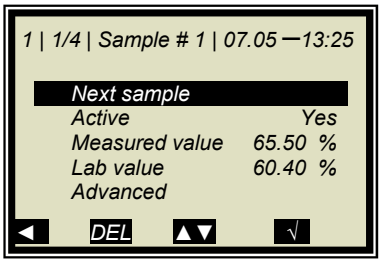

➢ NEXT SAMPLE

Continue with next sample

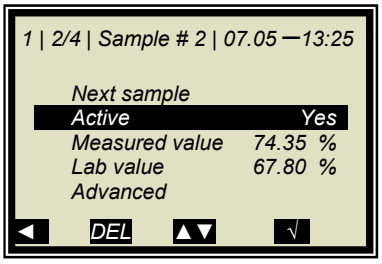

➢ ACTIVE

Disable sample

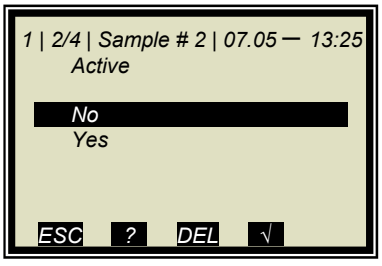

➢ NO

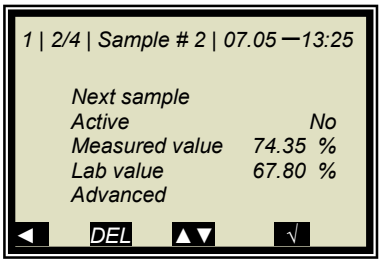

Make sure that all samples have been processed and only those samples are active which are relevant for this calibration.

Push ◀ to go to the Calibration page.

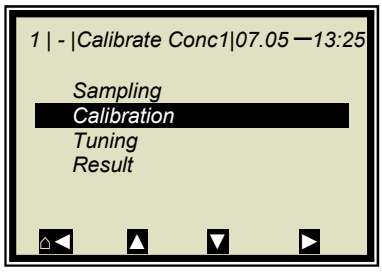

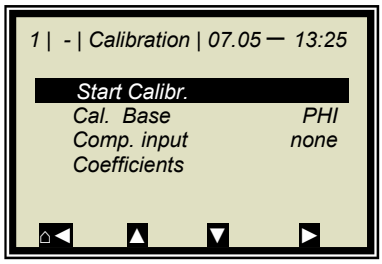

➢ START CALIBRATION

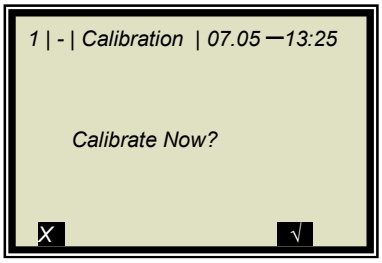

Push √ to start the calibration; push X to go back one page without calibration.

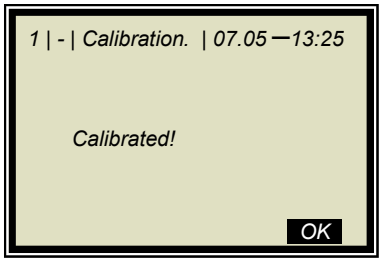

OK takes over the calibration and changes to the next display.

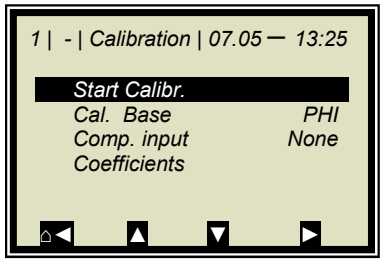

Push ⌂◀ twice to return two pages.

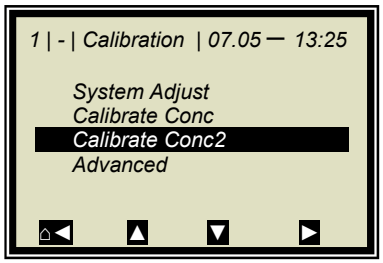

- CALIBRATE CONC 2

Repeat the steps as described above for concentration 2; all samples have to be enabled again in the sample table. Now you have to disable all samples which are not used for concentration 2.

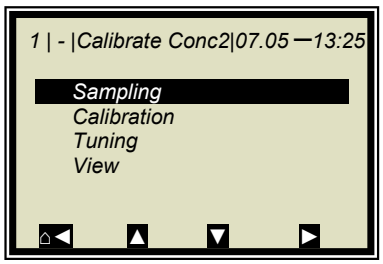

- SAMPLING

7.4.3 Calibration with Split Value

With this type of calibration, two characteristic curves (concentrations) are combined in one measuring range; their point of intersection defines the split value.

Conc 1 for the lower and conc 2 for the upper measuring range can be output only together via current output.

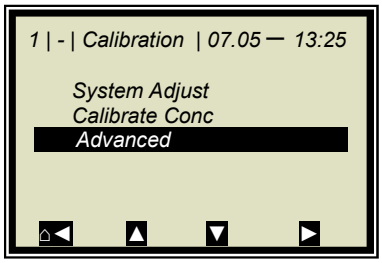

➢ ADVANCED

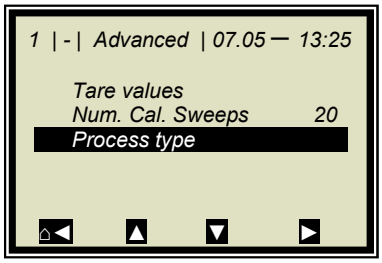

➢ PROCESS TYPE

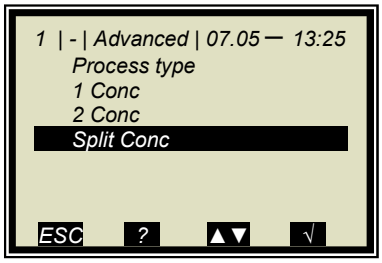

➢ SPLIT CONC

Push the √ button to accept the selected process type and push ⌂◀ once to go to the display depicted below.
The displayed split value has been set by the manufacturer, but has to be adapted to the respective application.

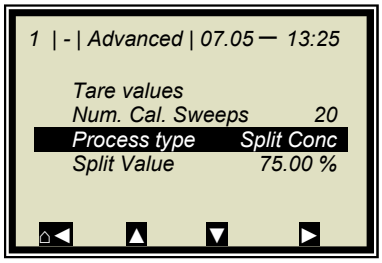

The sample measurement should be selected such that the last sample of the lower concentration is fairly close to the first sample measurement of the upper concentration. Ideally, the last sample of the initial concentration is the first sample of the final concentration.

Sample measurements are carried out continuously over the entire measuring range with the display depicted to the left. See *chapter 6.3.2 Sampling*

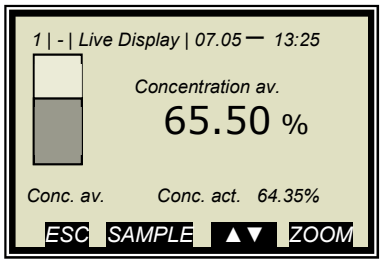

After completion of sampling, the individual samples will be enabled or disabled during input of the laboratory values, relative to the set split values. All samples smaller or equal to the split value will be assigned to the lower concentration range and all samples above to the upper concentration range.

The assignment of the samples is carried out automatically, for example, by setting the split value or by entering the lab values have been entered (e.g. after re-sampling). The assignment depends on the split value and the lab value.

IMPORTANT

The split value entry allows you to enable samples that have been disabled earlier through automatic assignment! In these cases, disabled samples should better be deleted or disabled again after a split value entry!

The split value to be set must correspond to the point of intersection of both calibration curves. This will be corrected automatically after the calibration (within certain limits).

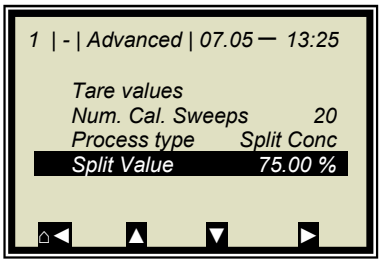

➢ SPLIT VALUE

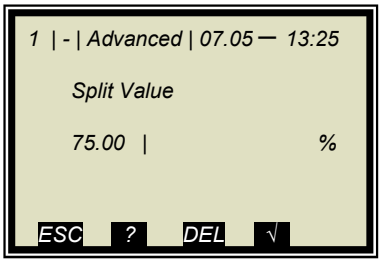

Enter the split value and confirm with √ .

Push ⌂◀ to go to the Calibration page.

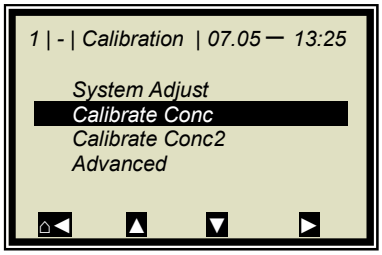

➢ CALIBRATE CONC

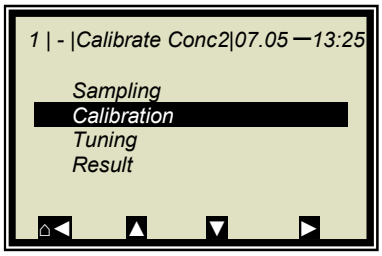

➢ CALIBRATION

The lower concentration is now calibrated. Then select CONC2 and repeat the calibration process.
Go back to the main menu and start the measurement.

7.5 Typical Calibration Coefficients/Start Values

C: Concentration value at system calibration

For applications with container probe and without temperature compensation

A: -0.19 for the determination of the concentration or dry matter content (Brix content)

Chapter 8. **Password**

The measuring system can be protected against unauthorized access by passwords.

The access levels are as follows.

Read only
The measuring system cannot be started and stopped. You can only switch from the live display to Diagnostic and to Access Level.

User mode
The user mode is the default mode and provides access to all user-relevant parameters.

Service
The service level is reserved to service personnel.

You have to enter a password to change from **Read only** to **User Mode**.
At the time of delivery, this password is

PASS1

The password can be changed in the menu | SETUP | CHANGE PASSWORD |.

8.1 Password Forgotten

The device is in the "Read only" mode and the user has forgotten the password. Please proceed as follows to carry out a "Reset" of the user level:
Turn off device.
Turn on device; as soon as all 5 LEDs light up when powering up, press 0 (zero) and keep it depressed for 8 seconds.
Device powers up in the "User Mode". You can now enter a new password.

IMPORTANT
Check your process before turning off the device. The current outputs drop to 0 mA.

Chapter 9. **Error Lists and Device States**

The LEDs indicate the device status. Once the errors have been corrected, the measurement returns to the state before the error occurred. An acknowledgment is not required.

9.1 Power failures

Code	***Error***	***Probable cause / correction***
10	24V power fail	*Please contact the Berthold Technologies Service.*
11	9V power fail	*Please contact the Berthold Technologies Service.*
12	5V power fail	*Please contact the Berthold Technologies Service.*
13	3V power fail	*Please contact the Berthold Technologies Service.*
14	Battery fail	*Battery power is low, replace immediately, see Hardware Manual, chapter 5.4*

9.2 Temperature errors

Code	***Error***	***Probable cause / correction***
20	Attention: Ambient temperature too high!	*Check operating temperature of the evaluation unit, permissible range: -20 to 50° C or 45° C*
21	RF temperature out of range	*Check operating temperature of the evaluation unit, permissible range: -20 to 50° C or 45° C*

9.3 Hardware errors

Code	*Error*	*Probable cause / correction*
30	Program memory corrupted	*Please contact the Berthold Technologies Service.*
31	Data memory corrupted	*Please contact the Berthold Technologies Service.*
32	Parameter memory corrupted	*Compatibility check after software download: A general reset must be carried out.*
33	I2C-bus communication	*Please contact the Berthold Technologies Service.*
34	DAC update failure	*Please contact the Berthold Technologies Service.*
35	LCD contrast	*Please contact the Berthold Technologies Service.*
36	LCD controller	*Please contact the Berthold Technologies Service.*
37	Keypad error	*Please contact the Berthold Technologies Service.*
38	RF communication error	*Please contact the Berthold Technologies Service.*
39	RF hardware failure	*Faulty cable connection between the motherboard and HF unit. Check connector on the motherboard.* *Caution! First, disconnect the evaluation unit from the power supply!*
40	I/O communication error	*Please contact the Berthold Technologies Service.*
41	I/O module error	*Please contact the Berthold Technologies Service.*
42	RF Board startup error	*Please contact the Berthold Technologies Service.*

9.4 Sensor errors

Code	*Error*	*Probable cause / correction*
50	Phase variance too high	*The measured phase exceeds the allowed Sigma limit.*
53	No product	*The evaluation unit is in the Offline state (no product present).*
54	No system adjustment available	The system calibration has not yet been carried out.
55	Insertion loss underrun	See Software Manual, chapter 8

9.5 Analog input range errors

Code	*Error*	*Probable cause / correction*
60	Current input 1 out of range	The enabled current input has not yet been calibrated or is not occupied.
61	Current input 2 out of range	The enabled current input has not yet been calibrated or is not occupied.
62	Pt100 temperature out of range	The enabled PT100 input has not yet been calibrated or is not yet occupied.

9.6 Measurement range errors

Code	*Error*	*Probable cause / correction*
70	Concentration out of range	The concentration is outside the process limits.
71	Concentration 2 out of range	Concentration 2 is outside the process limits.
72	Loading value 1 below the limit	Below the minimum load for concentration 1
73	Loading value 2 below the limit	Below the minimum load for concentration 1
74	Loading comp. disabled. Cur. Input upper & lower value invalid	Current input is outside the range.
75	Sync. time too long	*Review settings for synchronization, see chapter 7.3 in Hardware Manual.*
76	Synchronization: speed out of range	*Review settings for synchronization, see chapter 7.3 in Hardware Manual.*
77	Waiting for sync. value	*The measurement has not yet been synchronized, please wait.*

9.7 Auxiliary measurement errors

Code	*Error*	*Probable cause / correction*
78	Mass flow 1 calc. disabled. Product speed invalid	*Please contact the Berthold Technologies Service.*
79	Mass flow 1 calc. disabled. Density invalid	*Please contact the Berthold Technologies Service.*
80	Mass flow 2 calc. disabled. Product speed invalid	*Please contact the Berthold Technologies Service.*
81	Mass flow 2 calc. disabled. Density invalid	*Please contact the Berthold Technologies Service.*

9.8 Analog output range errors

Code	*Error*	*Probable cause / correction*
90	Current output 1 out of range	The concentration calculated on the basis of the current is outside the current range
91	Current output 2 out of range	The concentration calculated on the basis of the current is outside the current range

9.9 Watchdog error

Code	*Error*	*Probable cause / correction*
92	*Watchdog*	*Please contact the Berthold Technologies Service.*

9.10 System errors

Code	*Error*	*Probable cause / correction*
120	*No time / date setting*	*Please enter the date and the time.*

9.11 Density errors

Code	*Error*	*Probable cause / correction*
150	Density calc.: Radiometric MPUA out of range	*Check the measured value of the radiometric MPUA*
151	Density calc.: Height signal out of range	*Check the measured value of the layer thickness sensor*

9.12 Input Error

Error	***Probable Cause***
Value too large	*Input value is too large*
Value too small	*Input value is too small*
Table is empty	*Sampling has been selected without previous sample measurement*
Chart data faulty	*The measuring system has determined faulty chart data during calibration.*
No chart data available	*The calculated chart data have been deleted or calibration has not been completed.*
Sampling full	*You have tried to measure more than 30 samples.*

9.13 Device States

Error state:
This state occurs also in error codes 50 to 56, 60 to 62 and 70 to 71 (see table above). The evaluation units behave as follows:

LEDs:	RUN flashes, ERROR on, signal 1 and 2 depending on the configuration.
Current outputs:	Error current
Display:	Error message with error code

Warning state:
This state occurs also in error codes 14, 21, 90 and 91 (see table above). The evaluation units behave as follows:

LEDs:	RUN flashes, ERROR off, signal 1 and 2 no connection.
Current outputs:	live
Display:	Error message with error code

Hold state:
Measurement stopped via digital input. The evaluation units behave as follows:
The averaged concentration value is frozen. The measurement continues, however, so that a measurement error can cause the fault condition also from the hold state.

LEDs:	RUN flashes, ERROR off, signal 1 and 2 depending on the configuration.
Current outputs:	frozen
Display:	No display message

Pause state:
The evaluation unit is in the pause mode, no product is present. The evaluation units behave as follows:

LEDs:	RUN flashes, ERROR off, signal 1 and 2 depending on the configuration.
Current outputs:	lower current output value 0/4 mA
Display:	Error message with code no. 053 specification

Chapter 10. **Start-up Protocol**

The log can be output via RS232 and RS485. The printout takes place on the menu | DIAGNOSTIC | PRINT SETUP |.

The serial interfaces RS232 and RS485 have the following port settings:
Data transfer rate 38400 Bd, 8 data bits, no parity, 1 stop bit

The log is saved to a TXT file using a terminal program. To view the log (e.g. in Excel®), the following data format must be considered.

Separator: Tabulator
Decimal separator: .
Thousand separator ,

The following code list helps you to interpret the start-up protocol, see example in *chapter 10.1*.

Parameter	***Code no.***	***Information***
Log type		*Log type:*
	0	*Disabled*
	1	*Single*
	2	*Continuous*
	3	*Stop on error*
Log time		*Log time:*
	0	*15 mins*
	1	*1 hour*
	2	*4 hours*
	3	*8 hours*
	4	*1 day*
	5	*3 days*
Measuring mode		*Meas. Mode:*
	0	*Continuous*
	1	*Batch*
Start mode		*Start mode (Start/Stop):*
	0	*Keyboard*
	1	*Extern*

Parameter	***Code no.***	***Information***
Calibration input selection	*0* *1* *2* *3* *4* *5* *6* *7*	*Exp. cal. input selection:* *None* *Input 1* *Input 1 + Input 2* *Input 1 + PT100* *Input 1 + Input 2 + PT100* *Input 2* *Input 2 + PT100* *PT100*
Calibration variable	*0* *1* *2*	*Calibration base:* *Phase* *Attenuation* *Phase and attenuation*
Measure configuration	*0* *1* *2*	*Process type:* *1 concentration* *2 concentrations* *Split concentration*
AO Assign Code	*0* *1* *2* *3* *4* *5*	*Assignment of current output:* *None* *Concentration* *Concentration 2* *Current In 1* *Current In 2* *PT100*
AO Alarm select code	*0* *1* *2* *3*	*Error current for current output:* *22 mA* *3.5 mA* *Hold* *Value*
Range selection	*0* *1*	*Measuring range for current output:* *0 ... 20 mA* *4 ... 20 mA*
Compensation input	*0* *1* *2* *3*	*Compensation input:* *None* *Current In 1* *Current In 2* *PT100*
AI Range selection	*0* *1*	*Measuring range for current input:* *0 ... 20 mA* *4 ... 20 mA*

Parameter	*Code no.*	*Information*
AI Enabled[2]		*State current in 2*
DO Function		*Function of digital outputs:*
	0	*None*
	1	*Error*
	2	*Hold*
	3	*No product*
	4	*Alarm min.*
	5	*Alarm max.*
DO Assign-ment		*Digital output: the min./max. alarm is assigned to the following:*
	0	*Concentration*
	1	*Concentration 2*
	2	*Current In 1*
	3	*Current In 2*
	4	*PT100*
DI Function selection		*Function of digital inputs:*
	0	*None*
	1	*Start/Stop*
	2	*Hold*
	3	*Sampling*
	4	*Product selection*
Printout mode		*Form of data printout:*
	0	*None*
	1	*Line*
	2	*Table*
	3	*Line + Table*
Access level		*Access level:*
	0	*Read only*
	1	*User mode*
	2	*Service*
Language		*Language selection*
	0	*English*
	1	*German*
	2	*French*

10.1 Example of Start-up Protocol

Menu:	Start of Setup:	Start-up Protocol				Interpretation: (* Only relevant for service)
Product	Entry	Product1	Product2	Prod.3	Prod.4	
Data log	Log type :	0				Log type: see code list
	Log time:	2				Log time: see code list
	Number of errors :	0				Number of entries in the error log
	NTC temperature :	45.3 °C				*
	max. NTC temperature :	46.7 °C				*
	9V power supply :	8.94 V				*
Info	Tag :	-				Tag
	Device type :	LB 565				Device type
	Unique device ID number :	761				
	Serial number :	4294967000				
	Final assembly number :	000-000				
	Software version :	2.00				
	Software release date :	15.01.2016				Software revision date
	Actual date :	25.02.2016				Date of logging
	Actual time :	15:01				Time of logging
Measurement	Measuring mode :	0				Measuring mode: see code list
	Start mode :	0				Start mode: see code list
	Filter damping value[2] :	20				Averaging
	Filter damping value[3] :	20				Averaging at sampling
	Reset average :	FALSE				Reset Averaging: Yes/No
Plausibility	Lower limit :	50				Min. process limit:
	Upper limit :	100				Max. process limit
	Raw data average value :	1				*
	Max. phase sigma :	100				Sigma max.
	Correlation Phi/Att :	6				Ratio phase/attenuation
	Auto-set mode :	FALSE				Auto set On/Off
	Pause detection :	FALSE				Pause Detection: On/Off
	Minimum attenuation :	-15 dB				Limit for the pause
Microwave	Ref. cable length :	8.00 m				Reference cable length
	Meas. cable length :	8.00 m				Signal cable length
	Wave band selection :	1				*
	Start frequency :	2				*
	Frequency step :	1				*
	Nbr of freq. points :	5				*
Marker	Marker name :	Mark1				Marker name for concentration
	Marker value :	75.00 %				Marker value for concentration
	Marker name[2] :	Mark2				Marker name for concentration 2
	Marker value[2] :	75.00 %				Marker value for concentration 2
System adjust	Nbr of sweeps for reference :	1				*
EVU type	HF amplifier mode :	0				*
	Minimal insertion loss :	40.00 dB				*

Calibrate Conc	Calibration input selection :	0	Exp. Cal. input selection: see code list
	Calibration variable :	0	Calibration basis: see code list
	Phase coefficients :	-0.19	Phase coefficient A
	Attenuation coefficients :	0	Attenuation Coefficient B
	Constant coefficient :	75	Constant C
	d coefficient	0	Comp-coefficient for PT100 input
	e coefficient	0	Comp-coefficient for current input 1
	f coefficient	0	Comp-coefficient for current input 2
	Adjust factor :	1	Factor
	Adjust offset :	0	Offset
Plausibility for concen-tration 2	Lower limit :	50.00 %	Min. process limit:
	Upper limit :	100.00 %	Max. process limit
Calibrate Conc 2	Calibration input selection :	0	Exp. Cal. input selection: see code list
	Calibration variable :	0	Calibration basis: see code list
	Phase coefficients :	-0.19	Phase coefficient A
	Attenuation coefficients :	0	Attenuation Coefficient B
	Constant coefficient :	75	Constant C
	d coefficient	0	Comp-coefficient for PT100 input
	e coefficient	0	Comp-coefficient for current input 1
	f coefficient	0	Comp-coefficient for current input 2
	Adjust factor :	1	Factor
	Adjust offset :	0	Offset
Advanced	Tare Phase (°/GHz) :	0.00 °/GHz	
	Tare Attenuation (dB) :	0.00 dB	
	Measure configuration :	0	Process type: see code list
	Range split value :	75	Split value
Current output 1	AO Assign code :	0	Assignment: see code list
	AO Upper range value :	95	Upper value
	AO Lower range value :	60	Lower limit
	AO Alarm select code :	2	Error current: see code list
	AO Error current value :	22.00 mA	Error current value
Current output 2	AO Assign code[2] :	0	Assignment: see code list
	AO Upper range value[2] :	95	Upper value
	AO Lower range value[2] :	60	Lower limit
	Range selection[2] :	1	Range
	AO Alarm select code[2] :	2	Error current: see code list
	AO Error current value[2] :	22.00 mA	Error current value

Current input 1	AI Enabled :	0	Disabled: 0 Enabled: 1
	AI Range selection :	0	Range: see code list
	AI Upper range value :	100	Upper value
	AI Lower range value :	0	Lower limit
	Analog input filter constant :	1	*
Current input 2	AI Enabled[2] :	0	Disabled: 0 Enabled: 1
	AI Range selection[2] :	0	Range: see code list
	AI Upper range value[2] :	100	Upper value
	AI Lower range value[2] :	0	Lower limit
	Analog input filter constant[2] :	1	*
PT100 input	AI Enabled[3] :	0	Disabled: 0 Enabled: 1
Relay 1	DO Function :	1	Function: see code list
	DO Assignment :	0	Assignment: see code list
	DO Threshold :	0.00%	*
	DO Hysteresis :	5.00%	*
Relay 2	DO Function[2] :	2	Function: see code list
	DO Assignment[2] :	0	Assignment: see code list
	DO Threshold[2] :	0.00%	*
	DO Hysteresis[2] :	5.00%	*
Digital Input	DI Function selection :	0	Function digital input 1: see code list
	DI Function selection[2] :	0	Function digital input 2: see code list
	DI Function selection[3] :	0	Function digital input 3: see code list
	Printout mode :	1	Data output: see code list
	Access level :	2	Access level: see code list
	Language :	1	Language: see code list
	End of Setup		End

Start of Reference Data

System adjustment data:

Product 1:

Mean Atten.:	46.8509 dB
Phase at fm:	42.6285 deg/GHz
Phase slope:	380,984 deg/GHz
Phase sigma:	0.24575

Frequency[GHz]	Phase[Deg]	Transformed Phase[Deg]	Atten.[dB]
2.42	35.64	35.64	21.98
2.43	361.81	361.81	21.95
2.44	689.04	689.04	22.07
2.45	1014.44	1014.44	22.36
2.46	1339.01	1339.01	22.37

Start of Sample Data:

Sampling:

Product 1: Sample Data for Concentration 1:

Sample:	Active:	Con.(%):	Lab.(%):	AIN1:	AIN2:	Temp. (°C):	Phi. (°/GHz):	Att.(dB):
1|17.08 - 12:37	TRUE	85	40	0	0	0	-0.35	0.02
2|17.08 - 12:37	TRUE	80	35	0	0	0	30.33	5.08
3|17.08 - 12:45	TRUE	70	25	0	0	0	59.02	18.98

Correlation factor between lab and meas values: 1

End of Sample Data

Do not use following data!

10.2 Sampling

No.	Active	Measured value	Lab value	Current in 1	Current In 2	PT100	Phi (m)	Attenuation	
1									
2									
3									
4									
5									
6									
7									
8									
9									
10									
11									
12									
13									
14									
15									
16									
17									
18									
19									
20									

Notes

Notes